


REMOTE ENGINE START

Start your vehicle's engine and adjust the interior temperature using the two-way keyless access remote before you enter the vehicle. *Available with Advance Package.**

Two-Way Keyless System Remote

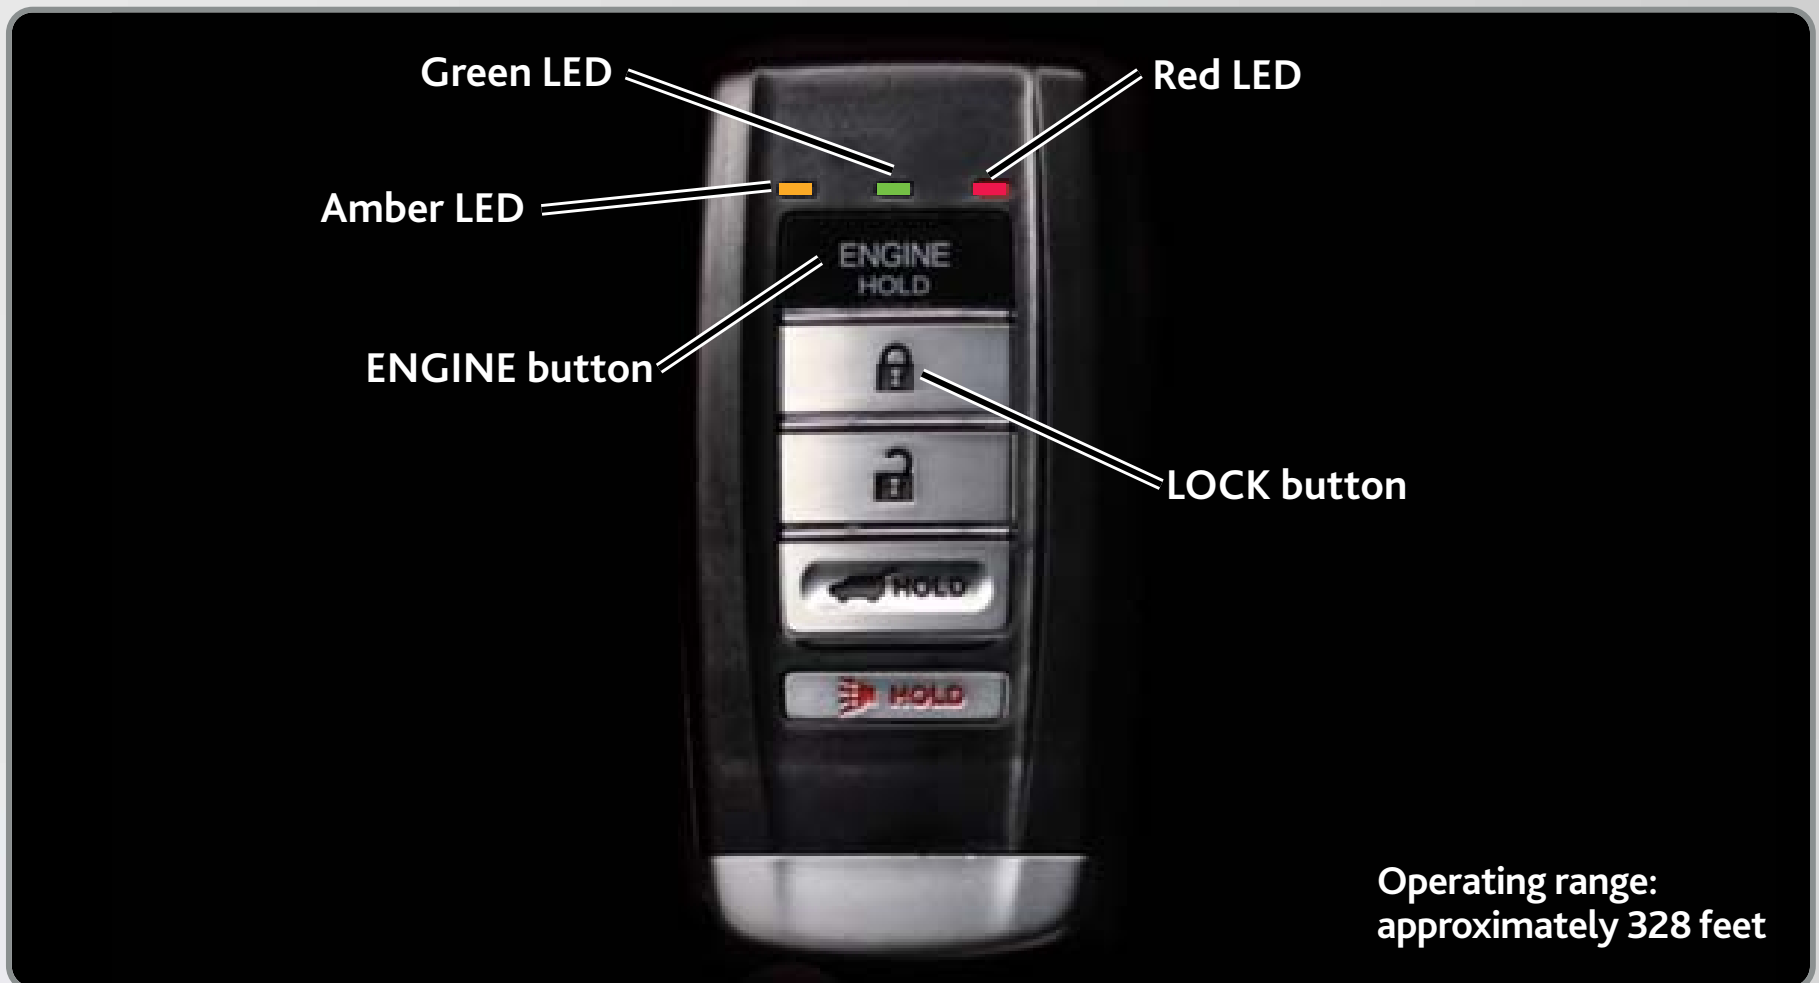

Starting the Engine

Press LOCK, then press and hold ENGINE. The amber LED blinks, and the green LED stays solid for one second when the engine starts. You can repeat this once at any time within 10 minutes of the initial remote start for a 10-minute extension.

While remote engine start is on:

- The climate control system can warm or cool the interior, depending on the ambient temperature.
- The security system remains on.
- Exterior lights and accessories remain off.

To start driving after you enter the vehicle, depress the brake pedal and press ENGINE START/STOP.

Only use remote engine start when the vehicle is outdoors or in a well-ventilated area.

If the red LED is blinking, the remote cannot communicate with the vehicle or it is out of range.

Stopping the Engine

Press and hold ENGINE. The red LED stays solid for one second.

The engine will stop if it has been running for more than 10 minutes or any door is opened without using the remote or keyless access. See your Owner's Manual for more conditions and information.

**Also available as an accessory. See your authorized Acura dealer.*