

BLUETOOTH® HANDSFREELINK®

Make and receive phone calls through your vehicle's audio system. Visit www.acura.com/handsfreelink to check if your phone is compatible.

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.

Using HFL

Pick-Up button: Answer an incoming call or go directly to the Phone screen.

Hang-Up button: End a call or decline an incoming call.

Talk button: Make a call using a stored voice tag.

Back button: Press to cancel an operation or return to the previous screen.




Use these three buttons to navigate through the HFL menus.

PHONE button:

Go directly to the Phone screen.

Back button:

Press to cancel an operation or return to the previous screen.

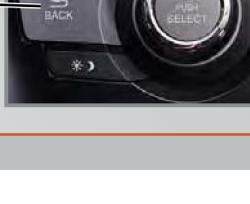

Audio selector knob:

Rotate to scroll through selections and press to make a selection.

Pairing Your Phone

Use this pairing method if no phone has ever been paired to the system. You can pair your phone only when the vehicle is stopped.

Use the audio selector knob to make and enter selections.

1. Press the Pick-Up button to go to the Phone screen. A prompt appears. Select Yes.



 
3. HFL searches for your phone. Select it when it appears on the list.



If your phone does not appear:

Select Phone Not Found, and search for HandsFreeLink from your phone. Connect to HFL.

2. Make sure your phone is in discovery mode. Select OK.



4. HFL gives you a four-digit code. Enter it on your phone when prompted. The phone is now paired.



Pairing Your Phone (When Already Paired)

Use this pairing method when a phone has already been paired to the system, or when you want to pair an additional phone.

Use the audio selector knob to make and enter selections.

1. Press the Pick-Up button to go to the Phone screen.



If a prompt appears asking to connect to a phone, select No.

 
2. Select Phone Setup.




3. Select Connection.



4. Select Add a New Phone.



 5. Select an empty location for the phone.



6. Make sure your phone is in discovery mode, and select OK.



 
7. HFL searches for your phone. Select your phone when it appears on the list.



If your phone does not appear:

Select Phone Not Found and search for HandsFreeLink from your phone. Connect to HFL.

8. HFL gives you a four-digit code. Enter it on your phone when prompted. The phone is now paired.




Dialing a Number

Enter a 10-digit phone number to call. This feature is inoperable when the vehicle is moving.

Use the audio selector knob to make and enter selections.

 
1. Press the Pick-Up button to go to the Phone screen.



2. Select Dial.



 3. Enter the phone number. Select the green Dial icon or press the Pick-Up button to call.




4. The call is connected and heard through the vehicle speakers.



Receiving a Call

When you receive an incoming call, you hear a notification and see the following pop-up message:

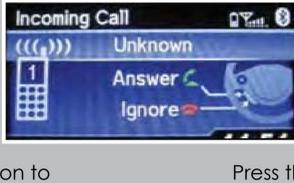

Press the Pick-Up button to accept the call.



Press the Hang-Up button to end or decline the call.



Using the Phonebook

When your phone is paired, its entire phonebook is automatically imported to the system. This feature is inoperable when the vehicle is moving.

Use the audio selector knob to make and enter selections.

 
1. Press the Pick-Up button to go to the Phone screen.



2. Select Phonebook.



3. Scroll through the list to find the name and number you want to call, and select it.




4. The call is connected and heard through the vehicle speakers.




Using Speed Dial

When a speed dial entry is stored with a voice tag, you can make a call using voice commands at any time. See your Owner's Manual for more information.

 1. Press the Talk button. The system asks which name you want to call.



 2. Say the stored voice tag name.



3. The call is connected and heard through the vehicle speakers.



Driver Distraction

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. You may have to use voice commands, stop or pull over to perform the function.

The chart below shows a list of some operations that are restricted while the vehicle is moving.

Function	Restriction Level While Driving
HFL System (Without Navigation)	
10-key dial	Restricted
Phonebook	Restricted
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Not restricted
Redial	Not restricted
Connect to a new phone	Restricted
Connect to a previously paired phone	Not restricted
Manual dial tones	Restricted
Read text	Restricted
Reply to text	Not restricted
HFL System (With Navigation)	
10-key dial	Voice command only
Phonebook	Voice command only. Limited to three screens
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Voice command only. Limited to three screens
Redial	Not restricted
Connect to new phone	Restricted