

# KEYLESS ACCESS SYSTEM

Operate certain functions of your vehicle by simply having the remote transmitter within operating range.

## Unlocking the Doors



Grab either one of the front door handles when the vehicle is off.



## Locking the Doors



Press the door lock button on either front door handle when the vehicle is off.



## Opening the Tailgate



Press the tailgate release button under the tailgate handle when all doors are unlocked. The vehicle can be on or off.



## Engine Start/Stop Button

### Accessory or On Mode

Operate audio or other electrical features without turning the engine on.



Press ENGINE START/STOP once without pressing the brake pedal to turn on Accessory mode. Press it again for On mode.



### Starting the Engine



Press and hold the brake pedal, then press ENGINE START/STOP.



### Turning the Vehicle Off



Shift to Park, then press ENGINE START/STOP.



**Note:** If you press ENGINE START/STOP when the vehicle is stopped and the shift lever is not in Park, the vehicle goes into Accessory mode.