








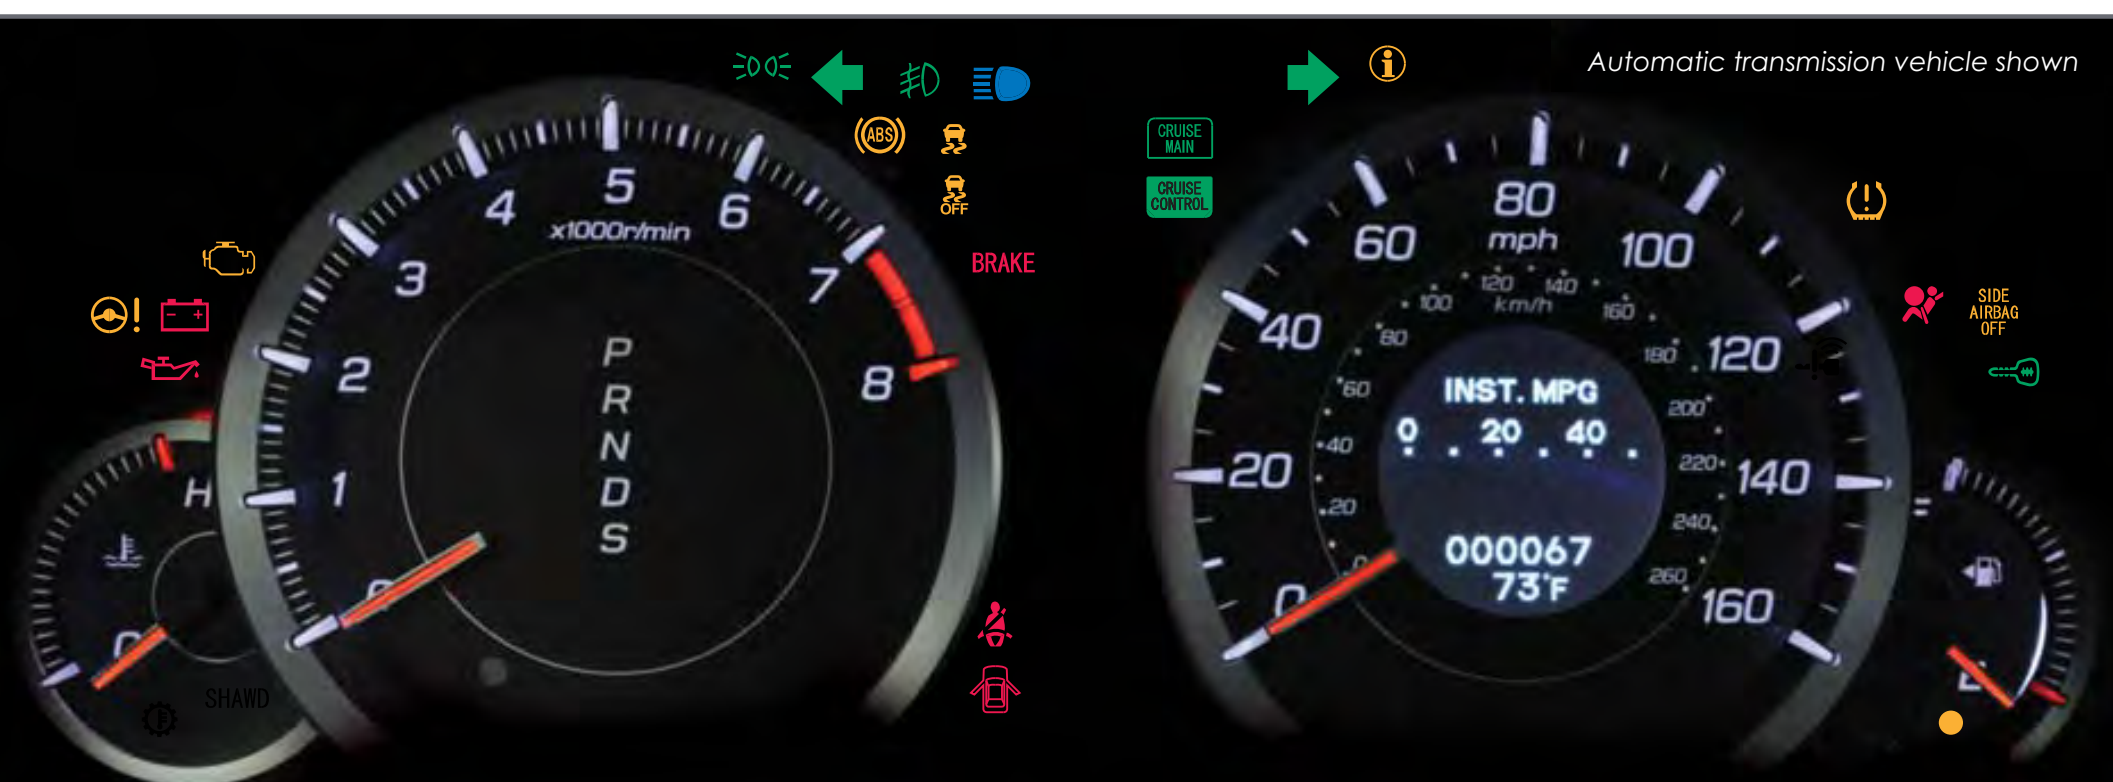


INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.







Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer.










- | | |
|---|--|
|  Charging system |  Malfunction indicator lamp (check engine light) |
|  Low brake fluid, Brake system |  Vehicle Stability Assist® (VSA) |
|  Low oil pressure |  Tire Pressure Monitoring System (TPMS) (<i>blinks and stays on</i>) |
|  Supplemental Restraint System (SRS) |  Electric Power Steering (EPS) |
|  Anti-lock Brake System (ABS) | |

Condition Indicators

Action is needed by driver.

- | | |
|---|---|
|  Parking brake on:
Release |  Low fuel:
Refill |
|  Seat belt reminder:
Fasten seat belt(s) |  Low tire pressure (<i>stays on</i>):
Add air |
|  Door/trunk open:
Close door or trunk |  Immobilizer (<i>blinks</i>):
Use other vehicle key and see your dealer |
|  Message indicator:
See MID | |

On/Off Indicators

- | | |
|--|---|
|  PASSENGER AIRBAG OFF
(above audio panel) |  Exterior lights on |
|  SIDE AIRBAG OFF |  Turn signals/hazards on |
|  VSA OFF |  Fog lights on |
|  CRUISE MAIN on |  High beams on |
|  CRUISE CONTROL on | |