


# FUEL FILL DOOR

Easy-to-use locking fuel door keeps your fuel cap covered.

## Opening the Fuel Fill Door

When you unlock the driver's door with the master door lock switch or the remote transmitter, the fuel door unlocks.

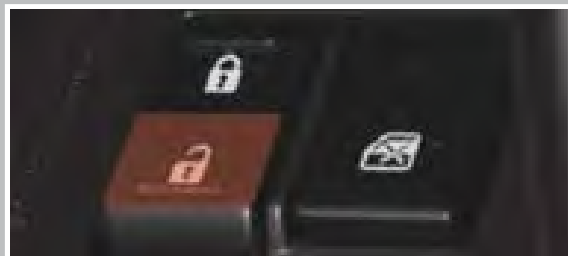

To open, push and release the fuel door in the area shown until it pops open.



## Closing the Fuel Fill Door

Push the fuel door until it is flush to the body.



When you lock the driver's door, the fuel door locks.

