

MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.


Accessing the MID

When you start the engine, the MID shows the last active display from the previous drive cycle.




To toggle between the different displays:


- Press either Info button (▲/▼) for the main displays.
- Press SEL/RESET for the lower displays.

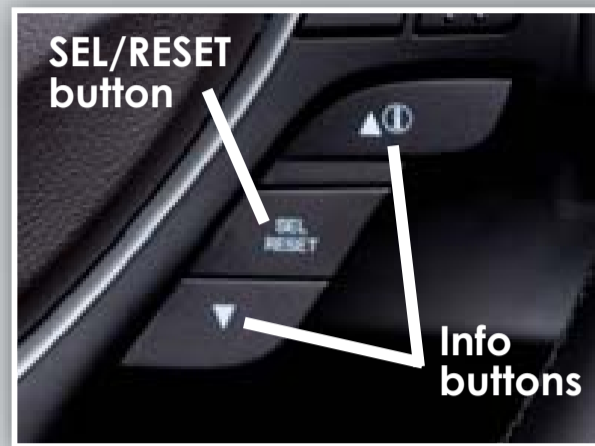

Main Displays

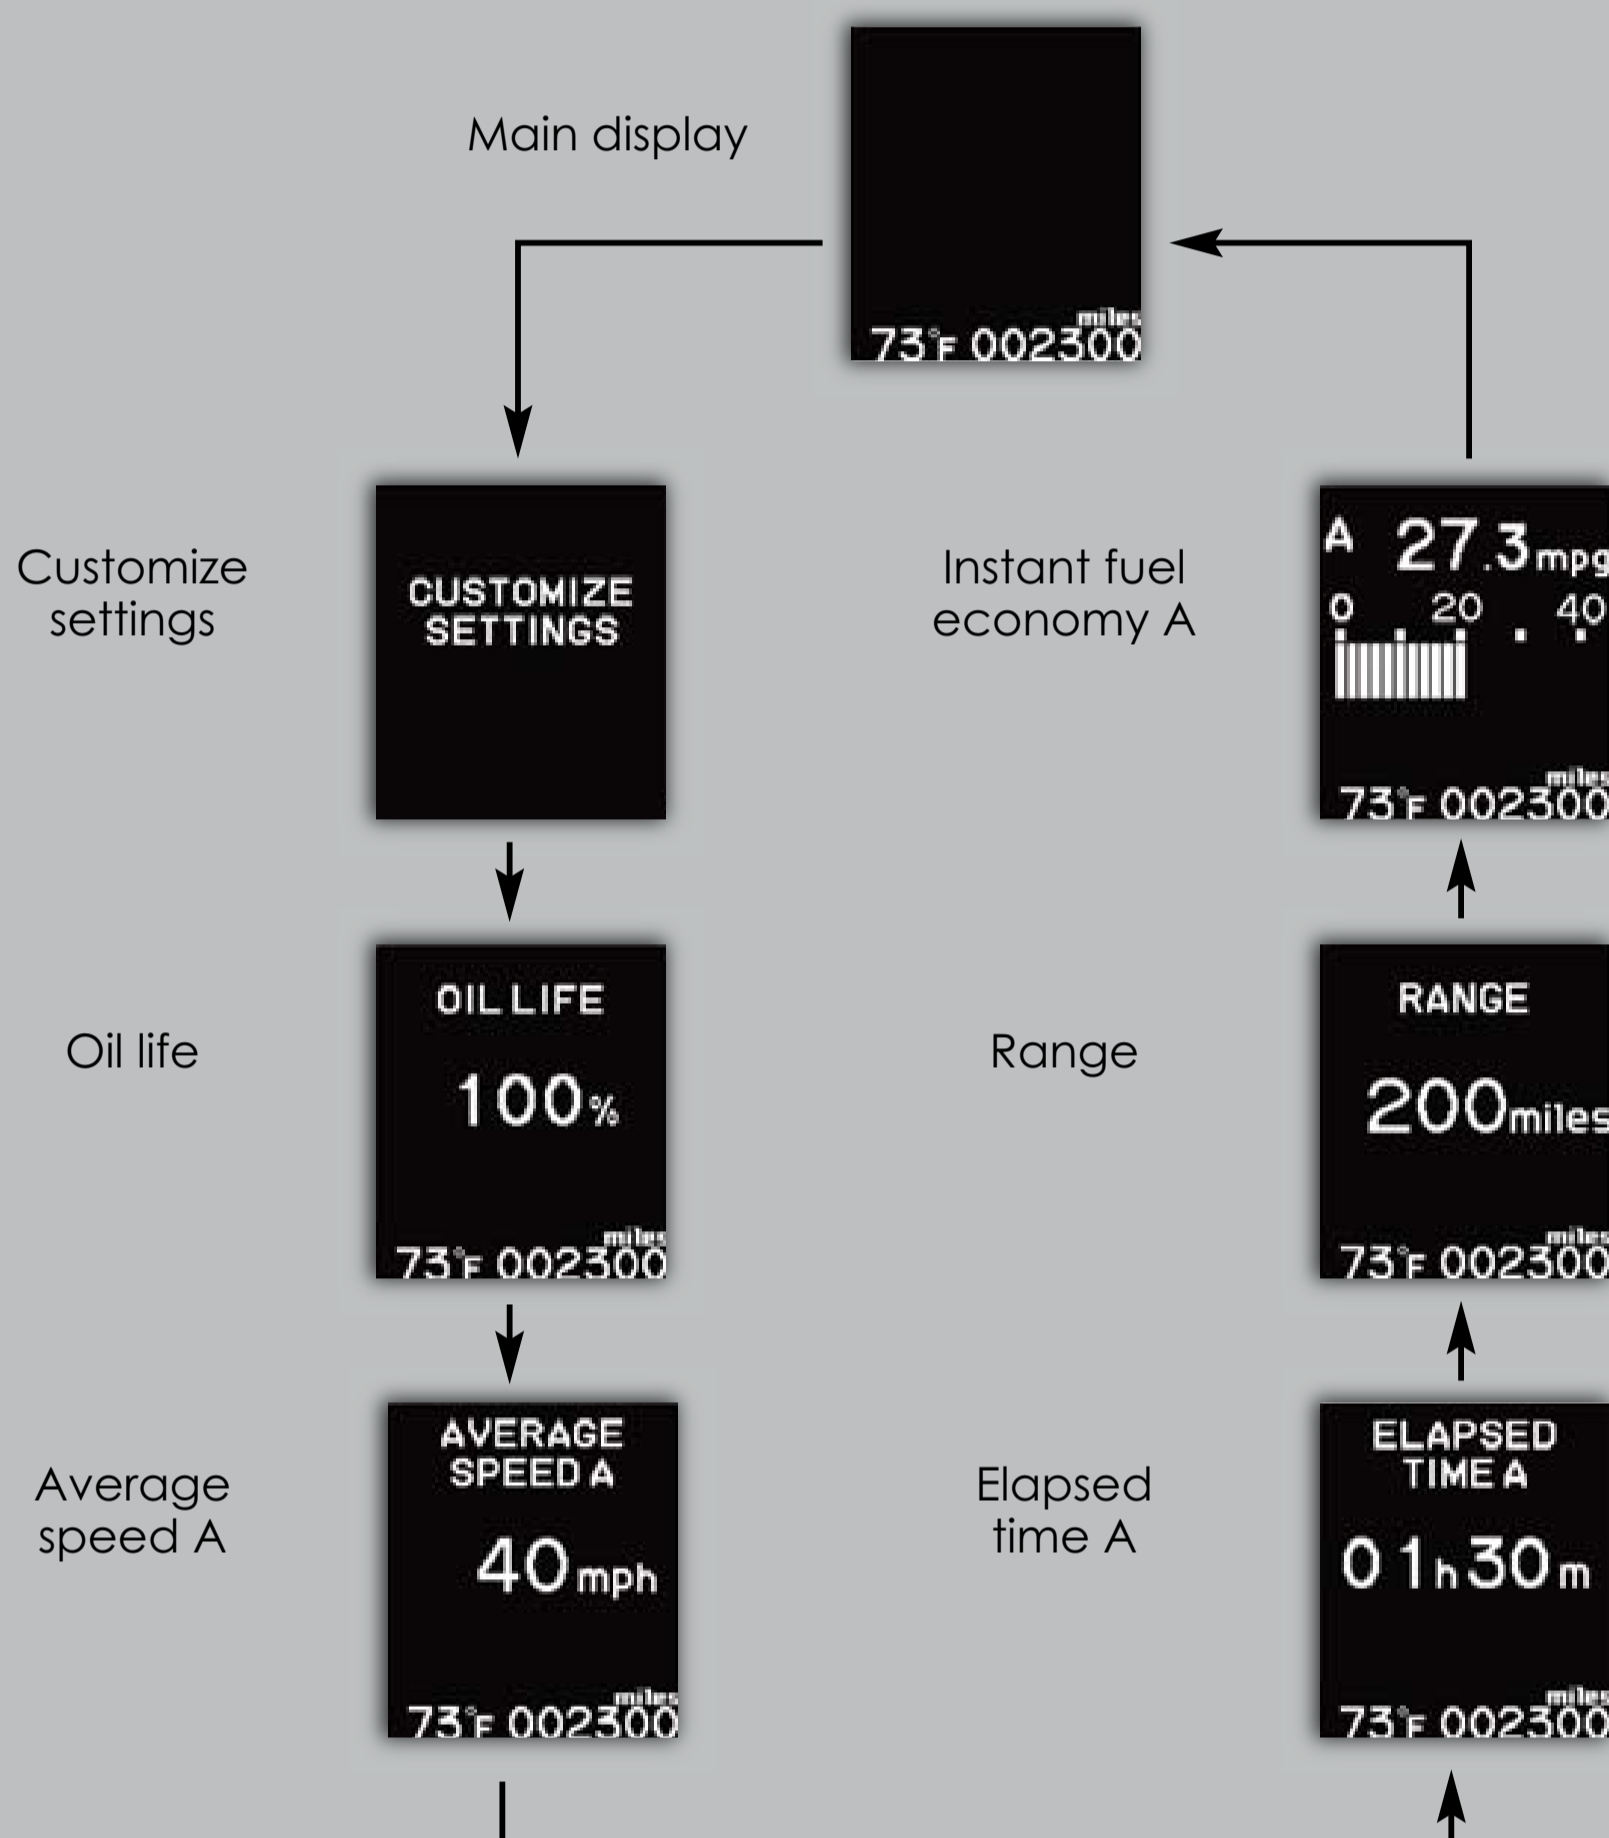

Lower Displays

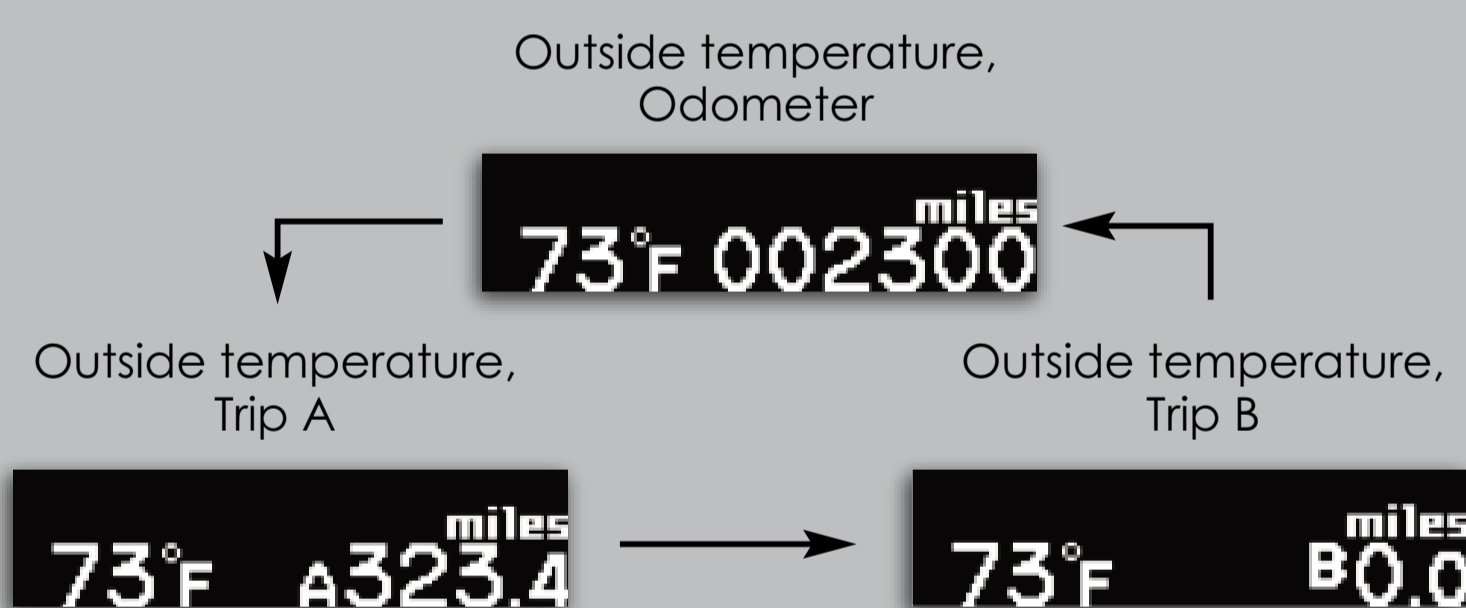

Customizing Settings Using the MID


Program various vehicle settings using the MID. One example is shown below. See your Owner's Manual for other customizable settings.

Programming the Auto Door Unlock Setting

Only the driver's door is preset to unlock when you shift into Park (P). You can change this to a different setting.



Press either Info button (▲/▼) on the steering wheel to toggle to the Customize Settings display, then press SEL/RESET to activate the menu.

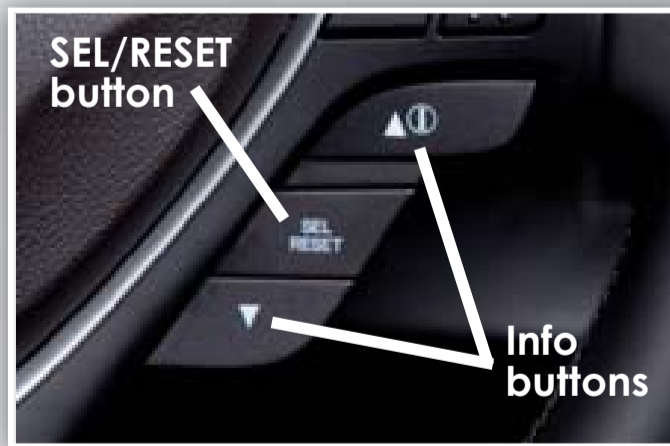

1. Select DOOR SETUP.



3. Select the option you want.



2. Select AUTO DOOR UNLOCK.



4. The setting is displayed, and the display returns to the AUTO DOOR UNLOCK menu.



Press either Info button to exit the menu.

Note: The driver's and front passenger's doors can be opened by pulling the inner front door handle, regardless of the setting. Changing the setting to "All Doors" is useful for rear passengers.