

# POWER TAILGATE

There are multiple ways to operate the power tailgate.

## Opening the Power Tailgate from Inside the Vehicle

The vehicle must be in Park (P) with all doors unlocked.



- Press and hold the tailgate button until a beep sounds. The tailgate begins to open.
- To close the tailgate, press the button again at any time.

## Opening the Power Tailgate Using the Remote Transmitter

The vehicle must be off with the remote in operating range.



In *ANYTIME* mode: Press and hold the tailgate button for about one second to unlock and open the tailgate.



In *WHEN UNLOCKED* mode: Press the unlock button twice to unlock all doors and the tailgate. Then press and hold the tailgate button for about one second.

Make sure the power tailgate keyless open mode is set to your preference using the MID. See your Owner's Manual for instructions.