

# ADAPTIVE CRUISE CONTROL (ACC) WITH LOW SPEED FOLLOW

Set a time or space interval between your vehicle and the vehicle ahead of you. When the vehicle ahead changes speed, ACC senses the change and accelerates or decelerates your vehicle's speed to maintain a set range. *Available with Advance Package.*

## Operating ACC

Check the MID for ACC information.



### Turning ACC On

Press MAIN. ACC appears in the MID.

### Canceling ACC

Press MAIN or CANCEL, or tap the brake pedal.

## How to Use ACC

### Using ACC

- Accelerate to the desired speed.  
*Above 25 mph:* Go to step 2.  
*Below 25 mph (Low Speed Follow):* Press SET/- to set the speed at 25 mph when there is a vehicle ahead of you. If there is no vehicle ahead, ACC is canceled.
- Press SET/-, then release the accelerator pedal. The set speed is fixed, and ACC begins.
- To increase speed, press RES/+. To decrease speed, press SET/-.
- If the vehicle ahead of you stops, your vehicle also stops. When the vehicle ahead starts to accelerate, press RES/+ or SET/- or depress the accelerator pedal to resume following at the set speed.



### Standard Cruise Control

- Press and hold the Distance button.
- A beep sounds, and the selected mode appears in the MID.

## Changing Vehicle Distance

Control the distance between your vehicle and the vehicle in front of you.

ACC automatically adjusts the following distance based on the range selected and your vehicle speed.

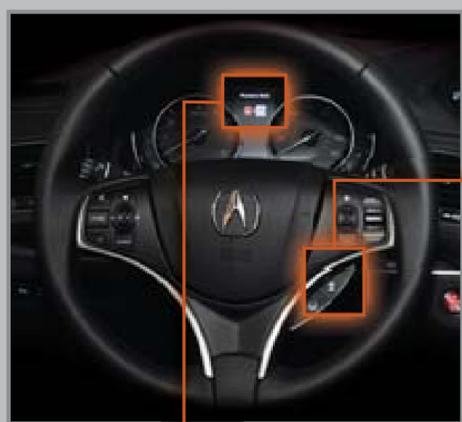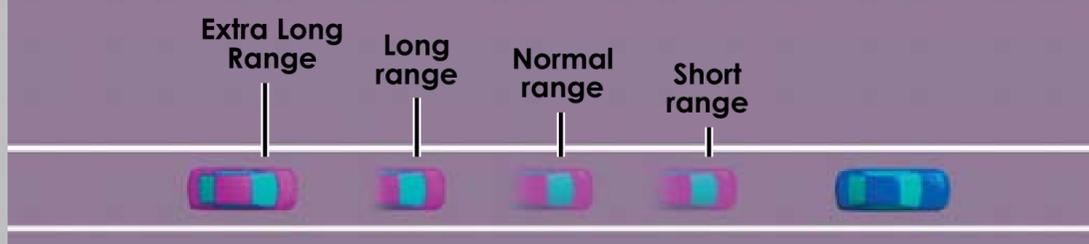

Press the Distance button to shuffle through four ranges.



The selected range and set speed are shown in the MID.

Range	MID Screen
Extra Long	
Long	
Middle	
Short	

If a vehicle enters the ACC range, a beep sounds and a vehicle icon appears on the MID.



If there is no vehicle ahead of you, a dotted-line vehicle icon appears on the MID.



**Note:** The ACC radar sensor in the front grille can detect and monitor the distance of a vehicle up to approximately 100 yards ahead.