

# LANE DEPARTURE WARNING (LDW)


Alerts you if your vehicle begins to move out of a detected lane without the turn signal activated. Available with Standard and Technology Packages.

## How It Works

A camera mounted between the windshield and the rearview mirror determines if your vehicle begins to move away from the center of a detected lane while driving between 40–90 mph.



If you cross a detected lane line without using your turn signal, a message appears on the MID and a beep sounds.

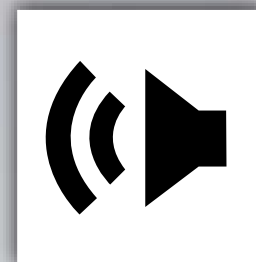

LDW may not activate under certain conditions. See your Owner's Manual for more information.

## Turning LDW On or Off

Press LDW to turn the system on or off. A green indicator light appears on the button when the system is on.

