

TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works

When the tire pressure drops significantly below recommended levels:

The low tire pressure indicator comes on.



A message appears in the MID.



Roll the selector wheel to the tire pressure monitor to see which tires have low pressure.



What to Do

1. Visually inspect the tires for damage.
2. Inflate the tire(s) to the recommended pressures listed on the label on the driver's doorjamb.

