

## ■ Steering Wheel Controls

Operate certain functions of the audio system using the steering wheel controls.

**MODE button:** Cycle through available audio modes.

**VOL buttons:** Adjust audio volume.

**CH buttons:** Change presets, tracks, albums, or folders.

### FM/AM/SiriusXM® Radio

Press (+) or (-) for the next or previous station. Press and hold (+) or (-) for the next or previous strong station.

### CD/HDD\*/iPod®\*/USB/Bluetooth® Audio

Press (+) or (-) for the next or previous track. Press and hold (+) or (-) for the next or previous folder (CD/USB).

### Pandora®/Aha™

Press (+) for the next song. Press and hold (+) or (-) for the next or previous station.

