

Tire Pressure Monitoring System (TPMS)

Monitors the tire pressure while you are driving. Press the Info button on the steering wheel to view the tire pressure monitor to see pressure readings for each tire (see page 26).

If your vehicle's tire pressure becomes significantly low, the low tire pressure indicator appears with a message in the multi-information display.



■ What to Do

Stop your vehicle in a safe place. Check the tire pressure and adjust the pressure to the specified level. The specified tire pressure is on a label on the driver's doorjamb.

NOTICE

Driving on an extremely underinflated tire can cause it to overheat. An overheated tire can fail. Always inflate your tires to the specified pressure.