

# VEHICLE CONTROLS

Learn about the various controls necessary for operating and driving the vehicle.

## Using the Remote Transmitter

Lock or unlock the doors and trunk.

### U.S. models

**Lock button:** Press to lock the doors and trunk. Press again for verification.

**Unlock button:** Press once to unlock the driver's door. Press again to unlock all doors and the trunk.

**Trunk button:** Press and hold to unlock and open the trunk.

**Panic button:** Press and hold to sound the alarm for 30 seconds. Press again to cancel.

**Release knob:** Slide the knob to release the built-in key for valet use.

### Canadian models

**ENGINE button:** After pressing the Lock button once, press and hold to remotely start the engine.

**Unlock button:** Press once to unlock the driver's door. Press again to unlock all doors and the trunk.

**Trunk button:** Press and hold to unlock and open the trunk.

**LED indicators:** Check door lock or engine status (see page 91).

**Lock button:** Press to lock the doors and trunk. Press again for verification.

**Panic button:** Press and hold to sound the alarm for 30 seconds. Press again to cancel.

**Release knob (back of key):** Slide the knob to release the built-in key for valet use.

### NOTICE

Leaving the remote transmitter in the vehicle can result in theft or accidental movement of the vehicle. Always take it with you whenever you leave the vehicle unattended.

## Keyless Access System

When you carry the remote transmitter (for example, in a pocket or purse) and it is outside the vehicle and within range (about 32 inches or 80 cm), you can lock or unlock the doors and trunk without handling the transmitter.

### Unlocking/Locking the Doors

**To unlock:** Grab the driver's door handle when the vehicle is off to unlock the driver's door.

Grab the front passenger's door handle when the vehicle is off to unlock all doors.



**To lock:** Press the door lock button on either front door handle when the vehicle is off. If the remote transmitter is inside the vehicle, the doors will not lock.



### Opening the Trunk

Press the trunk release button under the trunk handle to unlock and open the trunk after all doors have been unlocked. The vehicle can be on or off.

