


## Blind Spot Information (BSI)\*

Alerts you to a detected vehicle in your left or right blind spot while driving 20 mph (32 km/h) or higher.

When a vehicle is detected in your blind spot, the blind spot indicator turns on and stays lit until the area is clear.

When your turn signal is on and a vehicle is detected, the blind spot indicator blinks and a beep sounds until the area is clear or the turn signal is off.

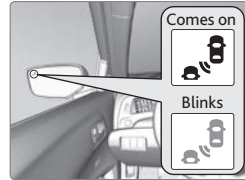

### ■ Changing Settings

Change the alert type, or turn the system on or off. Use the interface dial to make selections.

1. Press **SETTINGS**.
2. Select **Vehicle Settings**. The vehicle must be in Park (P).
3. Select **Blind Spot Info**.
4. Select an alert type, or **Off**.
5. Press **BACK** to exit the menu.



## **⚠️ WARNING**

Failure to visually confirm that it is safe to change lanes before doing so may result in a crash and serious injury or death. Do not rely only on the blind spot information system when changing lanes.

Always look in your mirrors, to either side of your vehicle, and behind you for other vehicles before changing lanes.

### Important Safety Reminder

Like all assistance systems, BSI has limitations. Overreliance on BSI may result in a collision. The system is for your convenience only.

*\*if equipped*