


On-Demand Multi-Use Display (ODMD)*

Operate the audio system using either the touchscreen or dashboard buttons.

The functions shown here can be used with most audio sources. Refer to subsequent audio pages for more specific functions. Options that appear depend on the selected audio source.

Models with ODMD

ODMD controls




Power/volume knob

Audio Source: Change the audio source. Select Edit Order to arrange audio icons to your preference.


Sound: Adjust sound settings.

Shortcuts (Audio tab): Store or select up to six AM, FM, or SiriusXM stations or HDD tracks.

More: Change screen and sound settings, or display menu options.

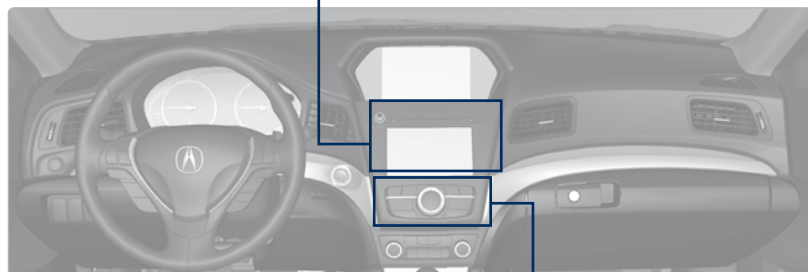

Audio buttons

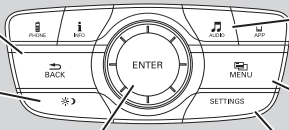

BACK button: Return to the previous display.

(icon) button: Adjust the upper screen brightness.

Interface dial (from the audio screen): Move up, down, left, and right. Rotate and press ENTER to make selections in the upper display.

AUDIO button: Display the audio screen.

MENU button: Display menu items.

SETTINGS button: Choose Audio Settings.

**if equipped*