

## Power Tailgate Operation

Use these methods to operate the power tailgate.

### ■ Power Tailgate Release Button


The vehicle must be in Park (P).

Press and hold the power tailgate button on the dashboard to the left of the steering column to open the tailgate. Press it again at any time to close it.



### ■ Power Tailgate Close Button

Press the power tailgate close button to automatically close the tailgate. Press it again to stop the tailgate operation and reverse its direction.

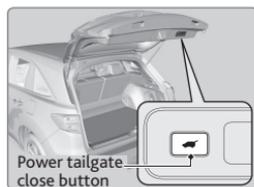

## WARNING

Closing the power tailgate while anyone is in the path of the tailgate can cause serious injury.

Make sure everyone is clear before closing the tailgate.

## NOTICE

Do not push or pull on the power tailgate when it is being automatically opened or closed. Forcibly opening or closing the power tailgate while in operation can deform the tailgate frame.