

# AUDIO AND CONNECTIVITY

Learn how to operate the vehicle's audio system.


## Basic Audio Operation

Connect audio devices and operate buttons and displays for the audio system.

### ■ USB Port

Connect a USB flash drive or other audio device, such as an iPod® or iPhone®.

1. Open the center console. Open the USB port cover.
2. Install the flash drive or cable connector to the USB port.

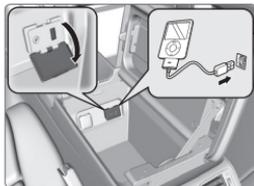


*iPod and iPhone are trademarks of Apple, Inc.*

### ■ Auxiliary Input Jack

Connect standard audio devices with a 1/8-inch (3.5 mm) stereo miniplug.

1. Open the center console. Open the AUX cover.
2. Connect the device to the input jack. Use the device to control the audio.

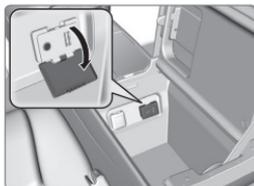

*State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.*

### ■ Accessory Power Socket

Open the center console. Open the socket cover to use it when the vehicle is on.

There is an additional power socket located in the front center pocket.



### NOTICE


Do not insert an automotive type cigarette lighter element. This can overheat the power socket.

## Steering Wheel Controls

Operate certain functions of the audio system using the steering wheel controls.

**SOURCE button:** Cycle through available audio modes.

**Left selector wheel:** Roll up or down to adjust volume. Press to mute. Move (or hold) left or right to change stations or tracks.

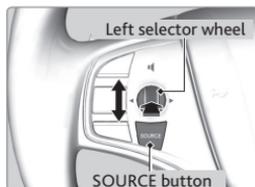

### FM/AM/SiriusXM® Radio

Move right or left for the next or previous station. Move and hold right or left for the next or previous strong station.

### CD/HDD/iPod®/USB/Bluetooth® Audio

Move right or left for the next or previous track. Move and hold right or left for the next or previous folder (CD/USB).

### Pandora®

Move right for the next song. Move and hold right or left for the next or previous station.

## Adjusting the Sound

Adjust various sound settings using one of the below methods.

### From the ODM D

Touch items on the screen to make selections.


1. Select the sound icon.
2. Select the icons to adjust the setting for each item.



### From the Settings menu

Use the interface dial to make and enter selections.

1. Press SETTINGS.
2. Select Audio Settings.
3. Select Sound.
4. Select the setting to adjust.
5. Adjust the setting to the desired level.
6. Press BACK to exit the menu.

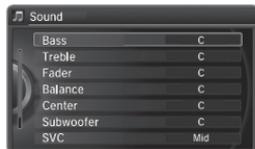

## On-Demand Multi-Use Display (ODMD)

Operate the audio system using either the touchscreen or dashboard buttons.

The functions shown here can be used with most audio sources. Refer to subsequent audio pages for more specific functions. Options that appear depend on the selected audio source.

**ODMD controls**



**Volume knob:** Adjust the volume level.


**Power button:** Turn the audio system on or off.

**Audio Source:** Change the audio source. Select Edit Order to arrange audio icons to your preference.


**Sound: Adjust sound settings.**

**Shortcuts (Audio tab):** Store or select up to six AM, FM, or XM stations or HDD tracks.

**More:** Change screen and sound settings, or display menu options.

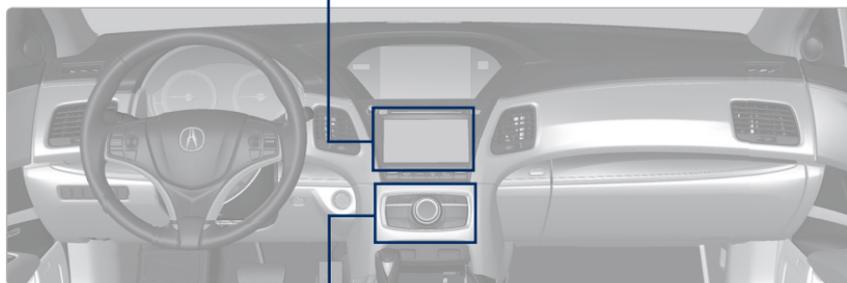

**Audio buttons**

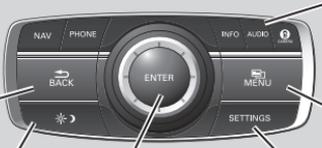

**BACK button:** Return to the previous display.

**\* button:** Adjust the upper screen brightness. Use the interface dial to make adjustments.

**Interface dial:** Move up, down, left, and right. Rotate and press ENTER to make selections in the upper display.

**AUDIO button:** Display the audio screen.

**MENU button:** Display menu items.

**SETTINGS button:** Choose Audio Settings.

## FM/AM Radio

Play FM or AM radio stations.



**Audio Source:** Select the FM or AM icon.

**Scan:** Scan for stations with a strong signal.


**Tune:** Change the station.

**Presets:** To store a station, tune to the desired station, select Presets, and select and hold the desired preset number. Select a preset station once stored.

**TAG\*:** Tag songs from HD Radio and store to a connected iPod or iPhone.

**Skip/seek:** Find a station with a strong signal.

**Interface dial (from the Audio screen):** Rotate and press to select the station list or presets in the upper display.

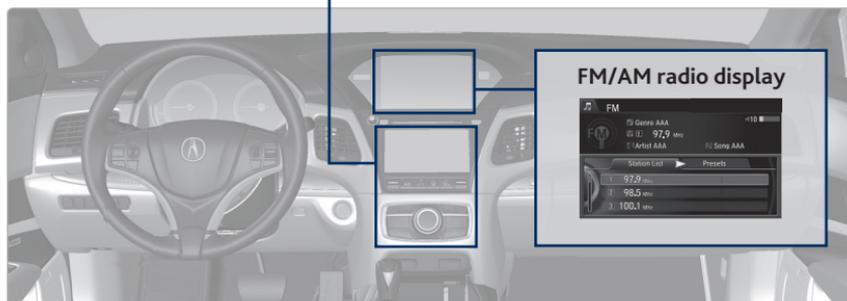

## SiriusXM® Radio

Available on a subscription basis only. For more information or to subscribe, contact your dealer or visit [www.siriusxm.com](http://www.siriusxm.com) (U.S.) or [www.siriusxm.ca](http://www.siriusxm.ca) (Canada).

**Audio Source:** Select the XM icon.


**Scan:** Scan for channels.

**Category:** Change the category.

**Presets:** To store a channel, tune to the desired channel, select Presets, and select and hold the desired preset number. Select a preset channel once stored.

**Skip/seek:** Change the channel.

**Interface dial (from the Audio Screen):** Rotate and press to select the channel list or presets in the upper display.

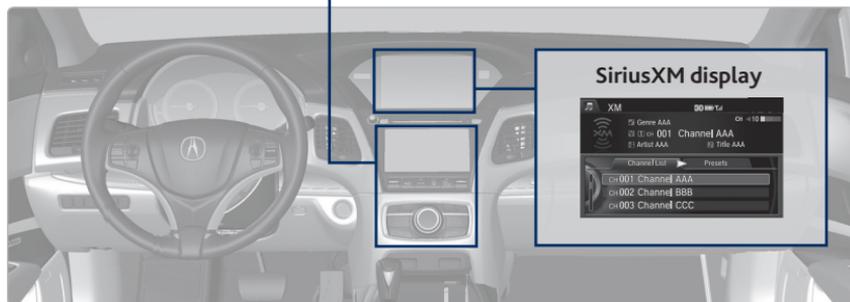



Available in the U.S. and Canada, except Hawaii, Alaska, and Puerto Rico.

XM® is a registered trademark of Sirius XM Radio, Inc.

## Compact Disc (CD) or USB Flash Drive

The audio system supports audio CDs, CD-Rs, and CD-RWs in MP3, WMA, or AAC formats.


For playing a USB flash drive, connect your device to the USB port.

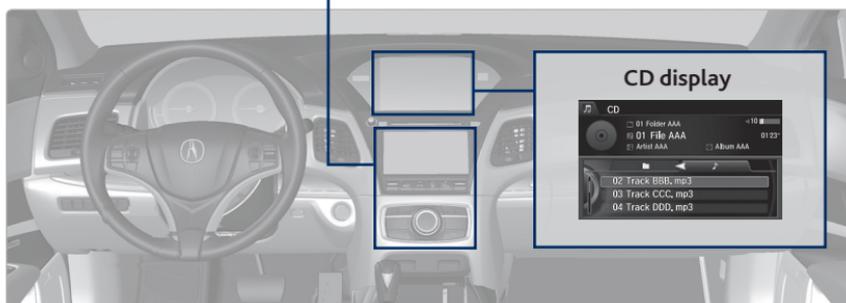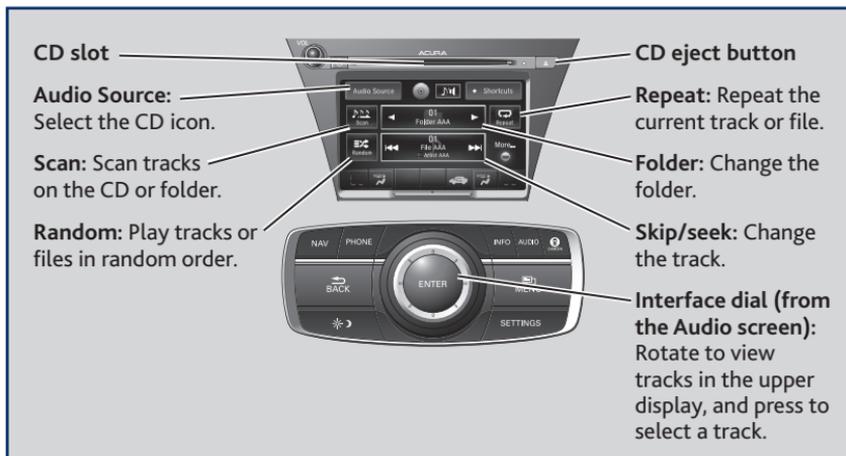

### ■ Searching for Music

Use the interface dial to search for tracks using several methods.

1. From the audio screen, press MENU.
2. Select Music Search.
3. Select a search type (artist, album, track, etc.) or folder.
4. Select the song you want to play.


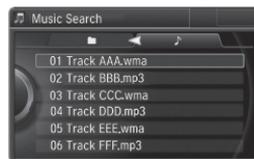


### NOTICE

Do not use CDs with adhesive labels or insert a damaged CD. Inserting these types of CDs may cause them to get stuck inside or damage the audio unit.

## Hard Disc Drive (HDD) Audio

When music CDs are inserted, they are automatically recorded onto the built-in HDD for later playback.

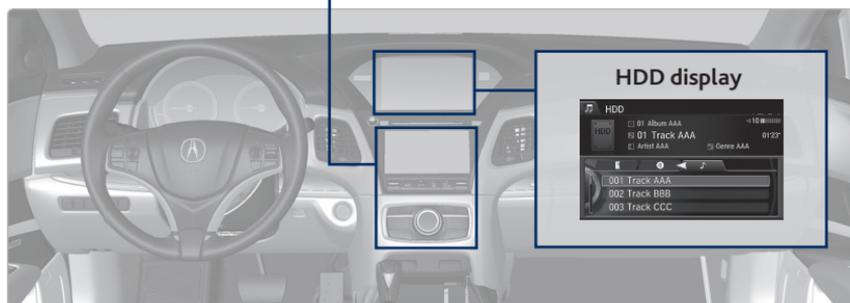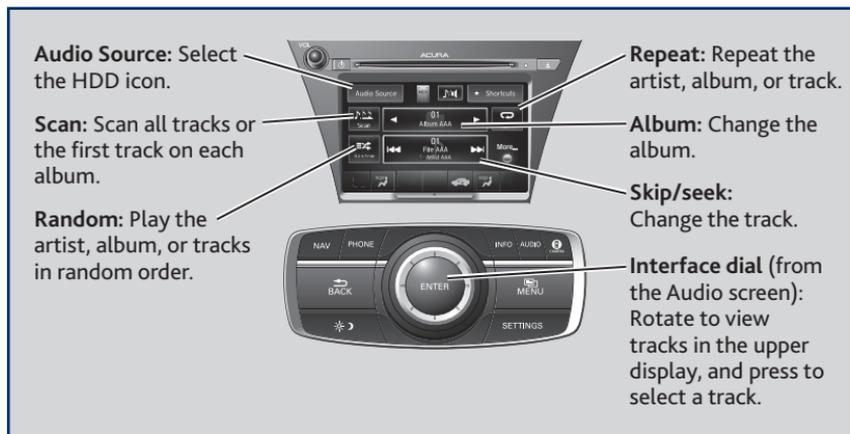

### ■ Searching for Music

Use the interface dial to search for tracks using several methods.



1. From the audio screen, press MENU.
2. Select Music Search.
3. Select a search type (artist, album, track, etc.).
4. Select the song you want to play.



You can also search for and play HDD music using Song By Voice™.

## iPod®

Connect your device to the USB port.

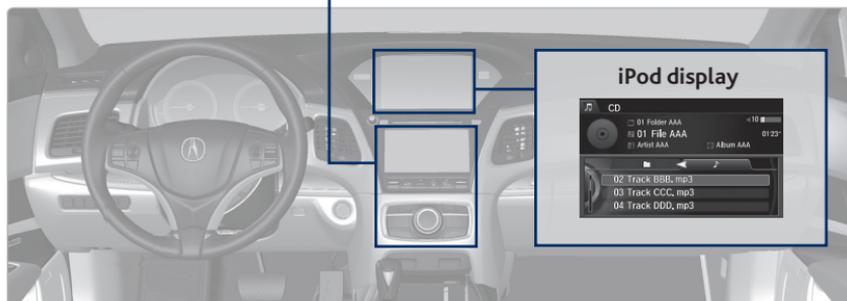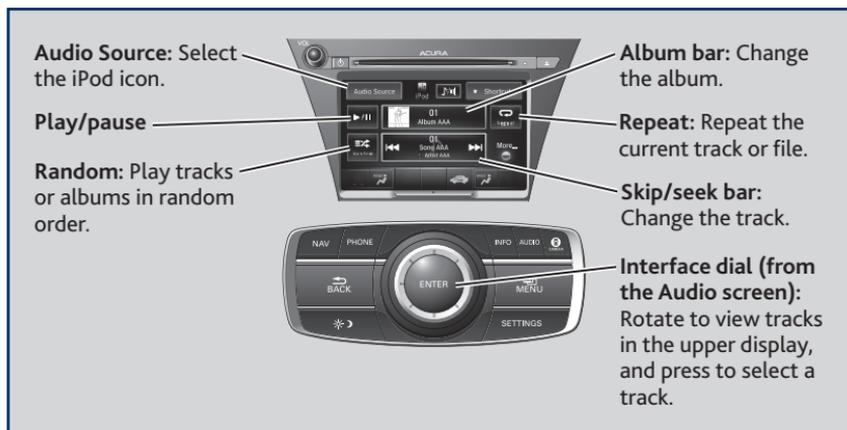

### ■ Searching for Music

Use the interface dial to search for tracks using several methods.

1. From the audio screen, press MENU.
2. Select Music Search.
3. Select a search type (artist, album, track, etc.) or folder.
4. Select the song you want to play.





On vehicles with navigation, you can also search for and play iPod music using Song By Voice™.

*iPod is a trademark of Apple, Inc.*

## Bluetooth® Audio

Play streaming or stored audio from your compatible phone when it is paired to Bluetooth® HandsFreeLink®. Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink) (U.S.) or [www.handsfreelink.ca](http://www.handsfreelink.ca) (Canada) to check phone compatibility. Standard data rates may apply.

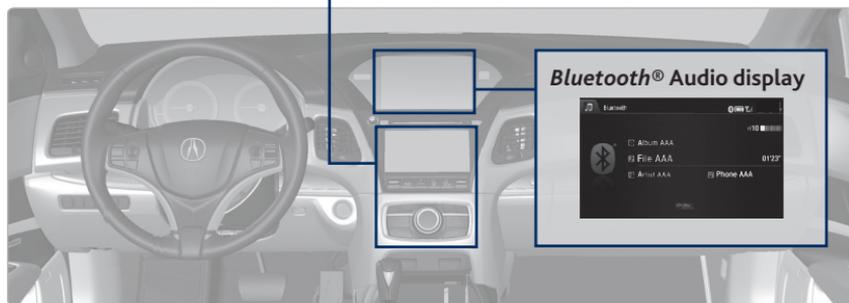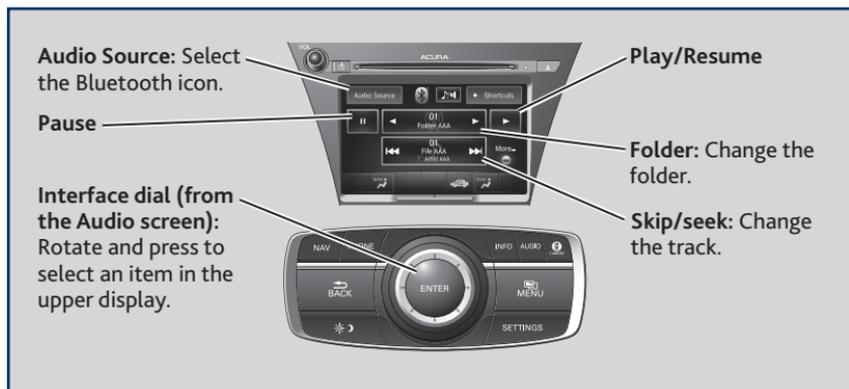

### Notes:

- Make sure the volume on your phone is properly adjusted.
- You may need to enable additional settings on your phone for playback.
- The resume/pause function and remote audio controls are not supported on all phones.

*State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle. Only launch streaming audio on your phone when safe to do so.*