

## Climate Control System

Set your preferred interior temperature by selecting the proper mix of heated or cooled air and fan speed. Use the On-Demand Multi-Use Display (ODMD) or buttons to operate the system.

### On-Demand Multi-Use Display (ODMD)

When you select a climate control icon, a new screen appears where you can make adjustments or change settings.

Driver's side vent mode

Driver's side temperature control

A/C: Turn the air conditioning on or off.

SYNC: Set the passenger's side temperature to the same as the driver's side.


Fan speed

Recirculation/fresh air mode

Shortcuts (Climate tab): Store or select two climate control settings.

Passenger's side vent mode

Passenger's side temperature control

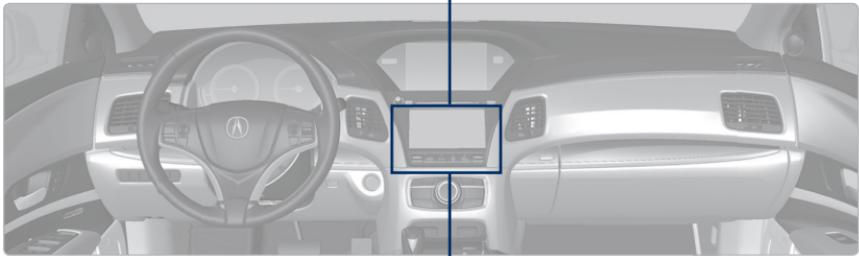

### Climate control buttons

Driver's side temperature switch

**AUTO button:** Press, then adjust the temperature to your preferred setting.

Passenger's side temperature switch

ON/OFF button


Windshield defroster button

Rear window defogger/heated mirror button



### ■ Rear Temperature Control Dial


Adjust the rear temperature control dial to set the rear passenger temperature differently than the front passengers.

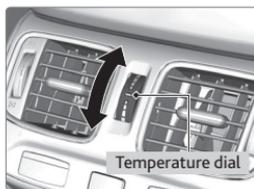

### ■ Heated Steering Wheel\*

Heat the steering wheel to a comfortable temperature when the vehicle is on.

Press the heated steering wheel button. Press the button again to turn it off.

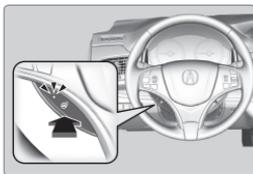

### ■ Power Rear Sunshade\*

Press the button on the ceiling to raise or lower the sunshade when the vehicle is on. There is also a button on the back of the center console.



## ⚠ WARNING

Opening or closing the sunshade on someone's hands or fingers can cause serious injury.

Make sure all hands and fingers are clear of the sunshade before opening or closing it.

## Seat Heaters and Ventilation\*

Quickly warm or cool the seats when the vehicle is on.

### ■ Front Seat Heaters or Ventilation\*


Press the seat heater or ventilation button in the front console. An indicator (red for seat heater, blue for seat ventilation) appears for the selected setting.

**Once:** HI setting (three indicators)

**Twice:** MID setting (two indicators)

**Three times:** LO setting (one indicator)

**Four times:** OFF setting (no indicators)

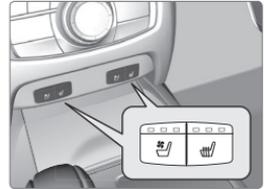

### ■ Rear Seat Heaters\*

Press the seat heater button on the back of the center console. An indicator appears for the selected setting.

**Once:** HI setting (three indicators)

**Twice:** MID setting (two indicators)

**Three times:** LO setting (one indicator)

**Four times:** OFF setting (no indicators)



## ⚠ WARNING

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.