


Head-Up Display

Projects a virtual, transparent image onto the windshield when the vehicle is on which allows you to view information while keeping your eyes on the road.

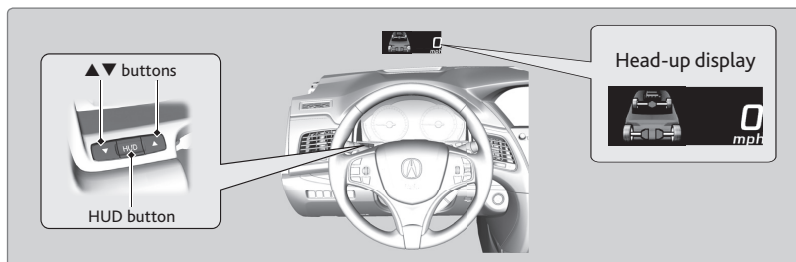

■ Turning the Display On or Off

Press the HUD button to turn the display on or off. Press the ▲ or ▼ button to adjust the display position on the windshield.

Press and hold the HUD button to display the brightness level. Press the ▲ or ▼ button to adjust the brightness.

■ Changing the Display

Choose what content to display. Use the right selector wheel on the steering wheel to make and enter selections.

1. Scroll to the Head-Up Display Content screen, and select it. Display options are shown in the head-up display and the MID.
2. Scroll through the display options, and select your choice.

Head-up Display
Content

■ Driving-Related Displays

Below are the main display options shown on the head-up display.



Power distribution monitor,
vehicle speed (main)



 
Adaptive Cruise Control
with Low Speed Follow,
vehicle speed



Tachometer, gear position
indicator, vehicle speed



Vehicle speed


 




Turn-by-turn directions or
compass, vehicle speed

■ Power Distribution Monitor

Displays the vehicle's hybrid power flow and Sport Hybrid Super Handling All-Wheel Drive™ torque distribution.

Power Distribution

	Head-up display	Indicator color
Power is supplied by the motors and the engine.		Blue
Power is only supplied by the motors.		Blue
Power is only supplied by the engine.		Blue
The motors charge the high voltage battery.		Green

Torque Distribution

This monitor can also be shown on the color information display. Press the INFO button and use the interface dial to select Power Distribution Monitor.

