

## Car Wash Mode

Follow the procedure below to use a conveyor-style car wash where you or an attendant do not remain in the vehicle. Make sure the wiper lever is in the OFF position. You should inform the car wash attendant of this procedure.


1. When the engine is running, apply the brake pedal and select Neutral (N).
2. Within 5 seconds, press the ENGINE START/STOP button. The vehicle goes into Accessory mode.

This mode lasts for 15 minutes before the gear changes to Park and the vehicle turns off.

## ■ Sequential Mode\*

### 6-cylinder models

Use the paddle shifters to change between 1st and 9th gears without removing your hands from the steering wheel.

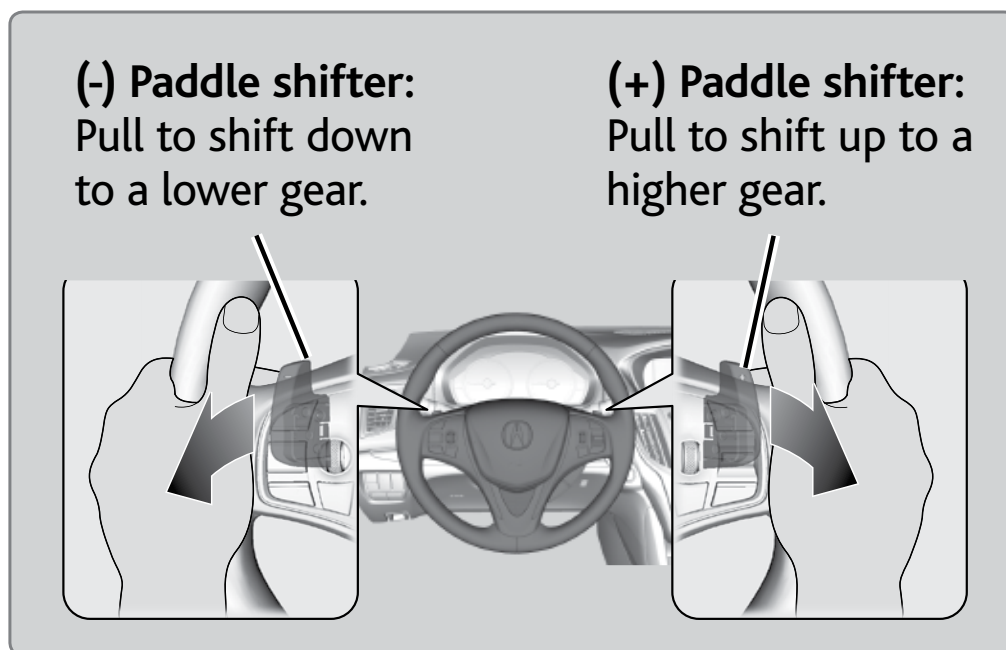

### Recommended shift points

Shift up	Acceleration
1st to 2nd	15 mph (24 km/h)
2nd to 3rd	25 mph (40 km/h)
3rd to 4th	40 mph (64 km/h)
4th to 5th	45 mph (72 km/h)
5th to 6th	50 mph (80 km/h)
6th to 7th	55 mph (89 km/h)
7th to 8th	60 mph (97 km/h)
8th to 9th	65 mph (105 km/h)

**When the gear is in D:** The vehicle goes into sequential mode momentarily, and the gear indicator comes on. When you start driving at a constant speed, sequential mode automatically switches off, and the gear indicator goes off.

**When the gear is in D (with SPORT+ mode):** The vehicle goes into sequential mode, and the M (sequential mode) indicator and gear indicator come on.

To cancel this mode, press the IDS button to select a different mode. When sequential mode is canceled, the M indicator and gear indicator go off.

*\*if equipped*