


Climate Control System

The automatic climate control system can maintain your preferred interior temperature by selecting the proper mix of heated or cooled air and fan speed.

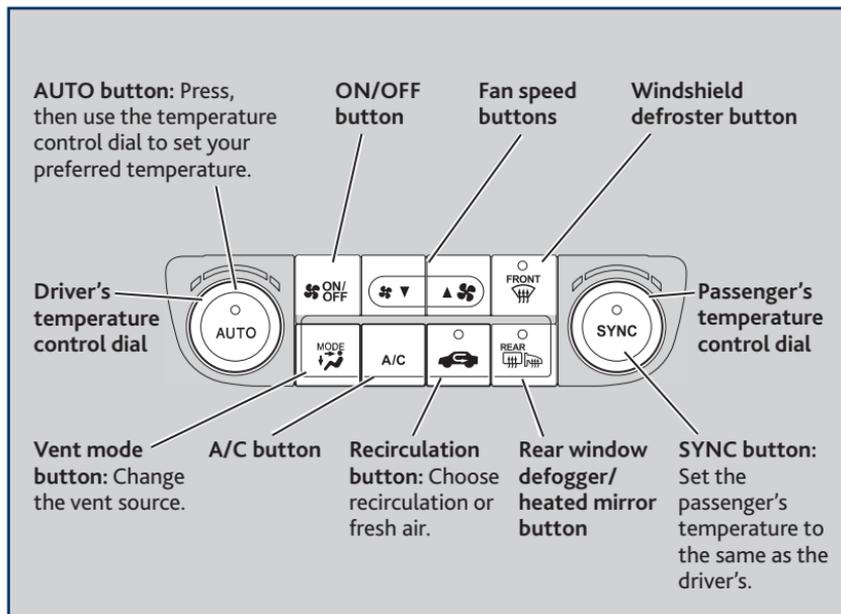

On vehicles with ODMD, climate information is displayed on the screen, but cannot be selected via touch. Adjust the climate settings using the dials and buttons.

Seat Heaters or Ventilation*

Quickly warm or ventilate the seats when the vehicle is on.

■ Front Seat Heaters*

Press the switch for the desired setting. An indicator in the switch appears for the selected setting.

LO button: Press to slowly warm the seat, or to maintain continuous heating.

HI button: Press to quickly warm the seat. If left in HI, the heater cycles on and off.

Return the switch to the center to turn the seat heaters off.



■ Front Seat Heaters and Ventilation*

Press the seat heater or ventilation button. An indicator (red for heater, blue for ventilation) appears for the selected setting.

Once: HI setting (three indicators)

Twice: MID setting (two indicators)

Three times: LO setting (one indicator)

Four times: OFF setting (no indicators)




■ Rear Seat Heaters*

You can heat the two outer rear seats. An indicator in the button appears for the selected setting.

LO button: Press to slowly warm the seat, or to maintain continuous heating.

HI button: Press to quickly warm the seat. If left in HI, the heater cycles on and off.

Press the button again to turn off.

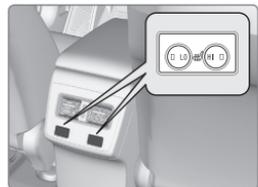

⚠ WARNING

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.