

Models with navigation

## On-Demand Multi-Use Display™ (ODMD™)

Operate the audio system using either the touchscreen or dashboard buttons.

The functions shown here can be used with most audio sources. Refer to subsequent audio pages for more specific functions. Options that appear depend on the selected audio source.

**ODMD controls**



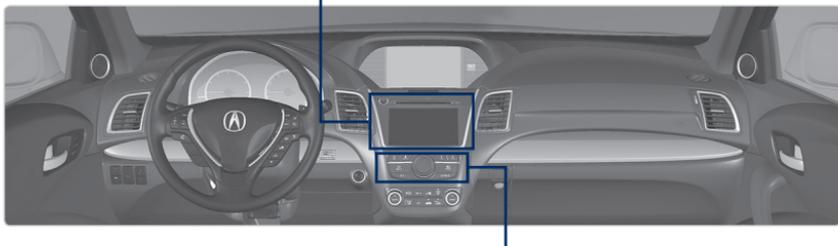
**Power/volume knob:** Control for power and volume.

**Audio Source:** Change the audio source. Select Edit Order to arrange audio icons to your preference.

**Sound:** Adjust sound settings.

**Shortcuts (Audio tab):** Store or select up to six AM, FM, or SiriusXM stations or HDD tracks.

**More:** Change screen and sound settings, or display menu options.



**Audio buttons**



**BACK button:** Return to the previous display.

**⌘ button:** Adjust the upper screen brightness.

**Interface dial (from the audio screen):** Move up, down, left, and right. Rotate and press ENTER to make selections in the upper display.

**AUDIO button:** Display the audio screen.

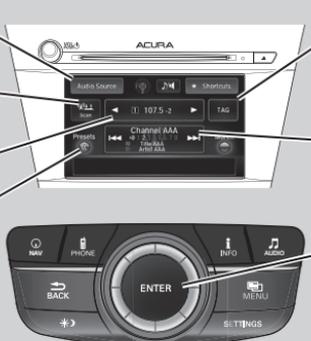
**MENU button:** Display menu items.

**SETTINGS button:** Choose Audio Settings.

## Models with navigation

**FM/AM Radio**

Play FM or AM radio stations.



**Audio Source:** Select the FM or AM icon.

**Scan:** Scan for stations with a strong signal.

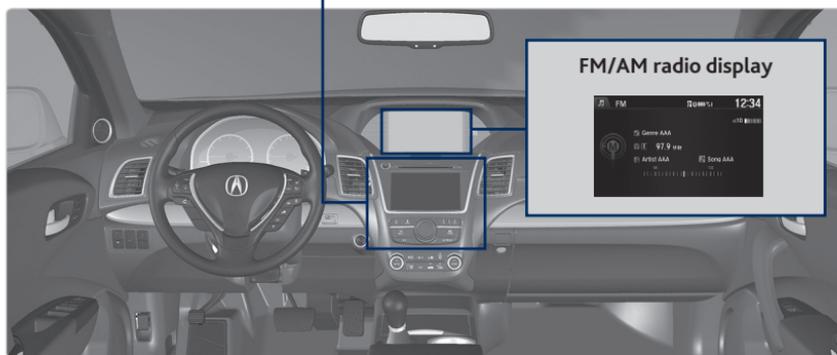
**Tune bar:** Change the station.

**Presets:** To store a station, tune to the desired station, select Presets, and select and hold the desired preset number. Select a preset station once stored.

**TAG\*:** Tag songs from HD Radio and store to a connected iPod or iPhone.

**Skip/seek bar:** Find a station with a strong signal.


**Interface dial (from the Audio screen):** Select from the station list or presets in the upper display.



## Models with navigation

**SiriusXM® Radio**

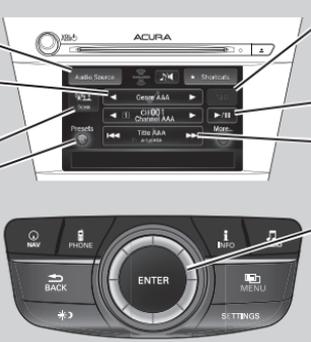Available on a subscription basis only. For more information or to subscribe, contact your dealer, or visit [www.siriusxm.com](http://www.siriusxm.com) (U.S.) or [www.siriusxm.ca](http://www.siriusxm.ca) (Canada).



**Audio Source:**  
Select the XM Icon.

**Category bar:**  
Change the category.

**Scan:** Scan for channels.


**Presets:** To store a station, tune to the desired station, select Presets, and select and hold the desired preset number. Select a preset station once stored.

**TAG\*:** Tag songs and store to a connected iPod or iPhone.

**Play/pause**

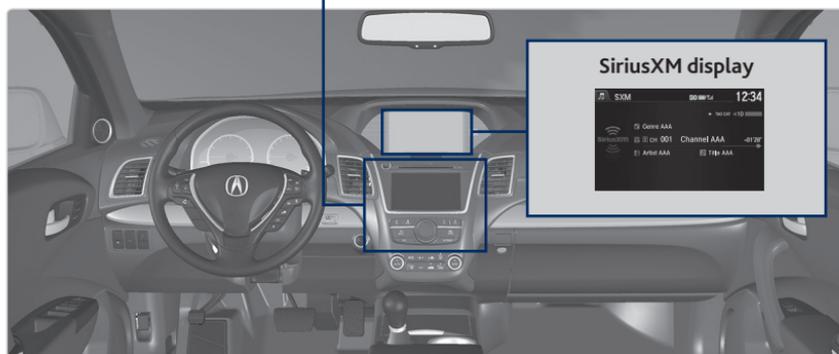**Skip/seek bar:**  
Change the channel.

**Interface dial (from the Audio Screen):** Select from the category list, channel list, and presets in the upper display.



To learn about additional features—such as multi-channel preset, replay, or SportsFlash—see your Navigation Manual on the Owner Information CD or visit [owners.acura.com](http://owners.acura.com) (U.S.) or [myacura.ca](http://myacura.ca) (Canada).

Available in the U.S. and Canada, except Hawaii, Alaska, and Puerto Rico.



XM® is a registered trademark of Sirius XM Radio, Inc.

## Models with navigation

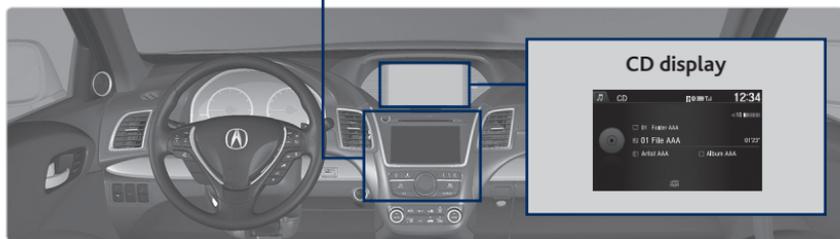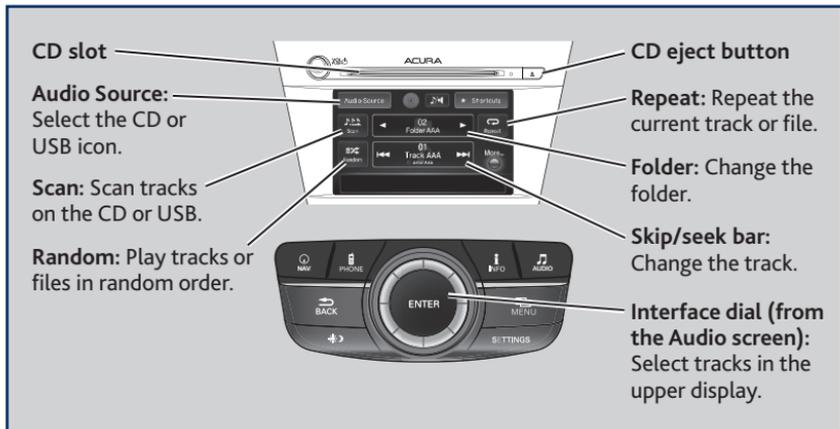**Compact Disc (CD) or USB Flash Drive**


Insert a CD to begin playing. The audio system supports audio CDs, CD-Rs, and CD-RWs in MP3, WMA, or AAC formats.

Connect your USB flash drive using the USB port (see page 50). The audio system supports MP3, WMA, or AAC files.

**■ Searching for Music**

Use the interface dial to search for tracks on the CD or USB.

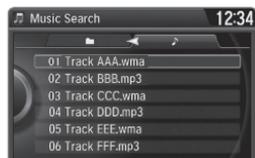1. From the audio screen, press MENU.
2. Select Music Search.
3. Select a search type (artist, album, track, etc.) or folder.
4. Select the song you want to play.





Do not use CDs with adhesive labels or insert a damaged CD. Inserting these types of CDs may cause them to get stuck inside or damage the audio unit.

## Models with navigation

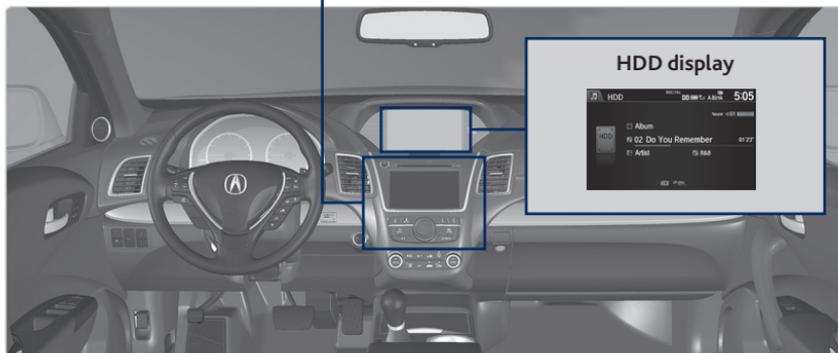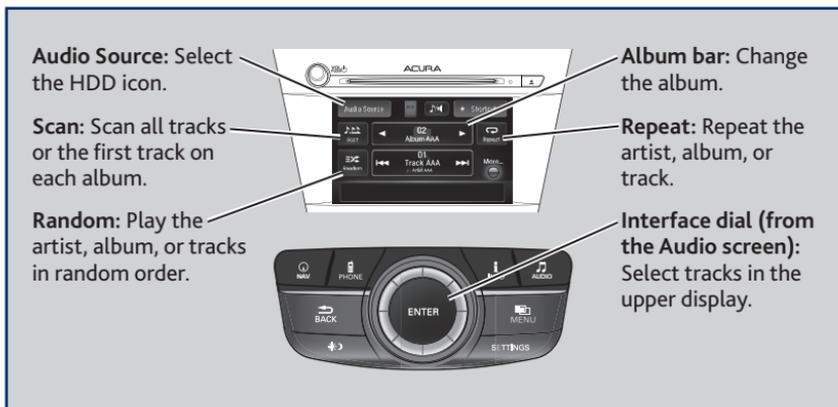**Hard Disc Drive (HDD) Audio**

When music CDs are inserted, they are automatically recorded by system default onto the built-in HDD for later playback.

**■ Searching for Music**

Use the interface dial to search for tracks using several methods.

1. From the audio screen, press MENU.
2. Select Music Search.
3. Select a search type (artist, album, track, etc.).
4. Select the song you want to play.





You can also search for and play HDD music using Song By Voice™ (see page 151).

## Models with navigation

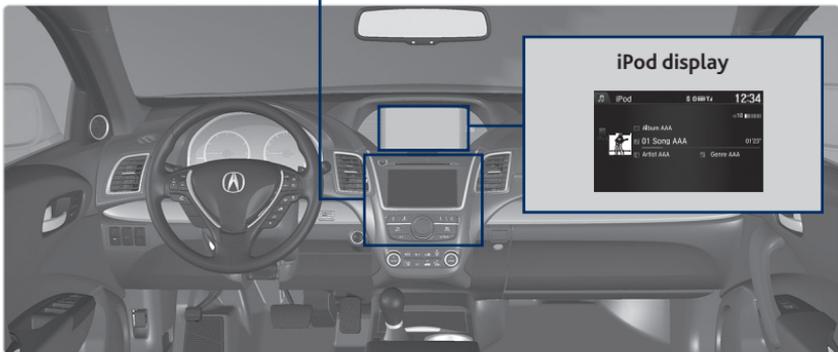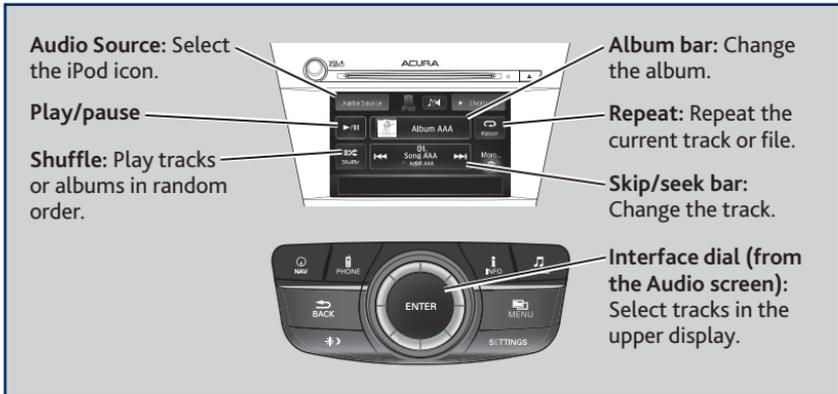**iPod®**

Play and operate an iPod through the vehicle's audio system. Connect your device to the USB port (see page 50).

**■ Searching for Music**

Use the interface dial to search for tracks using several methods.

1. From the audio screen, press MENU.
2. Select Music Search.
3. Select a search type (artist, album, track, etc.).
4. Select the song you want to play.



You can also search for and play iPod music using Song By Voice™ (see page 151).



*iPod is a trademark of Apple, Inc.*

## Models with navigation

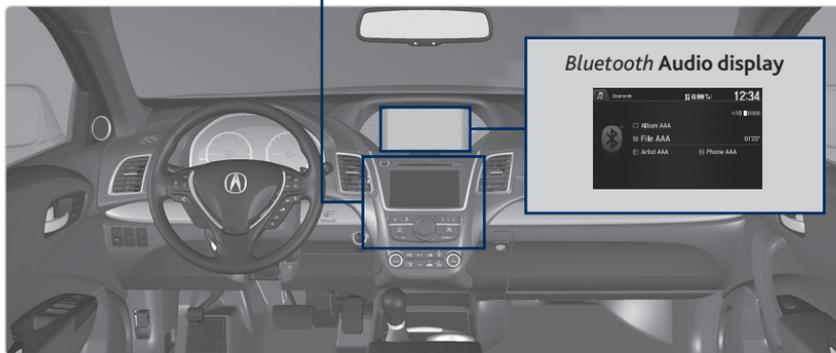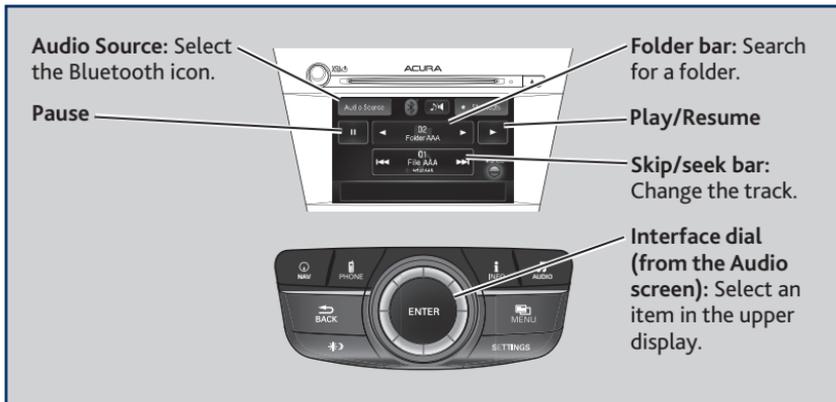**Bluetooth® Audio**

Play streaming or stored audio from your compatible phone through your vehicle's audio system. Connect your phone to *Bluetooth® HandsFreeLink®*.

Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink) (U.S.) or [www.handsfreelink.ca](http://www.handsfreelink.ca) (Canada) to check phone compatibility. Standard data rates apply.

**Notes:**

- Make sure the volume on your phone is properly adjusted.
- You may need to enable additional settings on your phone for playback.
- The resume/pause function and remote audio controls are not supported on all phones.

*State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle. Only launch streaming audio on your phone when safe to do so.*