

Road Departure Mitigation (RDM)*

Alerts and helps to assist you if the system determines a possibility of your vehicle unintentionally crossing over detected lane markings while driving between 45–90 mph (72–145 km/h).


If your vehicle is getting too close to detected lane markings without a turn signal activated, a message appears in the MID and the system applies steering torque and rapid vibrations on the steering wheel to help you remain within the driving lane.

Braking may also be applied if the lane lines are solid and continuous.



■ Turning the System On or Off

Press the RDM button to turn the system on or off. A green indicator appears on the button when the system is on.

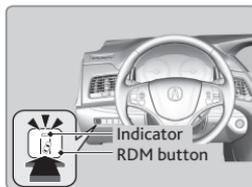

■ Changing Settings

Determine the warning timing, or turn the system off. Use the interface dial to make selections.

1. Press **SETTINGS**.
2. Select **Vehicle Settings**. The vehicle must be in Park (P).
3. Select **Road Departure Mitigation System**.
4. Select from the options.



Normal (default): Steering control starts from inside the lane edge.

Wide: Steering control starts from outside the lane edge.

Warning Only: The system only provides a BRAKE message, but does not apply steering or braking.

5. Press **BACK** to exit the menu.

Important Safety Reminder

The system has limitations. Overreliance on it may result in a collision. It is always your responsibility to keep your vehicle within the driving lane.