


## Road Departure Mitigation (RDM) System\*

A camera mounted between the windshield and the rearview mirror determines if your vehicle begins to cross over detected lane markings while driving between 45 – 90 mph (72–145 km/h).


If you get too close to a detected lane line without using your turn signal, a message appears in the MID.

Steering wheel torque and vibrations are applied to help your vehicle stay in the lane. Braking may also be applied if the lane lines are solid and continuous.

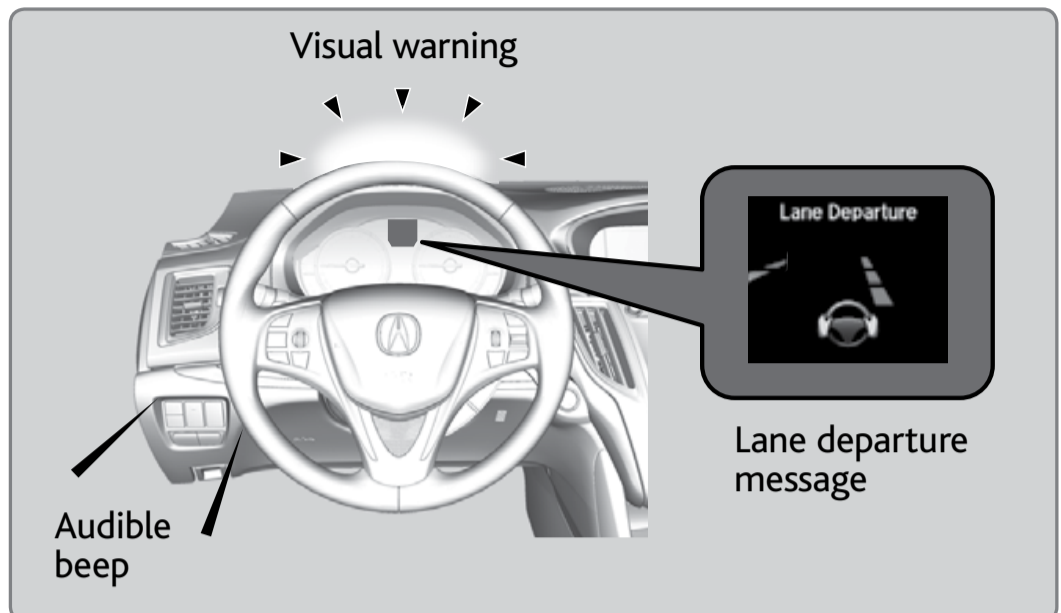

### ■ Turning the System On or Off


Press the RDM button to turn the system on or off. A green indicator appears on the button when the system is on.

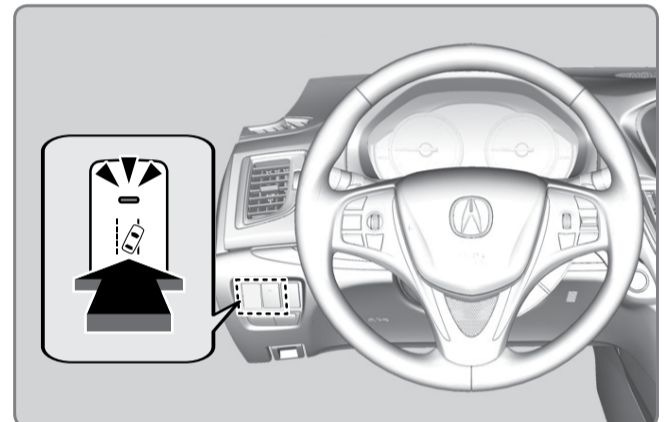

### ■ Changing Settings

Determine the warning timing, or turn the system off. Use the interface dial to make selections.

1. Press SETTINGS.
2. Select Vehicle Settings. The vehicle must be in Park (P).
3. Select Road Departure Mitigation System.
4. Select from the options.

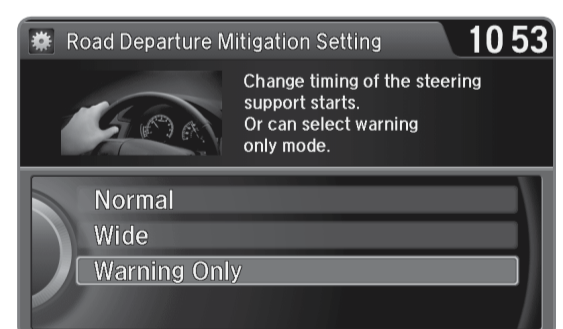

*Normal (default):* Steering control starts from inside the lane edge.

*Wide:* Steering control starts from outside the lane edge.

*Warning Only:* The system only provides a BRAKE message, but does not apply steering or braking.

5. Press BACK to exit the menu.

### Important Safety Reminder

The system has limitations. Overreliance on it may result in a collision. It is always your responsibility to keep your vehicle within the driving lane.

*\*if equipped*