

Super Handling-All Wheel Drive (SH-AWD)*

Controls and transfers varying amounts of engine torque to each wheel depending on driving conditions.

SH-AWD helps enhance stability in driving situations involving slippery surfaces, such as on wet, icy, or snowy roads. The system does not help enhance braking. It is still your responsibility to drive safely when you steer, accelerate, and apply brakes. Leave sufficient distance in front of you when braking on slippery surfaces.

NOTICE

Do not continuously spin the front tires of your vehicle. Continuously spinning the front tires can cause damage to the transmission and SH-AWD unit.

If the SH-AWD light blinks while driving, it indicates the differential temperature is too high. If this happens, pull to the side of the road when it is safe, shift to park, and idle the engine until the indicator goes out.

**if equipped*