

# AUDIO AND CONNECTIVITY

Learn how to operate the vehicle's audio system.


## Basic Audio Operation

Connect audio devices in the front console, and operate buttons and displays for the audio system.

### ■ USB Port

Connect a USB flash drive or other audio device, such as an iPod® or iPhone®.

1. Open the USB cover.
2. Install the iPod dock connector or the USB flash drive into the USB port.

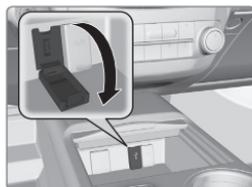


*iPod and iPhone are trademarks of Apple, Inc.*

*State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.*

### ■ Auxiliary Input Jack

Connect standard audio devices with a 1/8-inch (3.5 mm) stereo miniplug.

1. Open the AUX cover.
2. Insert the miniplug attached to the audio device into the jack. The audio system switches to AUX mode. Use the device to control the audio.

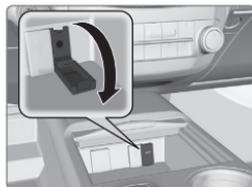

### ■ Accessory Power Socket

Located in the front and center consoles. Open the socket cover to use power when the vehicle is on.



Do not insert an automotive type cigarette lighter element. This can overheat the power socket.

## Steering Wheel Controls

Operate certain functions of the audio system using the steering wheel controls.

**MODE button:** Cycle through available audio modes.

**VOL (▲/▼) buttons:** Adjust audio volume.

**CH (+/-) button:** Change presets, tracks, albums, or folders.



**FM/AM/XM® Radio**

Press (+) or (-) for the next or previous station.

Press and hold (+) or (-) for the next or previous strong station.

**CD/HDD\*/iPod®/USB/Bluetooth® Audio**

Press (+) or (-) for the next or previous track.

Press and hold (+) or (-) for the next or previous folder (CD/USB).

**Pandora®**

Press (+) for the next song.

Press and hold (+) or (-) for the next or previous station.


## Adjusting the Sound

Adjust various sound settings.

**Models without navigation**

Use the selector knob to make and enter selections.

1. Press the SETUP button.
2. Select Sound Settings.
3. Select the setting you want, and adjust it to the desired level.
4. Press the BACK button to exit the menu.

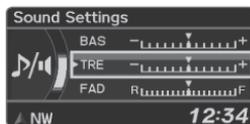

**Models with navigation**

Use the interface dial to make and enter selections.

1. From the audio screen, press the MENU button.
2. Select Sound.
3. Select the setting you want, and adjust it to the desired level.
4. Press the BACK button to exit the menu.





You can also adjust the sound using the ODDM touchscreen. Select More, select Sound, and select the + or - icons to adjust settings. Select X to exit the screen.

Models without navigation

## Color Information Display



Display audio information. Use the buttons to operate the system.

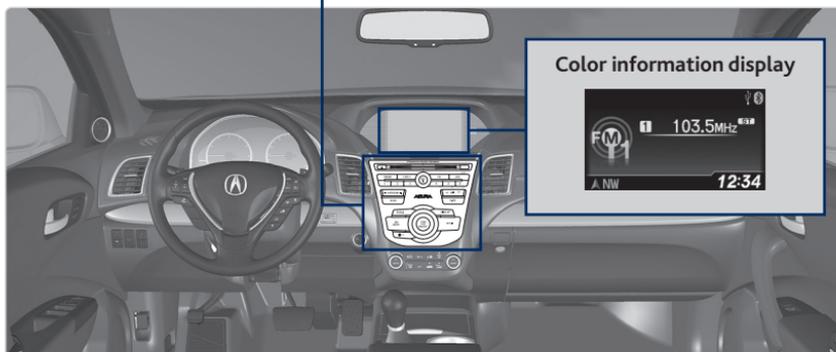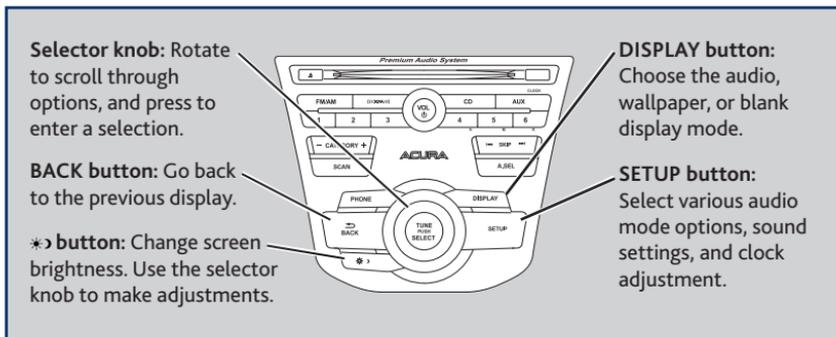

## Models without navigation

## FM/AM Radio


Play FM or AM radio stations.

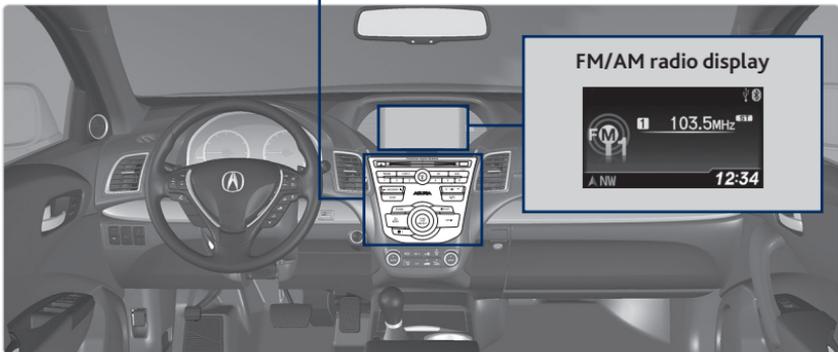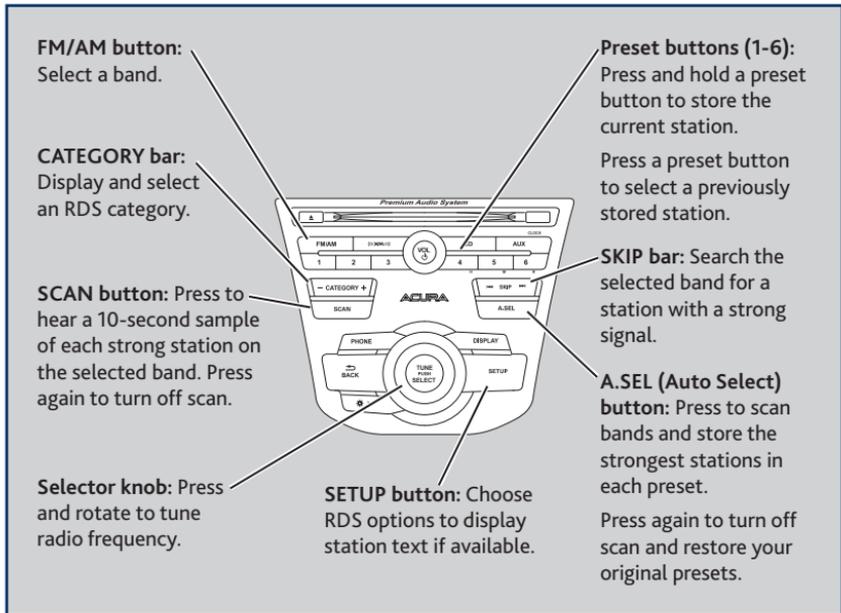

Models without navigation

### SiriusXM® Radio

Available on a subscription basis only. For more information or to subscribe, contact your dealer, or visit [www.siriusxm.com](http://www.siriusxm.com) (U.S.) or [www.siriusxm.ca](http://www.siriusxm.ca) (Canada).

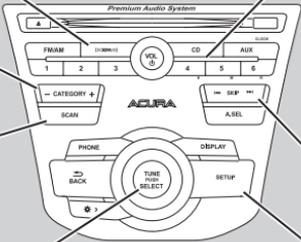

**XM button:** Select XM1 or XM2.

**CATEGORY bar:** Display and select an XM category.

**SCAN button:** Press to hear a 10-second sample of each channel. Press again to turn off scan.

**Selector knob:** Press and rotate to change channels.

**Preset buttons (1-6):** Press and hold a preset button to store the current channel. Press a preset button to select a previously stored station.

**SKIP bar:** Go to the previous or next channel.

**SETUP button:** Choose Channel Mode or Category Mode.





Available in the U.S. and Canada, except Hawaii, Alaska, and Puerto Rico.  
XM® is a registered trademark of Sirius XM Radio, Inc.

## Models without navigation

**Compact Disc (CD)**

Insert a CD to begin playing. The audio system supports audio CDs, CD-Rs, and CD-RWs in MP3, WMA, or AAC formats.

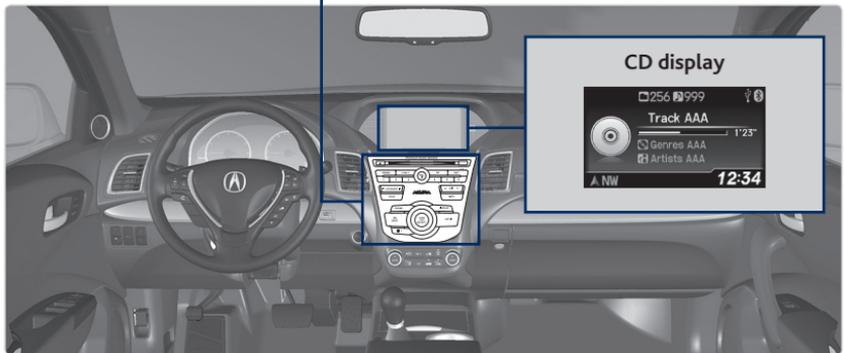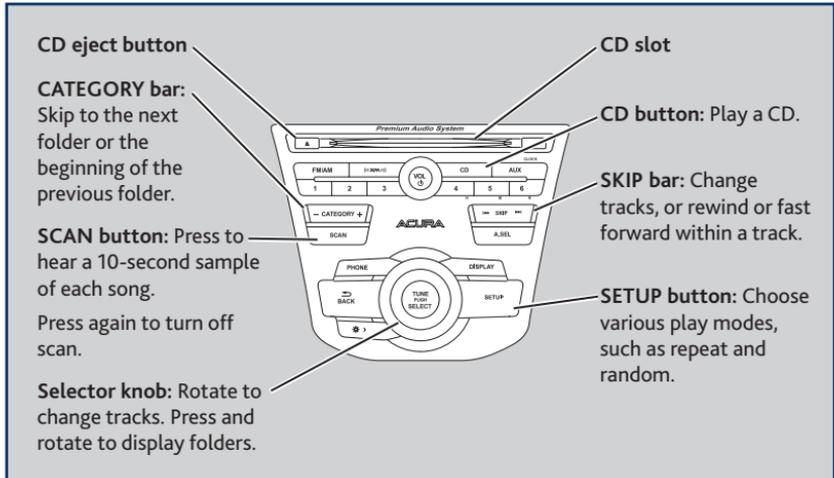


Do not use CDs with adhesive labels or insert a damaged CD. Inserting these types of CDs may cause them to get stuck or damage the audio unit.

Models without navigation

iPod®

Play and operate an iPod through the vehicle's audio system. Connect your device to the USB port.

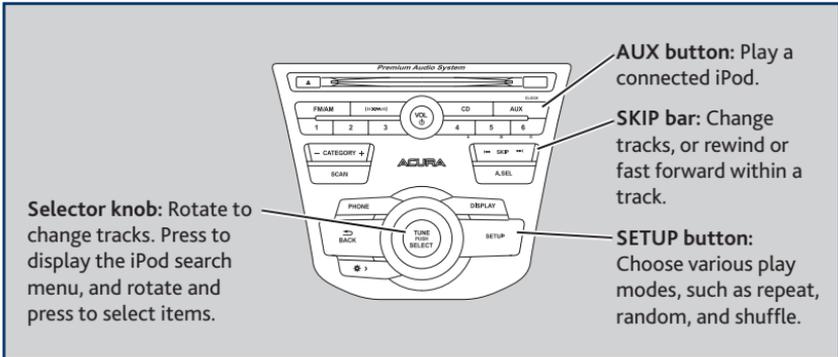

■ Searching for Music

Use the selector knob to search for tracks stored on the iPod using several methods.

1. From the audio screen, press the selector knob to enter the iPod menu.
2. Select a search type (artist, album, track, etc.).
3. Select the song you want to play.




iPod is a trademark of Apple, Inc.

## Models without navigation

## USB Flash Drive

Play and operate a USB flash drive through the vehicle's audio system. Connect your USB flash drive to the USB port.

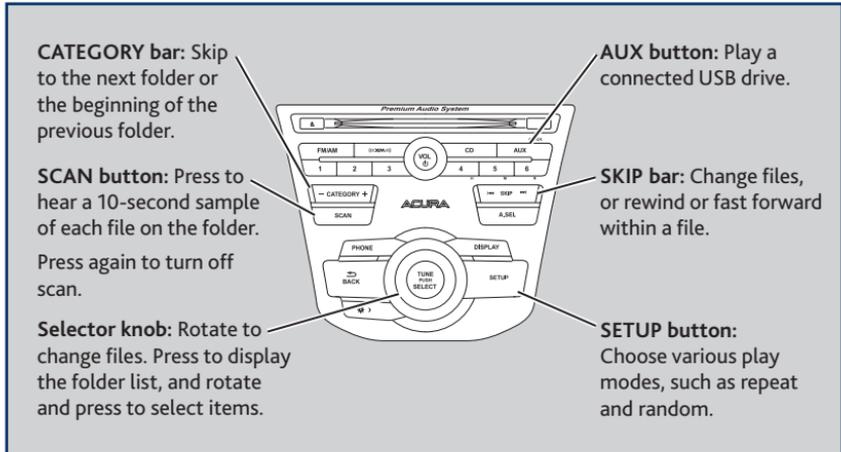

## ■ Searching for Music

Use the selector knob to search for tracks stored on the USB drive using several methods.

1. Press the selector knob to enter the USB menu.
2. Select a folder or file.
3. Select the song you want to play.





## Models without navigation

**Bluetooth® Audio**

Play streaming audio from your compatible phone through your vehicle's audio system. Connect your phone to *Bluetooth®* HandsFreeLink®.

Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink) (U.S.) or [www.handsfreelink.ca](http://www.handsfreelink.ca) (Canada) to check phone compatibility. Standard data rates apply.

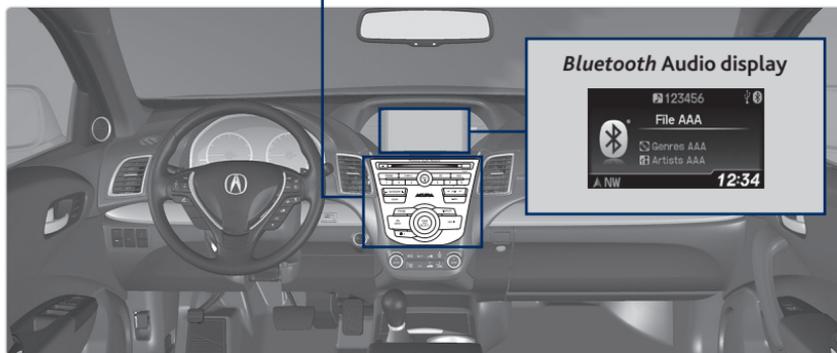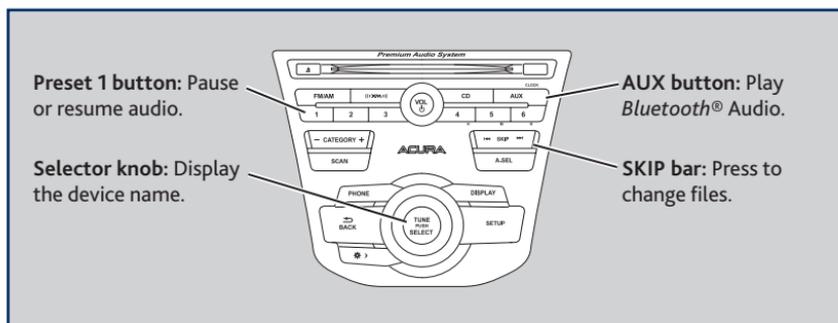**Notes:**

- Make sure the volume on your phone is properly adjusted.
- You may need to enable additional settings on your phone for playback.
- The resume/pause function and remote audio controls are not supported on all phones.

Models with navigation

## On-Demand Multi-Use Display™ (ODMD™)

Operate the audio system using either the touchscreen or dashboard buttons.

The functions shown here can be used with most audio sources. Refer to subsequent audio pages for more specific functions. Options that appear depend on the selected audio source.

### ODMD controls

**Audio Source:** Change the audio source. Select Edit Order to arrange audio icons to your preference.

**Power/volume knob**

**Sound:** Adjust sound settings.

**Shortcuts (Audio tab):** Store or select up to six AM, FM, or SiriusXM stations or HDD tracks.

**More:** Change screen and sound settings, or display menu options.



### Audio buttons

**BACK button:** Return to the previous display.

**\* button:** Adjust the upper screen brightness.

**Interface dial (from the audio screen):** Move up, down, left, and right. Rotate and press ENTER to make selections in the upper display.

**AUDIO button:** Display the audio screen.

**MENU button:** Display menu items.


**SETTINGS button:** Choose Audio Settings.



## Models with navigation

## FM/AM Radio

Play FM or AM radio stations.

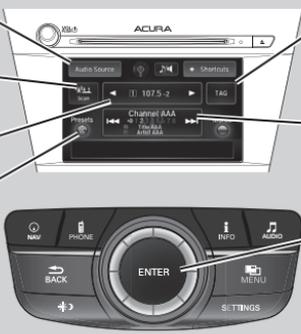

**Audio Source:** Select the FM or AM icon.

**Scan:** Scan for stations with a strong signal.


**Tune bar:** Change the station.

**Presets:** To store a station, tune to the desired station, select Presets, and select and hold the desired preset number. Select a preset station once stored.

**TAG\*:** Tag songs from HD Radio and store to a connected iPod or iPhone.

**Skip/seek bar:** Find a station with a strong signal.



**Interface dial (from the Audio screen):** Select from the station list or presets in the upper display.

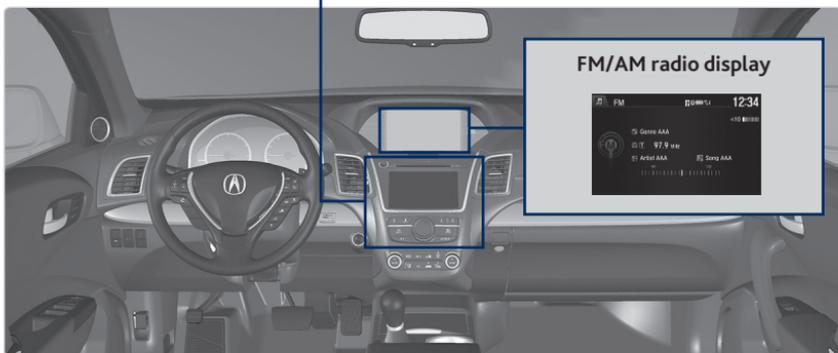

## Models with navigation

**SiriusXM® Radio**

Available on a subscription basis only. For more information or to subscribe, contact your dealer, or visit [www.siriusxm.com](http://www.siriusxm.com) (U.S.) or [www.siriusxm.ca](http://www.siriusxm.ca) (Canada).

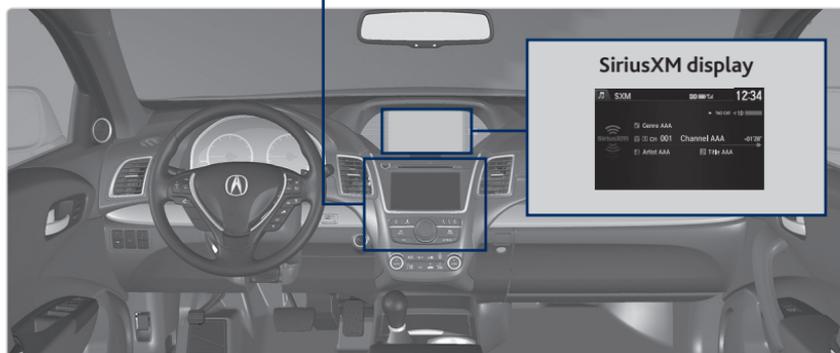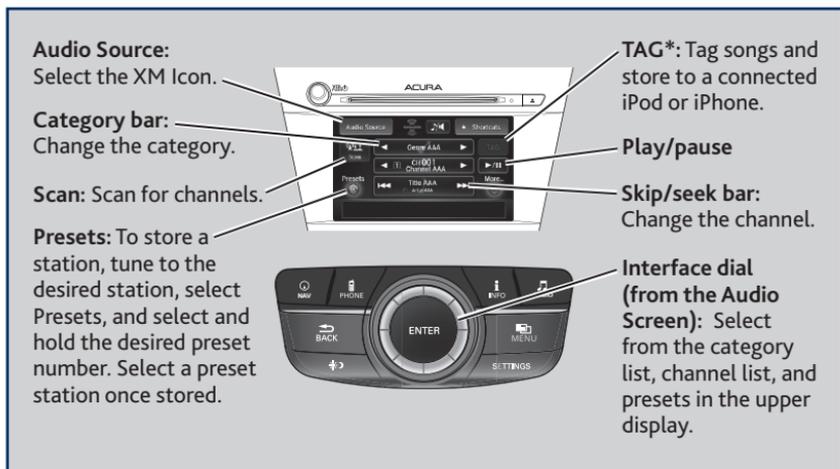

To learn about additional features—such as multi-channel preset, replay, or SportsFlash—see your Navigation Manual on the Owner Information CD or visit [owners.acura.com](http://owners.acura.com) (U.S.) or [myacura.ca](http://myacura.ca) (Canada).

Available in the U.S. and Canada, except Hawaii, Alaska, and Puerto Rico.



XM® is a registered trademark of Sirius XM Radio, Inc.

## Models with navigation

**Compact Disc (CD) or USB Flash Drive**


Insert a CD to begin playing. The audio system supports audio CDs, CD-Rs, and CD-RWs in MP3, WMA, or AAC formats.

Connect your USB flash drive using the USB port (see page 50). The audio system supports MP3, WMA, or AAC files.

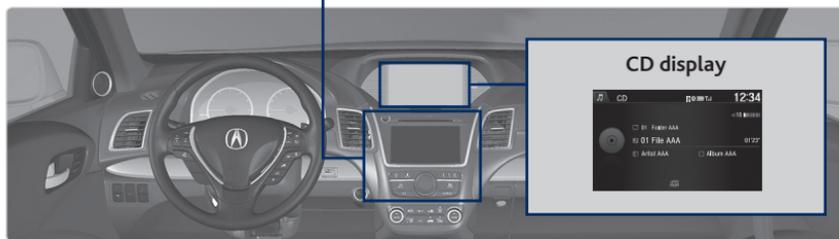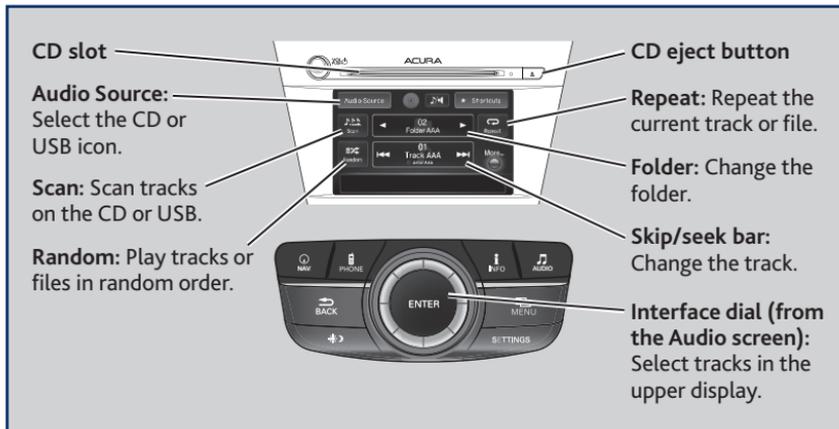**■ Searching for Music**

Use the interface dial to search for tracks on the CD or USB.

1. From the audio screen, press MENU.
2. Select Music Search.
3. Select a search type (artist, album, track, etc.) or folder.
4. Select the song you want to play.


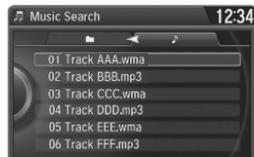


Do not use CDs with adhesive labels or insert a damaged CD. Inserting these types of CDs may cause them to get stuck inside or damage the audio unit.

## Models with navigation

**Hard Disc Drive (HDD) Audio**

When music CDs are inserted, they are automatically recorded by system default onto the built-in HDD for later playback.

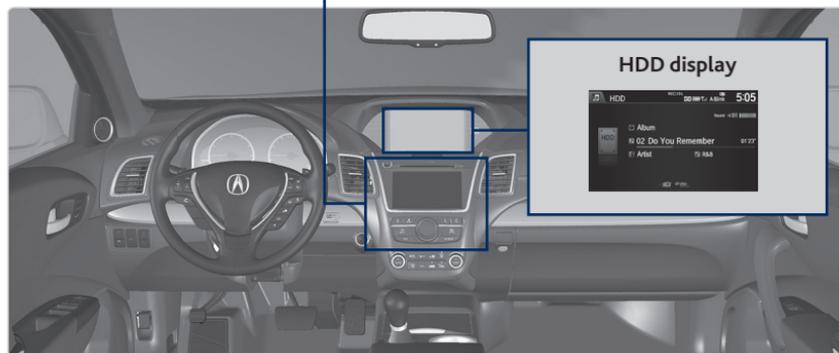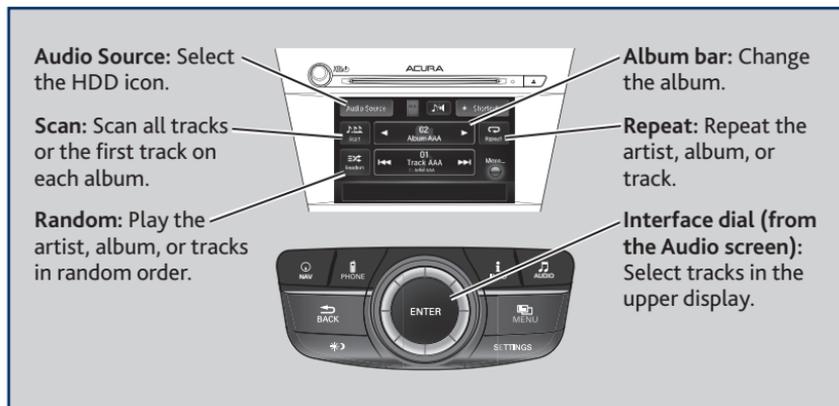**■ Searching for Music**

Use the interface dial to search for tracks using several methods.

1. From the audio screen, press MENU.
2. Select Music Search.
3. Select a search type (artist, album, track, etc.).
4. Select the song you want to play.





You can also search for and play HDD music using Song By Voice™ (see page 151).

## Models with navigation

**iPod®**

Play and operate an iPod through the vehicle's audio system. Connect your device to the USB port.

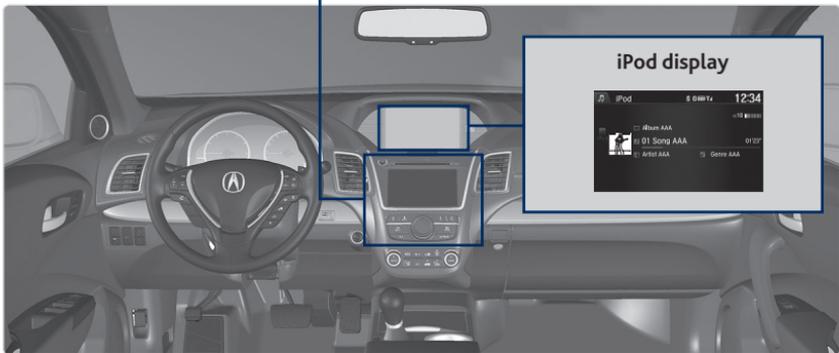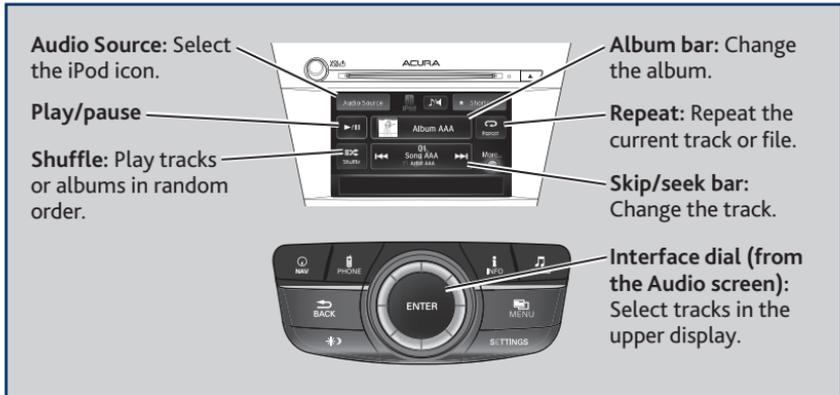

### ■ Searching for Music

Use the interface dial to search for tracks using several methods.

1. From the audio screen, press MENU.
2. Select Music Search.
3. Select a search type (artist, album, track, etc.).
4. Select the song you want to play.





You can also search for and play iPod music using Song By Voice™.

Models with navigation

**Bluetooth® Audio**

Play streaming or stored audio from your compatible phone through your vehicle's audio system. Connect your phone to **Bluetooth® HandsFreeLink®**.

Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink) (U.S.) or [www.handsfreelink.ca](http://www.handsfreelink.ca) (Canada) to check phone compatibility. Standard data rates apply.

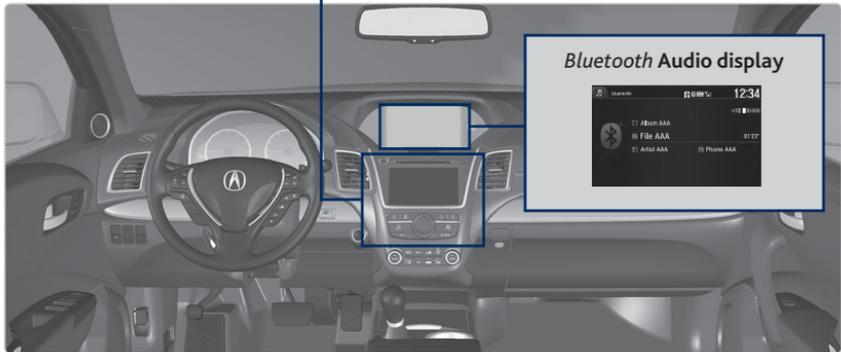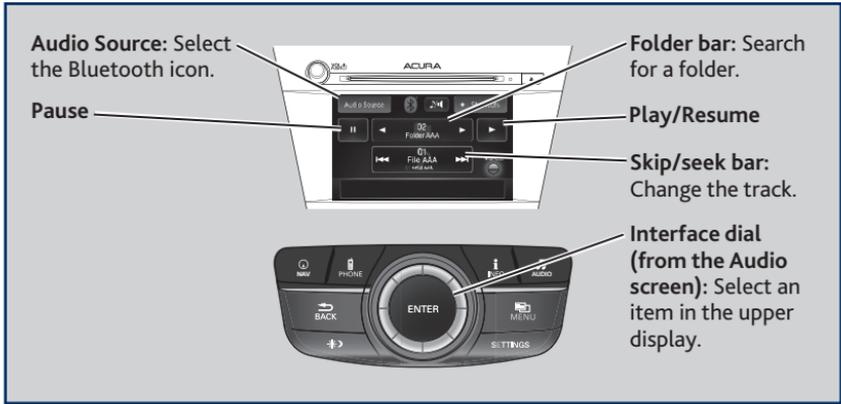

**Notes:**

- Make sure the volume on your phone is properly adjusted.
- You may need to enable additional settings on your phone for playback.
- The resume/pause function and remote audio controls are not supported on all phones.

*State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle. Only launch streaming audio on your phone when safe to do so.*