

■ Car Wash Mode

If you are driving through a conveyor-style car wash where you or the attendant do not remain in the vehicle, follow these steps while the engine is on:

1. Press and hold the brake pedal.
2. Select N.
3. Press the N button again and hold it for two seconds.

The vehicle will enter car wash mode. If the ENGINE STOP/START button is pressed after car wash mode has been activated, the power mode will change to ACCESSORY for 15 minutes, the gear position will remain in N and the power mode will remain in ACCESSORY. After 15 minutes, the position automatically changes to (P) and the power mode changes to OFF.