


Driving Position Memory System

You can store two driver's seat (except for power lumbar), positions with the driving position memory system.

When you unlock and open the driver's door with a remote transmitter, or keyless access system, the seat adjusts to retracted positions of one of the two preset positions automatically.

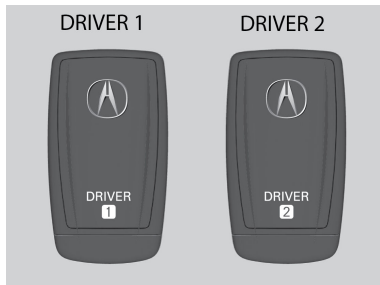

Storing a Position in Memory

1. Adjust the seat, to your preferred positions.
2. Press SET.
3. Press and hold memory button 1 or 2 within 5 seconds of pressing the SET button.

You will hear two beeps when the memory is set.

4. Press one of the memory buttons to recall previously stored positions.

