

# AUDIO AND CONNECTIVITY

Learn how to operate the vehicle's audio system.

## Basic Audio Operation

Connect audio devices and operate buttons and displays for the audio system.


You can operate the audio system from the remote controls on the steering wheel, or the icons on the On Demand Multi-Use Display™.

### ■ USB Port

Install the device USB connector or the USB flash drive to the USB port (2.5A).

#### In the front console compartment

The USB port (2.5A) is for charging devices, playing audio files and connecting compatible phones with Apple Carplay™ or Android Auto™.

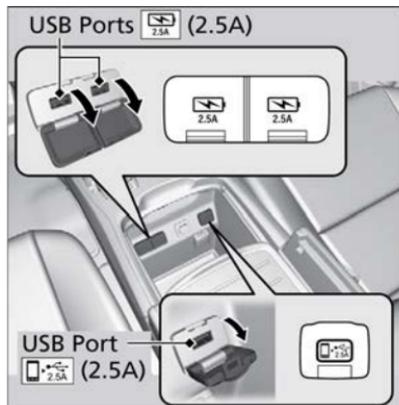

### Models without rear console compartment

#### On the back of the front console compartment

The USB ports (2.5A) are only for charging devices.



### Models with rear console compartment


#### In the rear console compartment

The USB ports (2.5A) are only for charging devices.



#### On the back of the rear console compartment

The USB ports (2.5A) are only for charging devices.

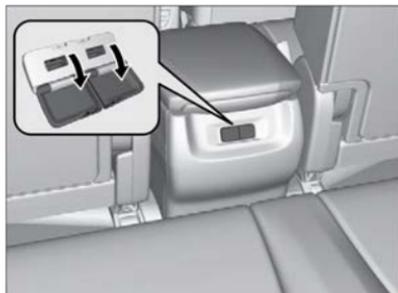

### ■ Accessory Power Socket

The accessory power sockets can be used when the power mode is in ACCESSORY or ON.

**Accessory power socket (center pocket)**

Open the lid and the cover to use it.

**Accessory power socket (front console compartment)\*1**

Pull the handle and open the cover to use it.

**Accessory power socket (cargo area)**

Open the cover to use it.

**NOTICE**

Do not insert an automotive type cigarette lighter element. This can overheat the power socket.



■ **Audio Remote Controls**

You can operate certain functions of the audio system using the steering wheel controls.

**SOURCE Button**

Cycles through the audio modes


**Left Selector Wheel**

**Roll Up:** To increase the volume.

**Roll Down:** To decrease the volume.

**Push:** To mute. Push again to unmute.

**When listening to the radio**

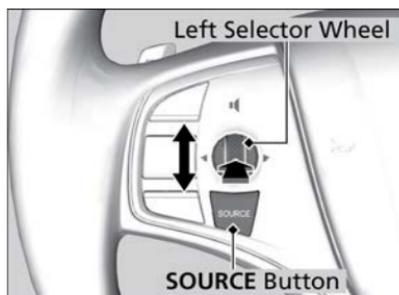

\*1 - If equipped

**Move to the right:** To select the next preset radio station.

**Move to the left:** To select the previous preset radio station.

**Move to the right and hold:** To select the next strong station.

To select the next channel. (SiriusXM® only)

**Move to the left and hold:** To select the previous strong station.

To select the previous channel. (SiriusXM® only)

**When listening to a CD, HDD\*1, iPod®, USB flash drive, or Bluetooth® Audio**

**Move to the right:** To skip to the next song.

**Move to the left:** To go back to the beginning of the current or previous song.

**Move to the right and hold:** To go to the next folder. (Bluetooth® Audio only)

**Move to the left and hold:** To go to the previous folder. (Bluetooth® Audio only)

**When listening to a CD, HDD\*1 or USB flash drive**

**Move to the right and hold:** To skip to the next folder.

**Move to the left and hold:** To go back to the previous folder.

**When listening to Pandora®\*13 \*1**

**Move to the right:** To skip to the next song.

**Move to the right and hold:** To select the next track.

**Move to the left and hold:** To select the previous station.

### ■ Adjusting the Sound

Adjust various sound settings.

1. Select Audio Menu, then select Sound Settings.
2. Select the Bass, Treble, Fader, Balance, Center, Subwoofer, SVC (Speed-sensitive Volume Compensation) or DTS Neural Surround.
3. Use +, - or other icons to adjust the setting



\*1 - If equipped

\*13 - US models only, if equipped