


## Climate Control System

The automatic climate control system can maintain your preferred interior temperature by selecting the proper mix of heated or cooled air and fan speed.

There is a system to cool the High Voltage battery. When that system is active, you may notice reduced cooling capability in the cabin.

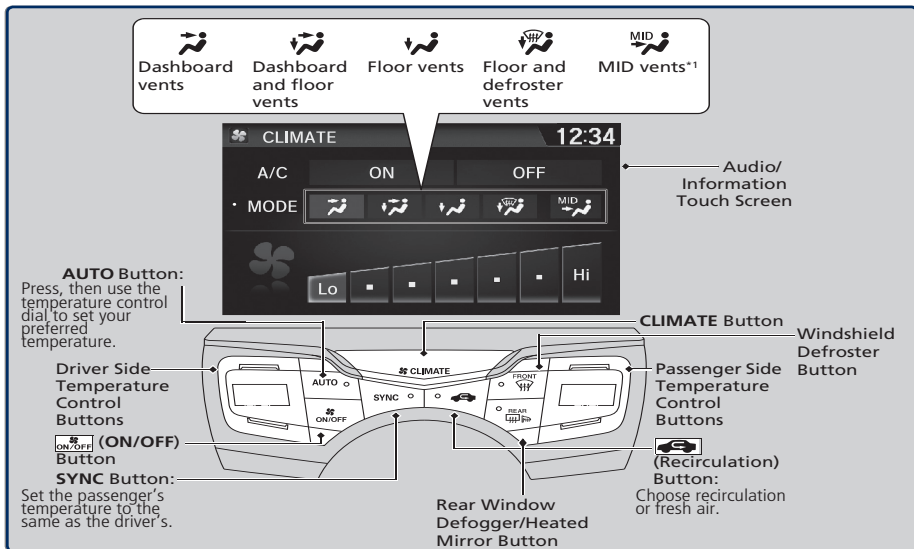

\*MID vents provide supplemental air to the lower body of the occupant(s). MID vents can be used together with any other vent.

## Seat Heaters\*

Quickly warm the seats when the vehicle is on.

### ■ Front Seat Heaters


Press the seat heater button. An indicator in the switch appears for the selected setting.

**Press once:** High setting (three indicators)

**Press twice:** Middle setting (two indicators)

**Press three times:** Low setting (one indicator)

**Press four times:** Off setting (no indicators)

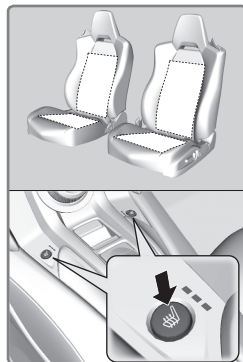

### WARNING

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.

*\*if equipped*