

Setting the Clock

On vehicles with navigation, the time is automatically set using GPS signals.

VEHICLE CONTROLS

On vehicles without navigation, use the following steps to adjust the time in the clock display.

1. Press the **Home** button.
2. Select **Settings**, then press touchpad A.
3. Select **System**, then press touchpad A.
4. Select **Date & Time**, then press touchpad A.
5. Select **Set Date & Time**, then press touchpad A.
6. Select **Set Time**, then press touchpad A.
7. Select **+/-**, then press touchpad A.
8. Press the **Back** button to set the time.