



**Adaptive Cruise Control with Low Speed Follow (ACC with LSF):** Helps maintain a constant vehicle speed and a set following-interval behind a vehicle detected ahead of yours and, if the detected vehicle comes to a stop, can decelerate and stop your vehicle, without you having to keep your foot on the brake or the accelerator.

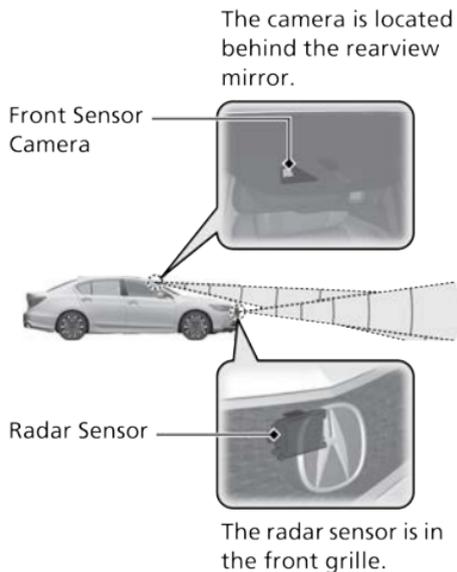

## **Adaptive Cruise Control (ACC) with Low Speed Follow (LSF)**

Helps maintain a constant vehicle speed and a set following interval behind a vehicle detected ahead of yours and, if the detected vehicle comes to a stop, can decelerate and stop your vehicle, without you having to keep your foot on

the brake or the accelerator. When ACC with LSF slows your vehicle by applying the brakes, your vehicle's brake lights will illuminate.

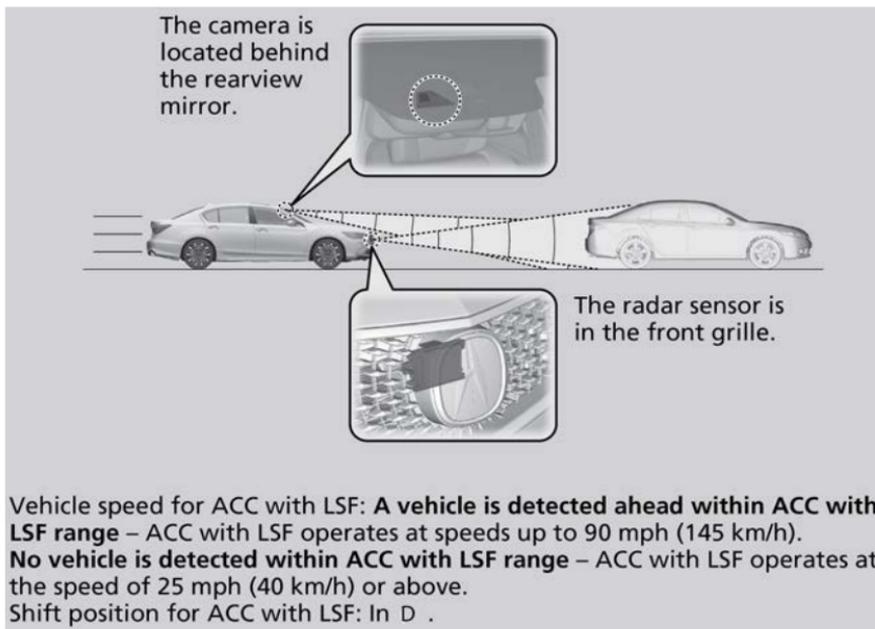

## ■ Activating and Setting the Vehicle Speed

1. Press the Main button on the steering wheel.
2. **When driving at about 25 mph (40 km/h) or above:**

Take your foot off the pedal and press down the RES/+ / SET/- switch when you reach the desired speed. The moment you release the switch, the set speed is fixed, and ACC with LSF begins.


**When driving slower than about 25 mph (40 km/h):**

If the vehicle is moving and the brake pedal is not depressed, pressing the switch fixes your set speed to about 25 mph (40 km/h) regardless of current vehicle speed. If your vehicle is stationary, you can set the vehicle speed even with the brake pedal depressed.



## ■ Adjusting the Vehicle Speed


Increase or decrease the vehicle speed using the RES/+ / SET/- switch on the steering wheel.

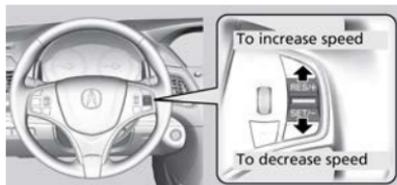

- Each time you press the switch up or down, the vehicle speed is increased or decreased by about 1 mph or 1 km/h accordingly.
- If you keep pressing the switch up or down, the vehicle speed increases or decreases by about 5 mph or 5 km/h accordingly.

## ■ Adjusting the Vehicle Distance


Press the Interval button to change the following interval. Each time you press the button, the setting cycles through extra long, long, middle, and short.

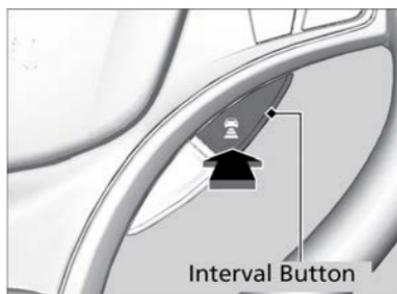

## ■ During Operation

If a vehicle is detected ahead of you when ACC is turned on, the system maintains, accelerates, or decelerates your vehicle's set speed to keep the vehicle's set following interval from the vehicle ahead.

If a vehicle detected ahead of you slows down abruptly, or if another vehicle cuts in front of you, a beep sounds and BRAKE appears on the multi-information display to alert you .

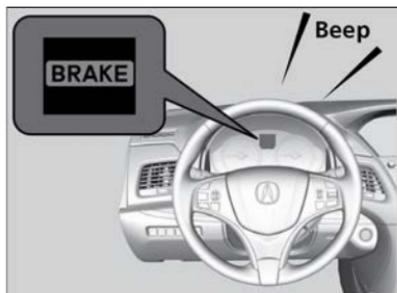

### ⚠ WARNING

ACC has limited braking capability.


When your vehicle speed drops below 22 mph (35 km/h), ACC will automatically cancel and no longer will apply your vehicle's brakes.

Always be prepared to apply the brake pedal when conditions require.

## ■ Canceling ACC

You can press the CANCEL button, MAIN button or the brake pedal. The ACC with LSF indicator goes off.

Certain conditions may cause ACC to cancel automatically. When this happens, appears on the multi-information display.

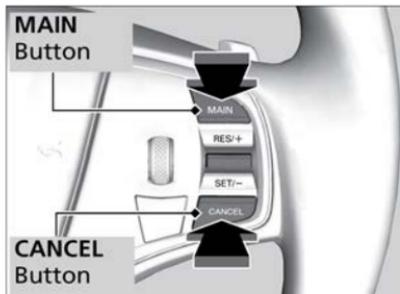

### **⚠ WARNING**

Improper use of ACC can lead to a crash.

Use ACC only when traveling on open highways in good weather.

#### ■ Switching to Standard Cruise Control

Press and hold the Interval button for one second.

**Cruise Mode Selected** appears in the multi-information display for two seconds, and then the mode switches to Cruise.. Press and hold the interval button again to switch back to ACC with LSF. **ACC Mode Selected** appears on the multi-information display for two seconds.

