

BLUETOOTH® HANDSFREELINK®


Learn how to operate the vehicle's hands-free calling system.

Basic HFL Operation

Bluetooth® HandsFreeLink® allows you to place and receive phone calls using your vehicle's navigation system, without handling your cell phone.

■ HFL Displays and Controls

Use the controls to enter information and make selections.

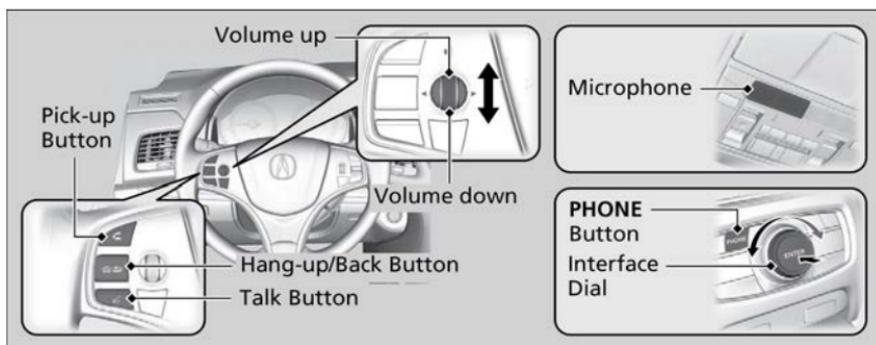

Pick-up button: Press to go to the Speed Dial/Call History on the multi-information display or to answer an incoming call.

Hang-up/back button: Press to end a call, to cancel a command or to clear the phone information on the multi-information display.

Talk button: Press to give HFL voice commands.

PHONE button: Press to go directly to the Phone screen.

Interface dial: Select an item on the screen, then select secondary menu.

■ Talk Button Tips

When using the Talk button, wait for the beep before saying a command. The system recognizes only the commands listed in the Voice Command Index.

- Aim the vents away from the ceiling and close the windows, as noise coming from them may interfere with the microphone.
- Press and release the talk button when you want to call a number using a stored voice tag. Speak clearly and naturally after a beep.
- If the microphone picks up voices other than yours, the command may be misinterpreted.
- To change the volume level, use the audio system's volume knob or the remote audio controls*1 on the steering wheel.

Pairing a Phone

To use hands-free phone and streaming audio functions, you must first pair your phone to the system. This can only be done when the vehicle is stopped.

■ Pairing the First Phone

1. Press the **Phone** button to go to the Phone screen. A prompt appears. Select **Yes**.
2. Make sure your phone is in discovery mode. Select **OK**.
3. The system searches for your phone. Select your phone when it appears on the list.
4. If your phone does not appear:
If your phone does not appear, you can select Refresh to search again. If your phone still does not appear, Select Phone Not Found? and search for HandsFreeLink from your phone. Connect to HFL.
5. The system gives you a pairing code. Compare it to the code that appears on your phone. Connect to HFL from your phone.
6. You will receive a notification on the screen if pairing is successful.



*1 - If equipped

Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle.

Making a Call

You can make calls by inputting any phone number, or by using the imported phonebook, call history, speed dial entries, or redial.

■ Dialing a Number

1. Press the **PHONE** button.
2. Press the **MENU** button.
3. Select **Dial**, then select a number.
4. Select Phone and dialing starts automatically.



■ Using the Phonebook

1. Press the **PHONE** button.
2. Press the **MENU** button.
3. Select **Phonebook**.
4. Move the selector knob to **Search**.
You can use the keyboard on the touch screen for an alphabetical search.
5. Select a number.



■ Storing Speed Dial Entries

Store up to 20 numbers for quick dialing. Use the selector knob to make and enter selections. To store a speed dial number:

1. Press the **PHONE** button.
2. Press the **MENU** button.
3. Select **Speed Dial**.
4. Select a place to choose a number from.

From Import from Call History:

Select a number from the call history.

From Manual Input:

Input the number manually.

From Import from Phonebook:

Select a number from the linked cell phone's imported phonebook.

5. When the speed dial is successfully stored from **Import from Call History** or **Import from Phonebook**, you are asked to create a voice tag for the number. Select **Yes** or **No**.
6. Follow the prompts to store a voice tag for the speed dial entry.



■ Using Speed Dial

Make calls quickly using stored speed dial entries or call history numbers.

1. Press the **PHONE** button.
2. Press the **MENU** button.
3. Select Speed Dial. Select a number and dialing starts automatically.



SMS Text Messaging and E-Mail*¹

Certain phones can receive and send text messages and e-mails while paired and linked. Visit handsfreelink.com (US) (U.S.) to check phone compatibility.

Standard message rates apply. This feature is limited while the vehicle is moving.

1. Press the **SETTINGS** button.
2. Select **Phone Settings**.
3. Select the **Text/Email** tab.
4. Select **Enable Text/Email**.
5. Select **On** or **Off**.

