


Head-Up Display*1

Shows the power distribution monitor, current mode for ACC with LSF, LKAS, and traffic jam assist, tachometer, gear position indicator, or turn-by-turn directions along with the vehicle speed. You can choose which item to be displayed using the multi-information display. They are displayed when the power mode is in ON.

**1 - If equipped*

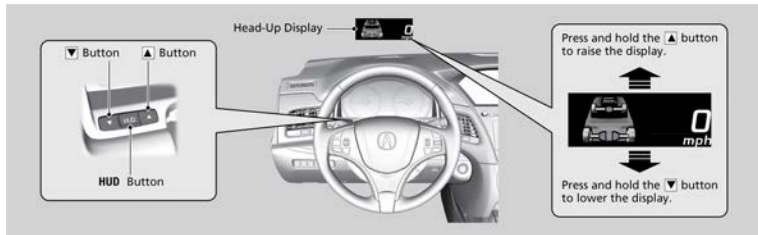

To turn the head-up display on and off: Press the HUD button. The display can be moved up and down to come level with your eyes.

To raise or lower the head-up display: Press and hold the up or down button until the desired position is reached.