

## Climate Control System




The automatic climate control system maintains the interior temperature you select. The system also selects the proper mix of heated or cooled air that raises or lowers the interior temperature to your preference as quickly as possible.

Climate control operation is affected during auto idle stop operation<sup>\*1</sup> See Auto Idle Stop\*

*\*1 - If equipped*

**On-Demand Multi-Use Display (ODMD)**

When you select a climate control icon, a new screen appears where you can make adjustments or change settings.

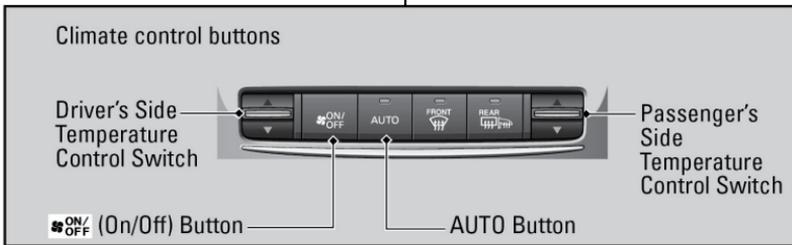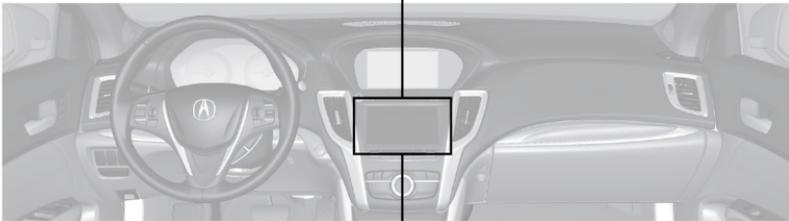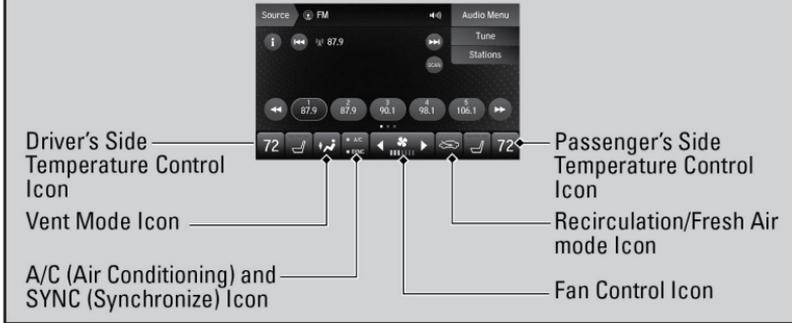

■ **Heated Windshield Button\*4**

Turn the vehicle on. Press the heated windshield button to de-ice the windshield.


The heated windshield may automatically activate when the outside temperature is below 4°C, and deactivate when the temperature reaches 6°C.

■ **Heated Steering Wheel\*1**

Press the button to heat the steering wheel when the vehicle is on. Press the button again to turn off the heating.

\*4 - Canadian models only, if equipped

\*1 - If equipped

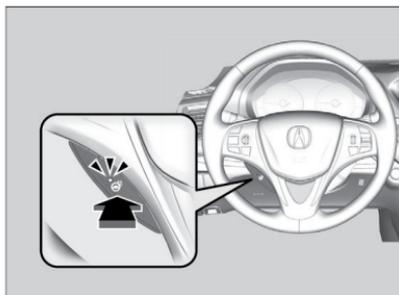

## Seat Heaters and Ventilation\*1

Quickly warm or cool the seats when the vehicle is on.

### ■ Front Seat Heaters

The vehicle must be ON to use the seat heaters. Change the setting with one of the following icons:

- Low icon: one indicator on
- Mid icon: two indicators on
- High icon: three indicators on
- Auto: The system automatically selects the setting most suitable to the ambient environment.
- Off: Turn off the system.

#### Models with seat ventilation



#### Models without seat ventilation



### ⚠ WARNING

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.


### ■ Rear Seat Heaters\*1

Use the buttons on the rear of the center console to operate the rear outer seat heaters.

*\*1 - If equipped*

## VEHICLE CONTROLS

Press either seat heater button to toggle through the HI, MID, LO, or OFF settings. The appropriate indicator appears for each setting.

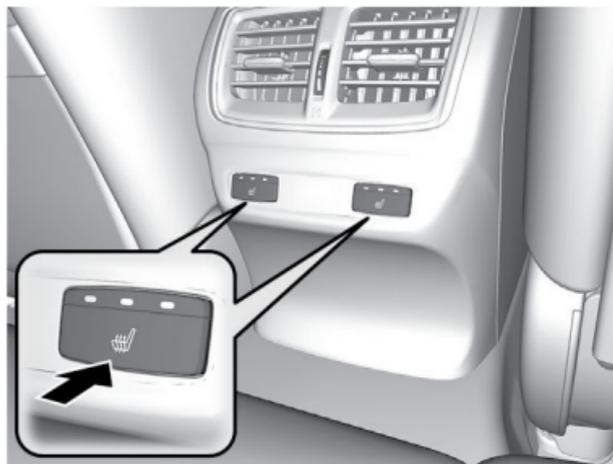

### **⚠ WARNING**

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.