

### Remote Engine Start<sup>\*1</sup>

Start your vehicle's engine using the remote transmitter before you enter the vehicle.

Make sure the vehicle is in a safe location when using remote engine start (i.e., a well-ventilated area, away from any flammable materials).

#### ■ Starting the Engine

- The engine runs for up to 10 minutes. To extend the run time for another 10 minutes, repeat the procedure during the initial 10 minutes.

*\*1 - If equipped*

- While the engine is running, the climate control system adjusts the cabin temperature, the security system remains on, and lights and accessories remain off.

### ■ Stopping the Engine

Press and hold the Engine button.

The engine will also stop if it has been running for more than 10 minutes, or if any door is opened without using the remote transmitter or keyless access.

#### **WARNING**

Carbon monoxide gas is toxic and can rapidly accumulate in closed or even partly enclosed areas.

Breathing it can cause unconsciousness and even kill you.


Never use the remote engine starter with the vehicle parked in a garage or other areas with limited ventilation.

# VEHICLE CONTROLS

Learn about the various controls necessary for operating and driving the vehicle.

## Using the Remote Transmitter

Lock or unlock the doors, and trunk.

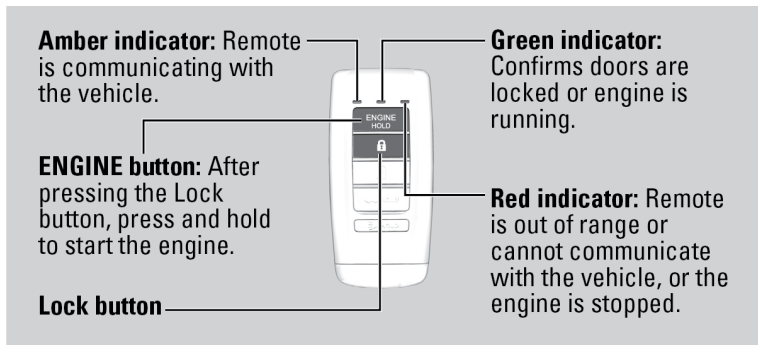

## NOTICE

Leaving the remote transmitter in the vehicle can result in theft or accidental movement of the vehicle. Always take it with you whenever you leave the vehicle unattended.