

■ Reverse Tilt Door Mirrors

If activated, either side door mirror automatically tilts downward when you put the transmission into R (Reverse); this improves close-in visibility on the selected side of the vehicle when backing up. The mirror automatically returns to its original position when you take the transmission out of R (Reverse).

To activate this feature, set the power mode to ON and slide the selector switch to the left or right side.

