

Cruise Control

Maintain a constant vehicle speed without having to keep your foot on the accelerator pedal. Use cruise control on freeways or open roads where you can travel at a constant speed with little acceleration or deceleration.

When to use


- Vehicle speed for cruise control:
Desired speed in a range above roughly 25 mph (40 km/h) ~
- Gear positions for cruise control:
In D (Drive) or M (Manual)
- Integrated Dynamics System modes for cruise control: QUIET, SPORT, SPORT+ mode

Always keep sufficient distance between you and the vehicle in front of you.




■ Activating and Setting the Vehicle Speed

1. Press the CRUISE button. The CRUISE MAIN indicator appears.

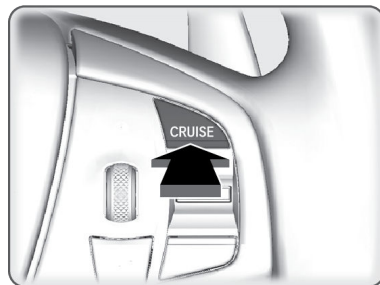


2. Accelerate to the desired speed (above 25 mph/ 40 km/h). Take your foot off the pedal and press the RES/+ / SET/- button to set the speed. The CRUISE CONTROL indicator appears.

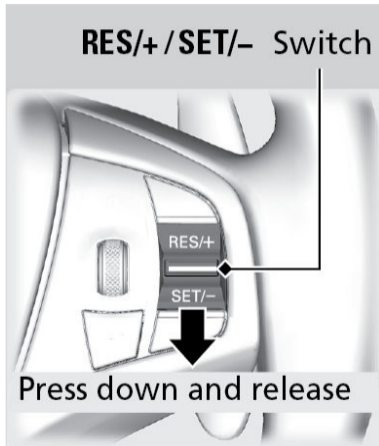

■ Adjusting the Vehicle Speed

Press the RES/+ button to increase speed or the -/SET button to decrease speed.


Each time you press the switch up or down, the vehicle speed is increased or decreased by about 1 mph (1.6 km/h). If you keep the switch pressed up or down pressed, the vehicle speed increases or decreases until you release it.

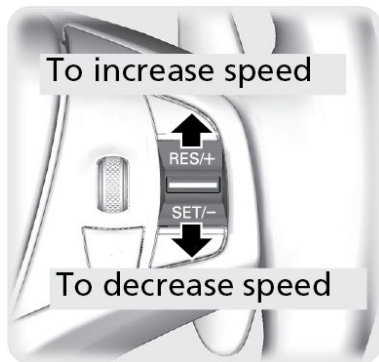

■ Canceling Cruise Control

Press the CANCEL button, the MAIN button or the brake pedal. The CRUISE CONTROL indicator goes off.

After cruise control has been canceled, you can still resume the prior set speed by pressing the RES/+ / SET/- switch up while

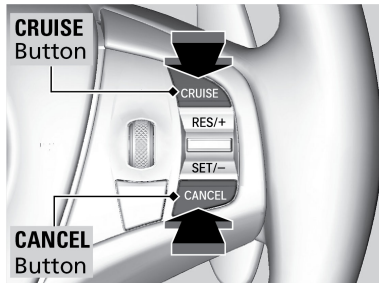

DRIVING

driving at a speed of at least 25 mph (40 km/h).

⚠ WARNING

Improper use of cruise control can lead to a crash.

Use cruise control only when traveling on open highways in good weather.