


## Maintenance Minder™

When the engine oil life is less than 15%, a Maintenance Minder message will appear every time you set the power mode to ON, reminding you to bring your vehicle to an authorized Acura NSX dealer for service. Roll the right selector wheel on the steering wheel to change displays.

## MAINTENANCE

---

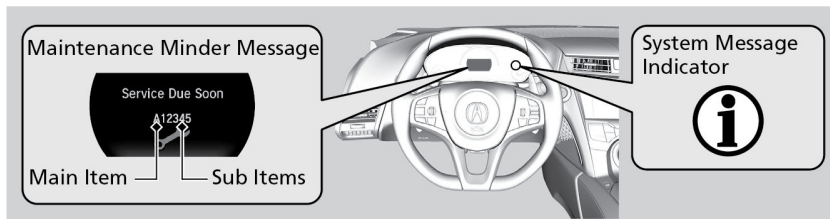

- Independent of the Maintenance Minder information, replace the brake fluid every 3 years.
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.
- Inspect direct injection + port injection fuel system every 3 years or service item B is indicated.
- Inspect tire condition every 3,100 miles (5,000 km).

### U.S. Models

**Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are "certified" to EPA standards.**

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the Driver Information Interface.

## ■ Maintenance Minder Service Codes

These codes indicate what services are due on your vehicle.

CODE	Maintenance Main Items
A	<ul style="list-style-type: none"><li>• Replace engine oil *1</li></ul>
B	<ul style="list-style-type: none"><li>• Replace engine oil *1 and oil filter</li><li>• Inspect front and rear brakes</li><li>• Check expiration date for temporary tire repair kit bottle</li><li>• Inspect tie rod ends, steering gearbox, and boots</li><li>• Inspect suspension components</li><li>• Inspect driveshaft boots</li><li>• Inspect brake hoses and lines (Including ABS/VSA®)</li><li>• Inspect all fluid levels and condition of fluids</li><li>• Inspect exhaust system #</li><li>• Inspect fuel lines and connections #</li><li>• Inspect direct injection + port injection fuel system</li></ul>

\*1: If a message **SERVICE** does not appear more than 12 months after the display is reset, change the engine oil every year.

#: See information on maintenance and emissions warranty.

## MAINTENANCE

---

CODE	Maintenance Sub Items
1	<ul style="list-style-type: none"><li>• Inspect tire condition</li></ul>
2	<ul style="list-style-type: none"><li>• Replace air cleaner element*<sup>2</sup></li><li>• Replace dust and pollen filters*<sup>3</sup></li></ul>
3	<ul style="list-style-type: none"><li>• Replace transmission fluid*<sup>4</sup></li><li>• Replace clutch fluid*<sup>4</sup></li></ul>
4	<ul style="list-style-type: none"><li>• Replace spark plugs</li><li>• Inspect valve clearance</li><li>• Inspect Active Exhaust Valve function</li><li>• Replace Intake Sound Control</li></ul>
5	<ul style="list-style-type: none"><li>• Replace engine coolant</li></ul>
6	<ul style="list-style-type: none"><li>• Replace Twin Motor Unit fluid*<sup>5</sup></li></ul>

\*2: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).

\*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filters every 15,000 miles (24,000 km) or every year.

\*4: Driving in mountainous areas at very low vehicle speeds results in higher transmission temperature. This requires transmission fluid and clutch fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under this condition, have the transmission fluid and clutch fluid changed every 20,000 miles (32,000 km).

\*5: Driving in mountainous areas at very low vehicle speeds results in higher level of mechanical (Shear) stress to fluid. This requires Twin Motor Unit fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the Twin Motor Unit fluid changed at 7,500 miles (12,000 km), then every 15,000 miles (24,000 km).