

### Setting the Clock

On vehicles with navigation, the time is automatically set using GPS signals.

On vehicles without navigation, use the following steps:

1. Press the **Home** button.
2. Select **Settings**, then press touchpad A.
3. Select **System**, then press touchpad A.
4. Select **Date & Time**, then press touchpad A.
5. Select **Set Date & Time**, then press touchpad A.
6. Select **Set Time**, then press touchpad A.
7. Select **+/-the Up or Down arrow**, then press touchpad A.
8. Press the **Back** button to set the time.

