


## Remote Engine Start \*4

Start your vehicle's engine using the remote transmitter before you enter the vehicle.

### ■ Starting the Engine

Press the Lock button, then press and hold the ENGINE HOLD button.

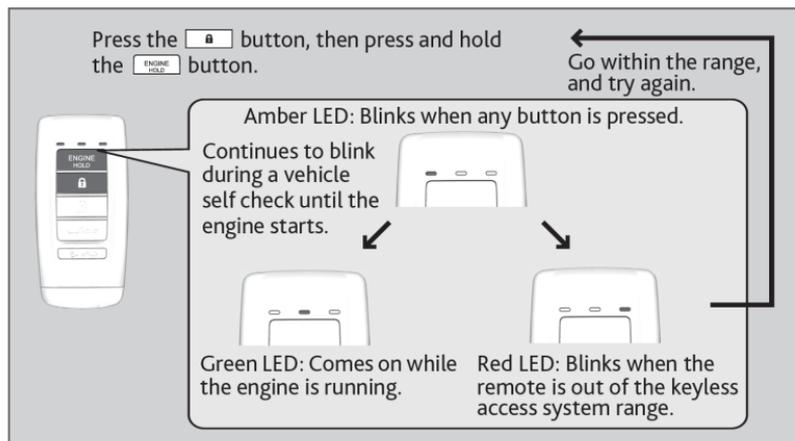

- The engine runs for up to 10 minutes. To extend the run time for another 10 minutes, repeat the procedure during the initial 10 minutes.
- The amber LED blinks, then the green LED comes back on if a 10-minute extension request was transmitted successfully.
- After pressing the (lock) button, wait for the green LED to blink. This indicates that the all the doors and the tailgate are locked.

### ■ Stopping the Engine

When started remotely, the engine shuts off after 10 minutes of idling. It will also stop if the ENGINE START/STOP button and the brake are pressed individually.

\*4 - Canadian models only, if equipped

Press and hold the  button for one second.

Amber LED: Blinks when any button is pressed.

Red LED:

- Comes on for one second to let you know that the engine has stopped.
- Blinks when the remote is out of the keyless access system range. The engine will not stop.

Go within the range, and try again.



### **WARNING**

Engine exhaust contains carbon monoxide.

Breathing carbon monoxide can kill you or cause unconsciousness.

Never use the remote engine starter with the vehicle parked in a garage or other areas with limited ventilation.