
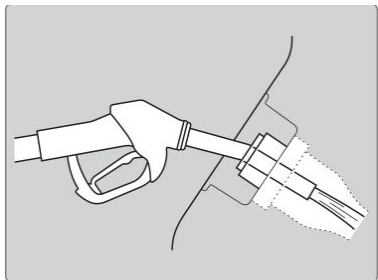


■ How to Refuel

Your fuel tank is not equipped with a fuel fill cap. You can insert the filler nozzle directly into the filler pipe. The tank seals itself again when you pull out the filler nozzle.

1. The fuel fill door is located at the left rear of the vehicle. Park next to the service pump that is most accessible, and turn off the engine.
2. Press the fuel fill door release button. The fuel fill door opens.
3. Place the end of the filler nozzle on the lower part of the filler opening, then insert it slowly and fully. Make sure that the end of the filler nozzle goes down along with the filler pipe.
4. After filling, wait about 5 seconds before removing the filler nozzle. Close the fuel fill door by hand.

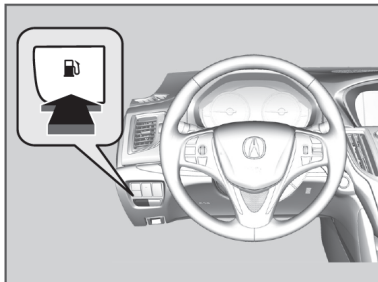

⚠ WARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.