


## Climate Control System

The automatic climate control system maintains the interior temperature you select. The system also selects the proper mix of heated or cooled air that raises or lowers the interior temperature to your preference as quickly as possible.

**Models with Auto Idle Stop** - During idle-stops, air-conditioning is suspended, and only the blower remains active.

If you do not want air-conditioning suspended, press the Auto Idle Stop OFF button to cancel idle-stop. (See Auto Idle Stop)


### ■ Front Operation - Climate Control System

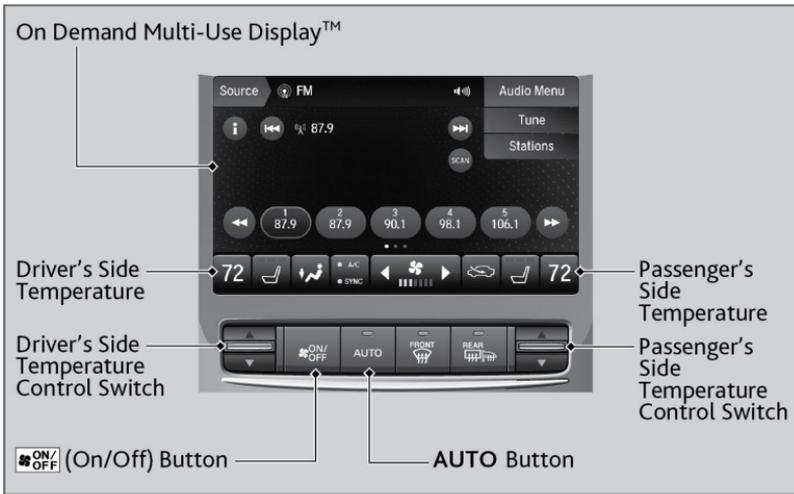

### ■ Heated Windshield Button\*1

Press the heated windshield button to deice the windshield at the wiper park area and along the driver side edge of the windshield when the power mode is in ON. The heated windshield will automatically switch off after 15 minutes.

When the power mode is set to ON and the outside temperature is below

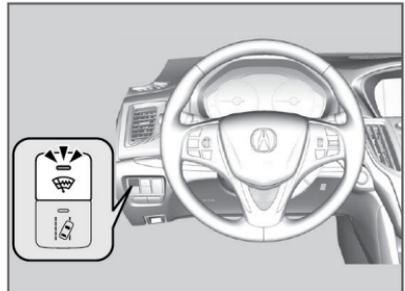


\*1 - If equipped


39°F (4°C), the heated windshield may automatically activate for up to 15 minutes.

### ■ Heated Steering Wheel\*<sup>1</sup>

The power mode must be in ON to use the heated steering wheel. Press the button on the left side of the steering wheel. The heated steering wheel is turned off every time you start the engine, even if you turned it on the last time you drove the vehicle.

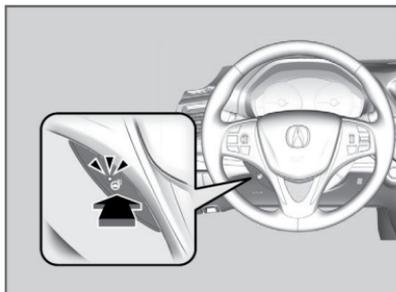

### Front Seat Heaters and Ventilation\*<sup>1</sup>

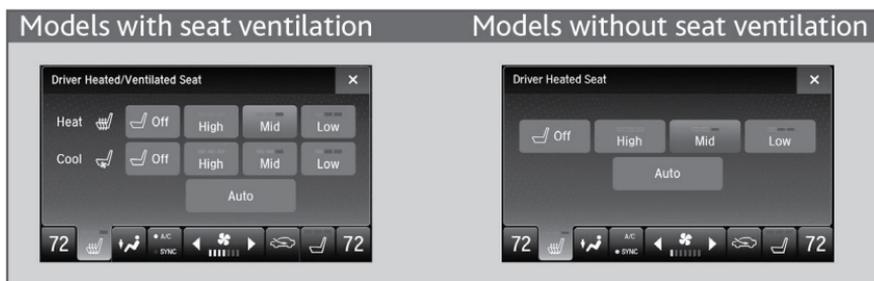

1. Select the seat icon.
2. Change the setting with one of the following:
  - The Low icon - The LO setting (one indicator on)
  - The Mid icon - The MID setting (two indicators on)
  - The High icon - The HI setting (three indicators on)
  - Auto - The system automatically selects the setting most suitable to the ambient environment.
  - Off - Turn off the system.

When the power mode is turned on after it is turned off, the previous setting of front seat heaters and ventilators\*<sup>1</sup> are maintained.

#### **⚠ WARNING**

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.


\*<sup>1</sup> - If equipped

### Rear Seat Heaters\*1

The power mode must be in ON to use the seat heaters. There is no heater in the rear center seating position.

Press the seat heater button:

- Once - The HI setting (three indicators on)
- Twice - The MID setting (two indicators on)
- Three times - The LO setting (one indicator on)
- Four times - The OFF setting (no indicators on)

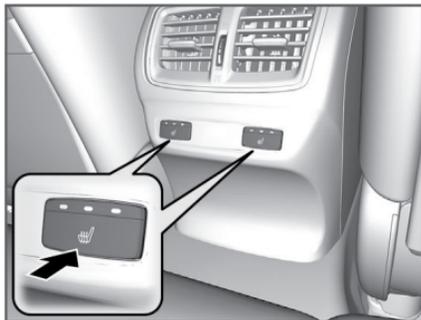

#### **⚠ WARNING**

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.

*\*1 - If equipped*