


## Siri Eyes Free™

You can talk to Siri using the Talk button on the steering wheel when your compatible iPhone® is paired to Bluetooth® HandsFreeLink®.

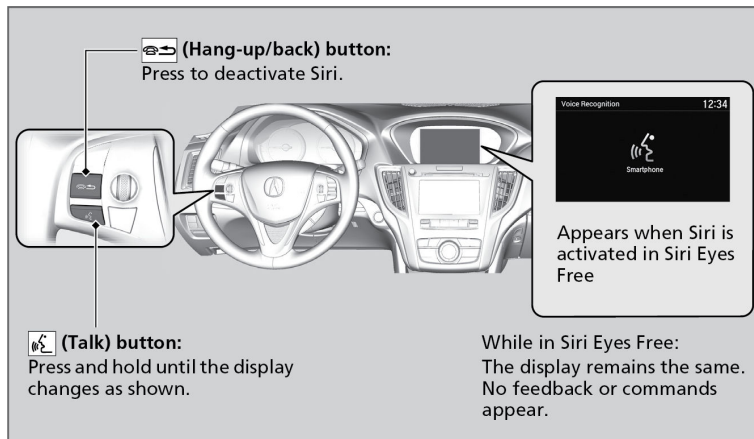

**Talk button:** Press and hold to activate Siri Eyes Free™ mode. The Smartphone screen appears. Say your command after you hear the Siri tone. If you only press and release the Talk button, the standard voice recognition system is activated.

**Back button:** Exit Siri Eyes Free™ mode, or cancel a command.