


Driver Information Interface

The driver information interface shows the odometer, trip meter, outside temperature indicator, and other gauges. It also displays important messages such as warnings and other helpful information.


Switching the Display

Roll the right selector wheel to change the display.

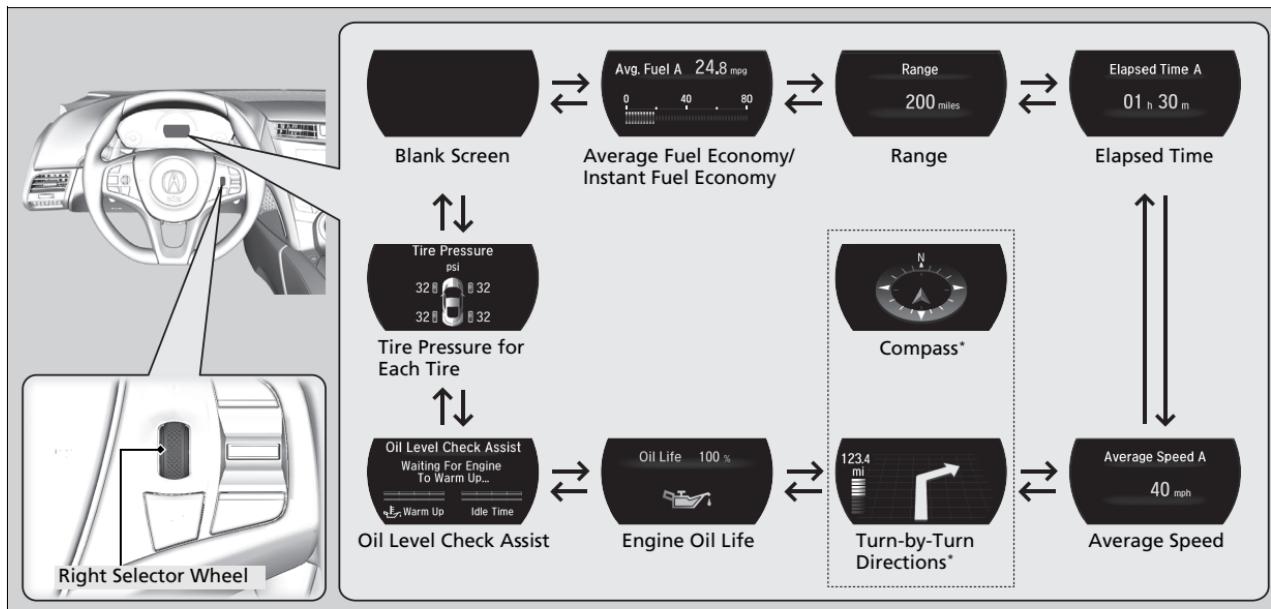

* Not available on all models

Press the **TRIP** button to change the display.

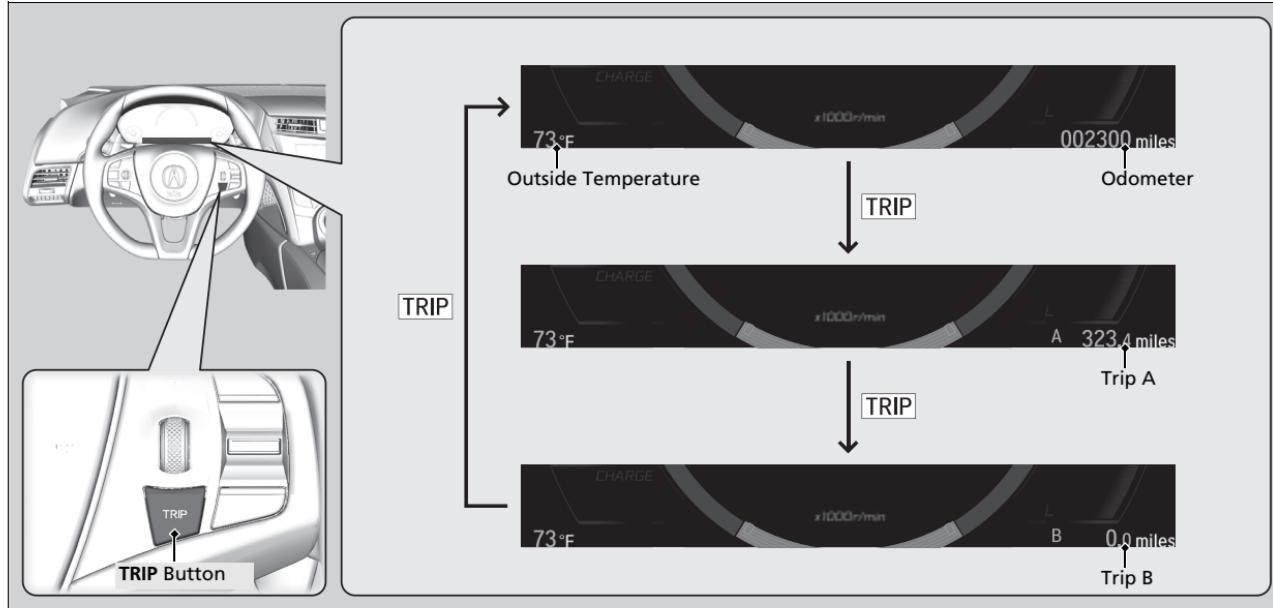

Instrument Panel

Continued

■ Odometer

Shows the total number of miles or kilometers that your vehicle has accumulated.

■ Trip Meter

Shows the total number of miles or kilometers driven since the last reset. Meters A and B can be used to measure two separate trips.

■ Resetting a trip meter

To reset a trip meter, display it, then press and hold the **TRIP** button. The trip meter is reset to **0.0**.

When a trip meter is reset, the average fuel economy, the elapsed time, and the average speed are also reset.

■ Outside Temperature

Shows the outside temperature in Fahrenheit (U.S.) or Celsius (Canada).

■ Adjusting the outside temperature display

Adjust the temperature reading up to $\pm 5^{\circ}\text{F}$ or $\pm 3^{\circ}\text{C}$ if the temperature reading seems incorrect.

■ Trip Meter

Switch between trip meter A and trip meter B by pressing the **TRIP** button.

■ Outside Temperature

The temperature sensor is in the front bumper. Road heat and exhaust from another vehicle can affect the temperature reading when your vehicle speed is less than 19 mph (30 km/h).

It may take several minutes for the display to be updated after the temperature reading has stabilized.

Use the audio system's customized features to correct the temperature.

☒ **Customized Features** P. 248

Average Fuel Economy

Shows the estimated average fuel economy of each trip meter in mpg or l/100 km. The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.

Instant Fuel Economy

Shows the instant fuel economy as a bar graph in mpg or l/100 km.

Range

Shows the estimated distance you can travel on the remaining power and fuel. This distance is estimated from the fuel economy of your previous trips.

Elapsed Time

Shows the time elapsed since Trip A or Trip B was reset.

Average Speed

Shows the average speed in mph or km/h since Trip A or Trip B was reset.

Average Fuel Economy

You can change when to reset the average fuel economy.

⇨ **Customized Features** P. 248

Range

The displayed range may change even when the vehicle is stationary.

Elapsed Time

You can change when to reset the elapsed time.

⇨ **Customized Features** P. 248

Average Speed

You can change when to reset the average speed.

⇨ **Customized Features** P. 248

■ Navigation*

■ Compass

Shows the compass screen.

■ Turn-by-Turn Directions

When driving guidance is provided by the navigation system or Android Auto, turn-by-turn directions to your destination appear.

☒ [Refer to the Navigation System Manual](#)

☒ [Android Auto™ P. 223](#)

■ Engine Oil Life

Shows the remaining oil life and Maintenance Minder™.

☒ [Maintenance Minder™ P. 383](#)

■ Oil Level Check Assist

Shows the engine oil level check assist display.

☒ [Oil Check P. 395](#)

■ Tire Pressure Monitor

Shows each tire's pressure.

☒ [Tire Pressure Monitoring System \(TPMS\) P. 356](#)

■ Navigation*

You can select whether to have the turn-by-turn display come on or not during the route guidance.

☒ [Customized Features P. 248](#)