


Multi-Information Display

The multi-information display shows the odometer, trip meter, outside temperature indicator, and other gauges.

It also displays important messages such as warnings and other helpful information.

■ Sub Display

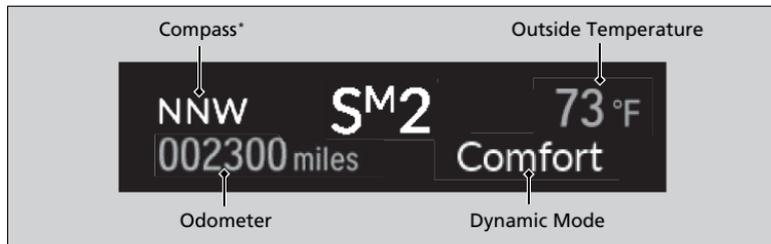

■ Odometer

Shows the total number of miles or kilometers that your vehicle has accumulated.

■ Outside Temperature

Shows the outside temperature in Fahrenheit (U.S.) or Celsius (Canada).

■ Adjusting the outside temperature display

Adjust the temperature reading by up to $\pm 5^{\circ}\text{F}$ or $\pm 3^{\circ}\text{C}$ if the temperature reading seems incorrect.

Use the customized features in the audio/information screen to correct the temperature.

* Not available on all models

⌘ Outside Temperature

The temperature sensor is in the front bumper. Road heat and exhaust from another vehicle can affect the temperature reading when your vehicle speed is less than 19 mph (30 km/h).

It may take several minutes for the display to be updated after the temperature reading has stabilized.


■ Compass*

Shows the current traveling direction of the vehicle.

■ Dynamic Mode

Shows the current dynamic mode.

■ Speed Limit Information*

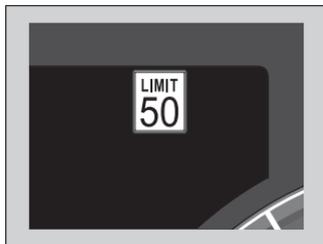

Shows the current speed limit based on information compiled through the navigation system.

☒ Speed Limit Information*

The speed limit displayed on the screen may differ to the actual speed limit.
The speed limit for some roads is not displayed.


* Not available on all models

Switching the Display

Roll the right selector wheel to view different types of content.

Switching the Display


If a warning initially appears, you can - after reading it - press the right selector wheel to proceed immediately to the content or to any other warning(s).

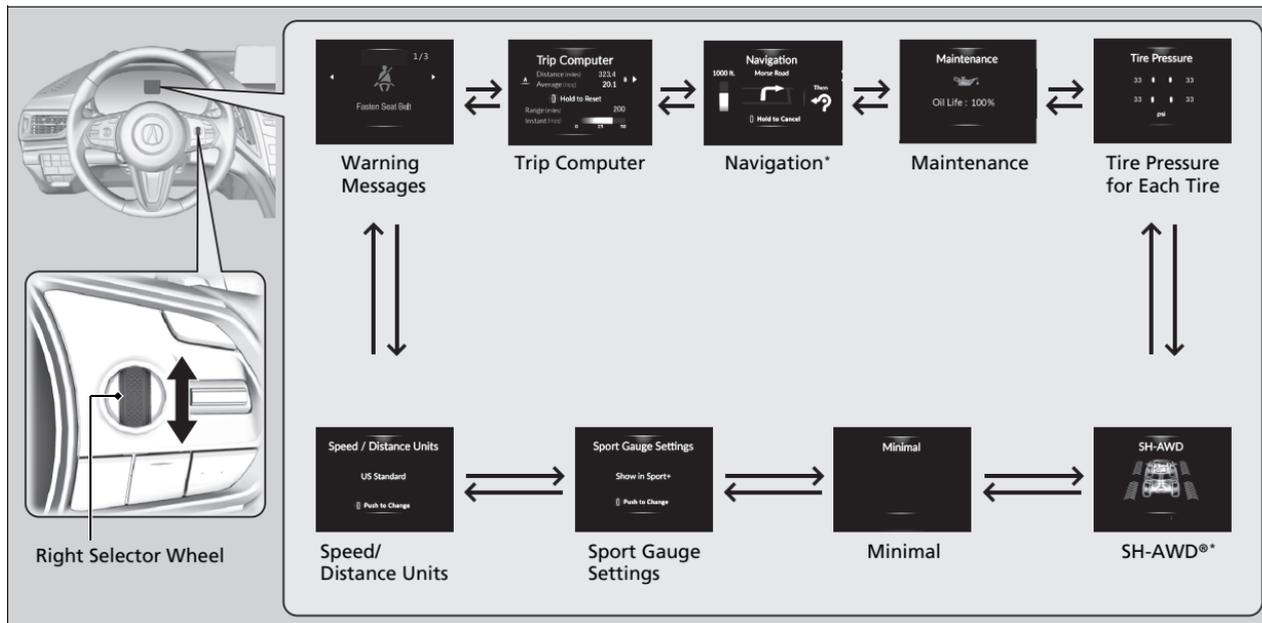

* Not available on all models

■ Trip Computer

Move the right selector wheel to the right or left to switch between trip computer A and trip computer B.

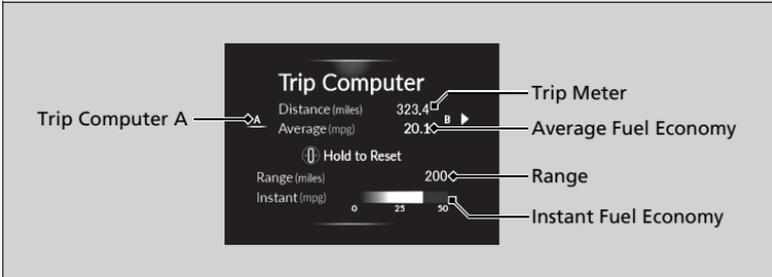

■ Trip meter

Shows the total number of miles or kilometers driven since the last reset. Meters A and B can be used to measure two separate trips.

Resetting a trip meter

To reset the trip meter, display it, press and hold the right selector wheel.

- The trip meter is reset to **0.0**.

■ **Average fuel economy (Avg. Fuel)**

Shows the estimated average fuel economy of each trip meter in mpg or l/100 km. The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.

■ **Instant fuel economy**

Shows the instant fuel economy as a bar graph in mpg or l/100 km.

■ **Range**

Shows the estimated distance you can travel on the remaining fuel. This estimated distance is based on the vehicle's current fuel economy.


⊠ Average fuel economy (Avg. Fuel)

You can change when the average fuel economy is reset.

Navigation*



Turn-By-Turn Driving Directions

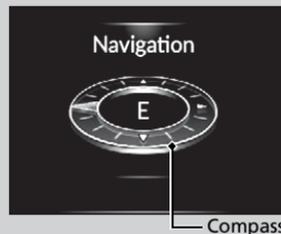

Display Audio shows you turn-by-turn directions to your destination.

Models with navigation system

When the navigation system is not providing driving guidance, an image of a compass appears in the multi-information display.

Navigation*

You can cancel the driving guidance by pressing and holding the right selector wheel.

A confirmation screen appears when Apple CarPlay navigation route is active.


You can select whether to have the turn-by-turn display come on or not during the route guidance.

Models without navigation system

Turn-by-turn directions will be shown on the multi-information display only when your android phone is connected to Android Auto or your iPhone is connected to Apple CarPlay.

* Not available on all models


Warning

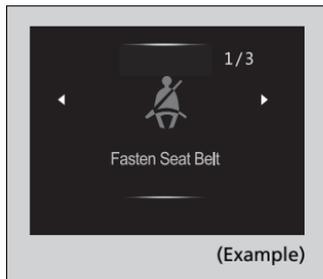

Warning

If there are multiple warnings, you can move the right selector wheel to the right or left to see other warnings.


Maintenance

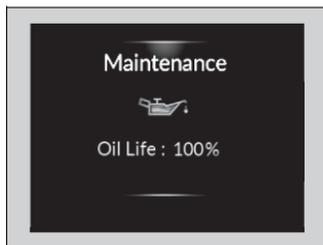

Oil Life


Shows the remaining oil life and Maintenance Minder™.

Tire Pressure Monitor

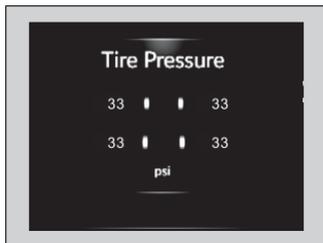

Shows each tire's pressure.

Speed/Distance Units

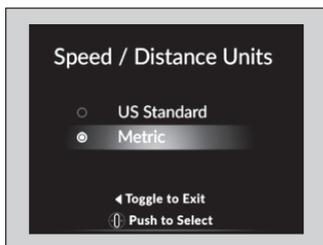

Enables you to show another unit on the multi-information display, head-up display* and audio/information screen and set the displayed measurements to read in either miles and km, mph and km/h.

Press the right selector wheel when you select the **Speed/Distance Units** on the multi-information display. Roll the right selector wheel to select the unit and press it. After this, a confirmation screen will appear for a few seconds.


☒ Tire Pressure Monitor

The following colors indicate the state of tire pressure:

- Green: Within tire pressure regulation.
- Amber: Above or Below tire pressure regulation.
- Gray: There is a problem with the system.


* Not available on all models

■ Sport Gauge Settings

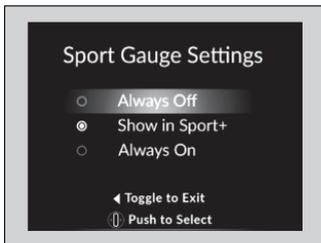

Press the right selector wheel when you select the **Sport Gauge Settings** on the multi-information display.

Roll the right selector wheel to select the setting and press it.

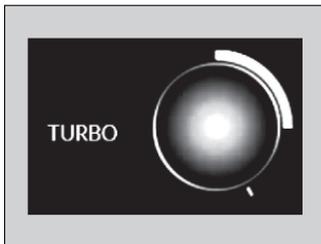

■ Turbo Meter

When the turbo is producing boost, this meter indicates boost pressure is building.