
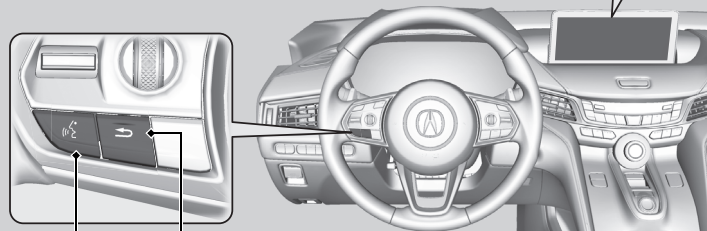



Siri Eyes Free


You can talk to Siri using to press and hold the  (Talk) button on the steering wheel when your iPhone is paired to the **Bluetooth**® HandsFreeLink® (HFL) system.

■ Using Siri Eyes Free

While in Siri Eyes Free:
The display remains the same.
No feedback or commands appear.




 (Back) Button
Press to deactivate Siri.

 (Talk) Button
Press and hold until the display changes as shown.
Press again to deactivate Siri.

▶▶ Siri Eyes Free


Siri is a trademark of Apple Inc.

Check Apple Inc. website for features available for Siri.

While driving we recommend only using Siri through the  button on the steering wheel (Siri Eyes Free).

▶▶ Using Siri Eyes Free

Some commands work only on specific phone features or apps.

Press the  (back) button on the true touchpad to deactivate Siri.