 


To Set Up a Text Message Notice Option

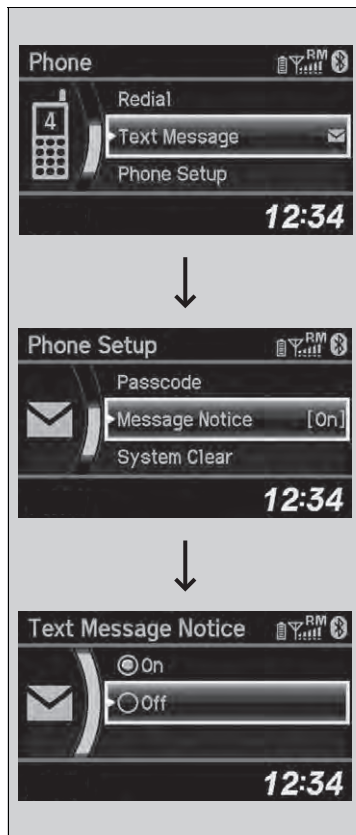

1. Press the **PHONE** button or the button.
2. Rotate to select **Phone Setup**, then press .

3. Rotate to select **Message Notice**, then press .

4. Rotate to select a mode you want, then press .

To Set Up a Text Message Notice Option

On: A pop-up notification comes on every time you receive a new text message.

Off: The message you receive is stored in the system without notification.

Receiving a Text Message

HFL can display newly received text messages as well as 20 of the most recently received messages on a compatible linked cell phone. Each received message can be read aloud and replied to using a fixed common phrase.



1. A pop-up appears and notifies you of a new text message.
2. Rotate to select **Yes** to listen to the message, then press .
- ▶ The text message is displayed. The system automatically starts reading out the message.
3. To discontinue the message read-out, press the **BACK** button.

Receiving a Text Message

The system does not display any received messages while you are driving. You can only hear them read aloud.

With some phones, you may be able to display up to 20 most recent text messages.

 
Only the first three lines of the received message are displayed with this option.

Displaying an entire message P. 373



State or local laws may limit your use of the HFL text message feature. Only use the text message feature when conditions allow you to do so safely.

Continued

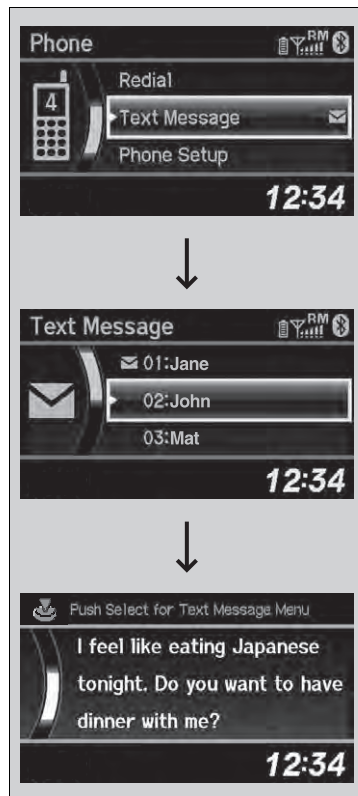
■ Displaying Messages



1. Press the **PHONE** button or the  button.
2. Rotate  to select **Text Message**, then press .

3. Rotate  to select a message, then press .
 - The text message is displayed. The system automatically starts reading the message aloud.

 
►► Displaying Messages

The  icon appears next to an unread message.







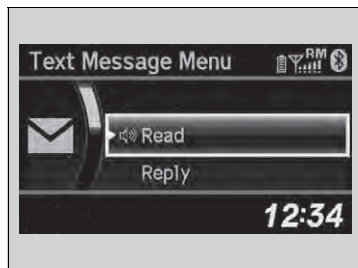

Only the first three lines of the received message are displayed with this option.

► **Displaying an entire message** P. 373

If you delete a message on the phone, the message is also deleted in the system. If you send a message from the system, the message goes to your phone's outbox.



■ Using the stop reading or read option

1. Press the **PHONE** button or the  button.
2. Rotate  to select **Text Message**, then press .
3. Rotate  to select a message, then press .
 - ▶ The text message is displayed. The system automatically starts reading the message aloud.
4. Press  to enter the **Text Message Menu**.
5. Rotate  to select **Stop Reading** or **Read**, then press .

▣ Using the stop reading or read option

This option changes to:

- **Stop Reading** while the text message is read out. Select this option to discontinue the message read-out.
- **Read** when you go to the **Text Message** menu, or after you selected **Stop Reading**. Select this option to hear the system reading out the selected message.

Continued



■ Reply to a message

You can reply to a message using one of the six common phrases available in the system.

1. Press the **PHONE** button or the button.
2. Rotate to select **Text Message**, then press .
3. Rotate to select a message, then press .
 - The text message is displayed. The system automatically starts reading out the message.
4. Press to enter the **Text Message Menu**.
5. Rotate to select **Reply**, then press .
6. Rotate to select the reply message, then press .
7. The reply message you selected is displayed. Select **Yes** to send the message.

 
►► Reply to a message

 
The available fixed reply messages are as follows:

- **Talk to you later, I'm driving.**
- **I am on my way.**
- **I'm running late.**
- **OK**
- **Yes**
- **No**

You cannot add, edit, or delete reply messages.



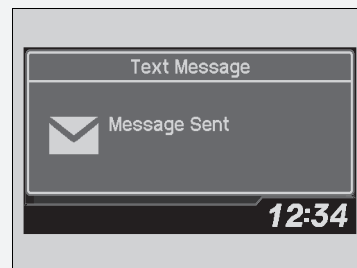

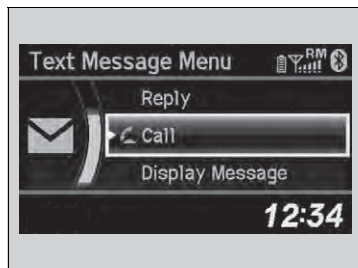



After you reply, the following is displayed:














■ Making a call to a sender

You can call the text message sender.

 
1. Press the **PHONE** button or the  button.
2. Rotate  to select to **Text Message**, then press .
3. Rotate  to select a message, then press .
 - ▶ The text message is displayed. The system automatically starts reading out the message.
4. Press  to enter the **Text Message Menu**.
5. Rotate  to select **Call**, then press .
 - ▶ HFL begins dialing.

■ Displaying an entire message

1. Press the **PHONE** button or the  button.
2. Rotate  to select to **Text Message**, then press .
3. Rotate  to select a message, then press .
 - ▶ The text message is displayed. The system automatically starts reading out the message.
4. Press  to enter the **Text Message Menu**.
5. Rotate  to select **Display Message**, then press .
6. Rotate  to scroll down and display the entire message.




To Set Up a Text/E-mail Message Option

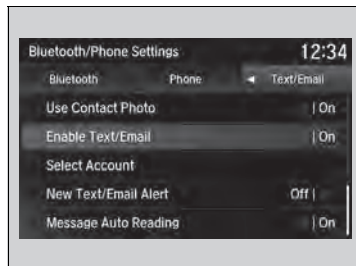

To turn on or off the text/e-mail message function

 1. Press the **SETTINGS** button.
2. Rotate to select **Bluetooth/Phone Settings**, then press .
3. Rotate to select **Enable Text/Email**.
4. Press to select **On** or **Off**.

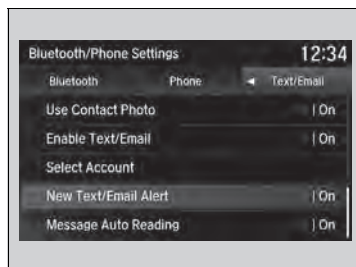

To turn on or off the text/e-mail message notice

1. Press the **SETTINGS** button.
2. Rotate to select **Bluetooth/Phone Settings**, then press .
3. Rotate to select **New Text/Email Alert**.
4. Press to select **On** or **Off**.

To Set Up a Text/E-mail Message Option

To use the text/e-mail message function, you need a *Bluetooth*-compatible cell phone. For a list of compatible phones, pairing procedures, and special feature capabilities:

- U.S.: Visit www.handsfreelink.com/Acura, or call 1-888-528-7876.
- Canada: For more information on smartphone compatibility, call 1-855-490-7351.

Some text/e-mail message features may not be available depending on a cellular phone.

 
To turn on or off the text/e-mail message notice

On: A pop-up notification comes on every time you receive a new text message.

Off: The message you receive is stored in the system without notification.

Receiving a Text/E-mail Message

HFL can display newly received text and e-mail messages as well as 20 of the most recently received messages on a linked cell phone. Each received message can be read aloud and replied to using a fixed common phrase.

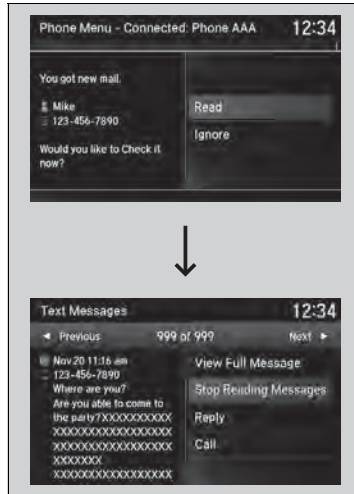

1. A pop-up appears and notifies you of a new text or e-mail message.
2. Rotate to select **Read** to listen to the message, then press .
 - The text or e-mail message is displayed. The system automatically starts reading out the message.
3. To discontinue the message read-out, press .

Receiving a Text/E-mail Message

The system does not display any received messages while you are driving. You can only hear them read aloud.

With some phones, you may be able to display up to 20 most recent text and e-mail messages.

State or local laws may limit your use of the HFL text/e-mail message feature. Only use the text/e-mail message feature when conditions allow you to do so safely.

 
When you receive a text or e-mail message for the first time since the phone is paired to HFL, you are asked to turn the **New Text/Email Alert** setting to **On**.

► **To turn on or off the text/e-mail message notice** P. 387

Continued

■ Selecting a Text/E-mail Message Account


If a paired phone has text or e-mail message accounts, you can select one of them to be active and receive notifications.

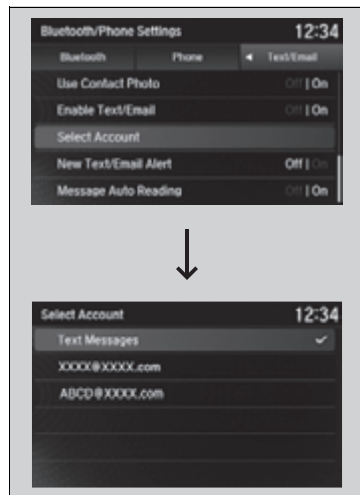

1. Press the **SETTINGS** button.
2. Rotate to select **Bluetooth/Phone Settings**, then press .
- Repeat the procedure to select **Select Account**.
3. Rotate to select **Text Messages** or an e-mail message account you want, then press .

►► Selecting a Text/E-mail Message Account

 You can also select an e-mail message account from the folder list screen or the message list screen. Rotate to select **Select Account**, then press .

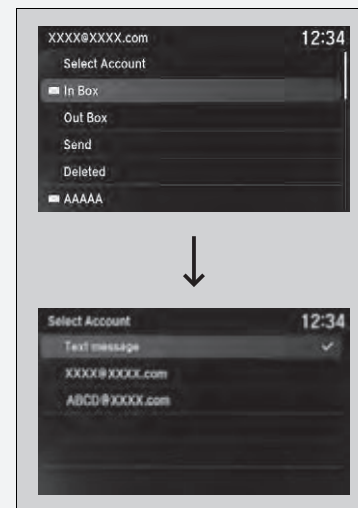

You can only receive notifications from one text or e-mail message account at a time.

Displaying Messages



■ Displaying text messages

1. Press the **PHONE** button.
2. Rotate to select **Text/Email**, then press .
- ▶ Select account if necessary.
3. Rotate to select a message, then press .
- ▶ The text message is displayed. The system automatically starts reading the message aloud.
4. Rotate to select **View Full Message**.
5. Press to display the full text of the message.

 
▶▶ Displaying Messages

The icon appears next to an unread message.

If you delete a message on the phone, the message will also be deleted from the system. If you send a message from the system, the message goes to your phone's outbox.

To see the previous or next message, move or on the text message screen.

Continued

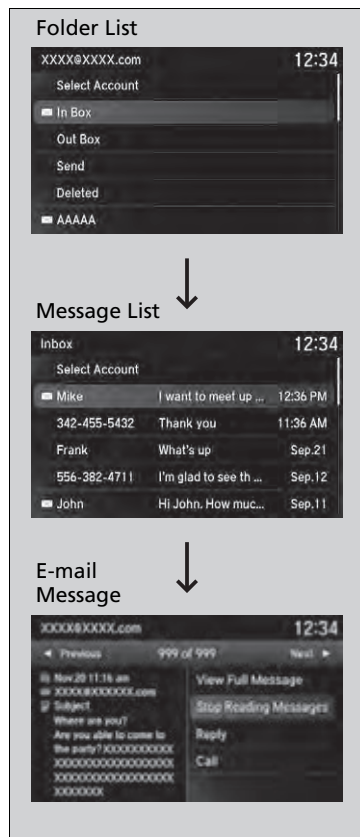


■ Displaying e-mail messages

1. Press the **PHONE** button.
2. Rotate to select **Text/Email**, then press .
3. Rotate to select a folder, then press .
4. Rotate to select a message, then press .
 - The e-mail message is displayed. The system automatically starts reading the message aloud.
5. Rotate to select **View Full Message**.
6. Press to display the full text of the message.

» Displaying e-mail messages

 Received text and e-mail messages may appear in the message list screen at the same time. In this case, text messages are titled **No Subject**.

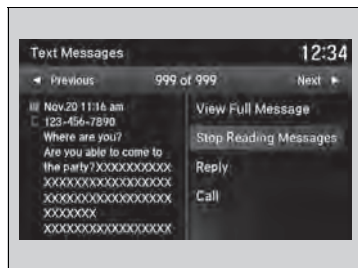

■ Read or stop reading a message

1. Go to the text or e-mail message screen.

▶ The system automatically starts reading the message aloud.

☛ **Displaying Messages** P. 411

2. Rotate to select **Stop Reading Messages**.

3. Press to stop reading.
Press again to start reading the message from the beginning.

■ Reply to a message

1. Go to the text or e-mail message screen.

▶ The system automatically starts reading the message aloud.

☛ **Displaying Messages** P. 411

2. Rotate to select **Reply**, then press .
3. Rotate to select the reply message, then press .

▶ **Message sent** appears on the screen when the reply message was successfully sent.

☛ Reply to a message

 
The available fixed reply messages are as follows:

- **Talk to you later, I'm driving.**
- **I'm on my way.**
- **I'm running late.**
- **OK**
- **Yes**
- **No**



You cannot add, edit, or delete reply messages.

Only certain phones receive and send messages when paired and connected. For a list of compatible phones:

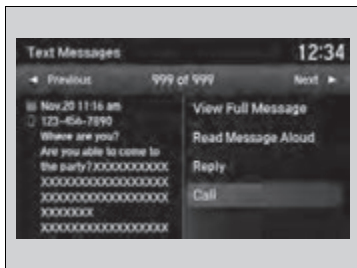- U.S.: Visit www.handsfreelink.com/Acura, or call 1-888-528-7876.
- Canada: For more information on smartphone compatibility, call 1-855-490-7351.



■ Making a call to a sender

1. Go to the text message screen.
 - The system automatically starts reading the message aloud.
2. Rotate  to select **Call**, then press .

📄 **Displaying text messages** P. 411