Customizing Settings Using the MID

Six groups of settings can be programmed using the MID*: Adaptive Cruise Control (ACC) Setup (if equipped), Meter Setup, Position Setup, Keyless Access Setup (if equipped), Lighting Setup, and Door/Window Setup.

Modifying the Auto Door Unlock Setting

As the default setting, only the driver's door unlocks when you shift to Park. Follow the steps below to set all doors to unlock when you shift to Park:

Press the Info button to toggle to the "Keyless Memory Settings" display, then **press** SEL/RESET to activate the menu.

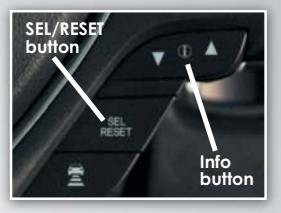

1. **Select** "CHG SETTING."

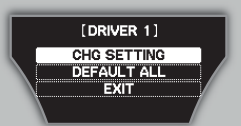

2. **Select** "DOOR/WINDOW SETUP."

3. **Select** "AUTO DOOR UNLOCK."

4. **Select** "SHIFT TO P."

5. **Select** "ALL DOORS."

6. Once the setting has been saved, **select** "EXIT."

** See Customized Settings in your Owner's Manual for other programmable settings.*

KEYLESS MEMORY SETTINGS

Each remote (labeled 1 or 2 on the back) activates its own set of programmable audio, climate, driving position memory, and customized settings (MID).

Remote Verification

1. Verify that you are using the correct remote by turning the vehicle on.

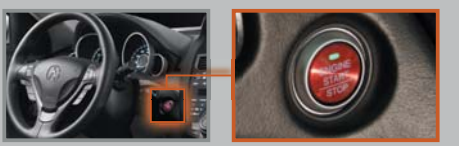

2. Check the MID:
   - If you have the correct remote, the driver ID that first appears on the MID will match the ID number on the back of your remote. **Go** to step 3.

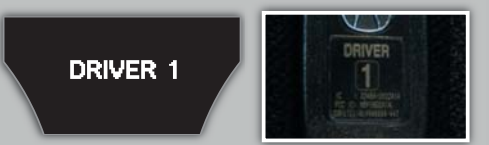

   - If the numbers do not match, follow these simple instructions:
     - **Turn** the vehicle off.

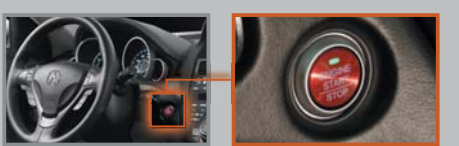

     - **Press** the unlock button on your remote.

     - **Turn** the vehicle on again and **check** the MID. The driver ID that first appears on the MID should now match the number on the back of your remote.

3. Once you have the correct remote, you can begin to program your Keyless Memory Settings.

Tech model shown

Customizing Settings

Some examples on how to program vehicle settings.

Storing Audio and Climate Control Settings

1. **Turn** the vehicle on.

2. **Store** your desired stations on the preset buttons and **adjust** your preferred audio sound levels (BASS, TREBLE, etc.).

3. **Set** your preferred climate control settings (fan speed, temperature, etc.).

4. Once you turn the car off, your preferred settings are saved and activated by the corresponding remote (1 or 2).

Driving Position Memory System (DPMS)

1. **Turn** the ignition switch to ON (II). **Shift** into Park (P).

2. **Adjust** your preferred seat, steering wheel, and outside mirror settings.

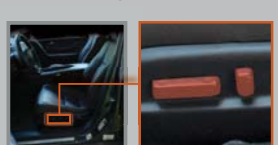

3. **Press** the SET button. You will hear a beep.

4. **Press** the memory button corresponding to the remote (1 or 2). You will hear two beeps.

Note: A stored memory position is linked to the corresponding keyless remote (1 or 2). Each item begins to adjust when you unlock the driver's door with the remote and enter the vehicle.

** See Customized Settings in your Owner's Manual for other programmable settings.*