KEYLESS ACCESS SYSTEM (Tech/Advance Package)

Allows you to operate certain functions of your vehicle by simply having the remote within operating range.

Unlocking the Doors

Grab either one of the front door handles.

Locking the Doors

Press the door lock button on either front door handle.

Opening the Tailgate

Press the tailgate release switch.

Engine Start/Stop Button

◆ Accessory Mode
Use audio, power sockets, power windows, etc. without turning the engine on

Press the ENGINE START/STOP button once.

◆ Starting the engine

Press and hold the brake pedal then **press** the ENGINE START/STOP button.

◆ Turning the engine off

Shift to Park then **press** the ENGINE START/STOP button.

MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.
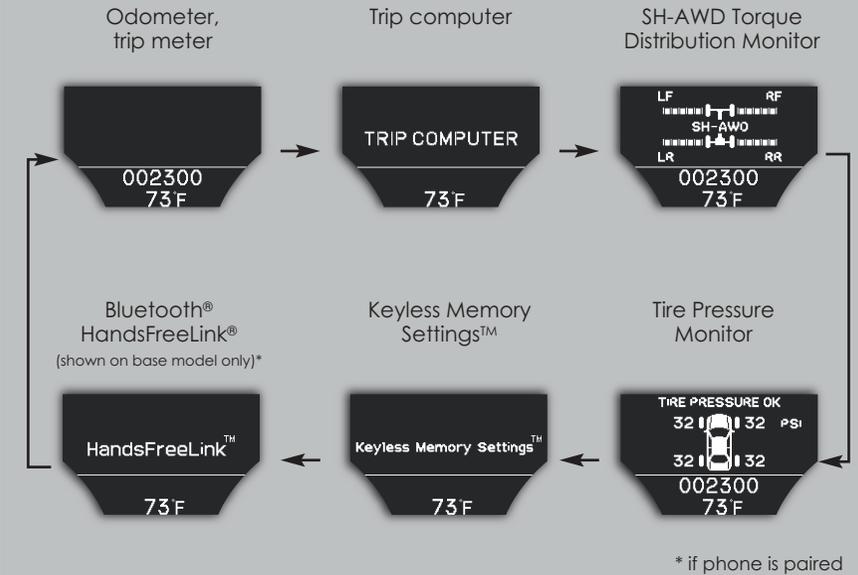
Accessing the MID

When you start the engine, the MID shows the last active display from the previous drive cycle.
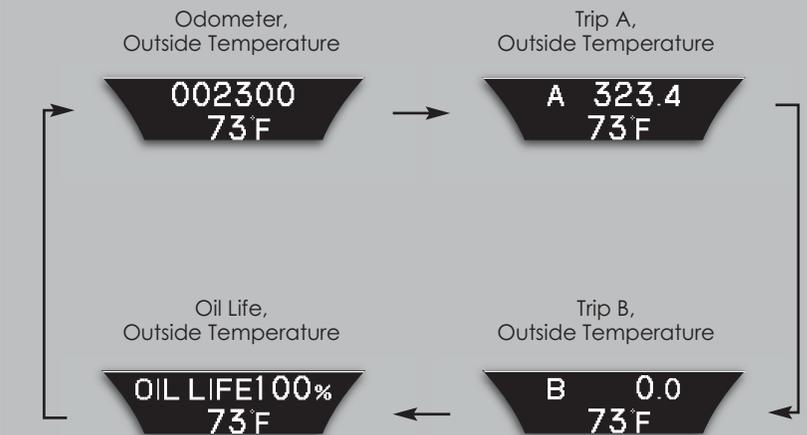

To toggle between the different displays, **press** either Info button (▲/▼) for the main displays and **press** the SEL/RESET button for the sub-displays.

SEL/RESET button

INFO button

Main Displays

Odometer, trip meter	Trip computer	SH-AWD Torque Distribution Monitor

Bluetooth® HandsFreeLink® (shown on base model only)*	Keyless Memory Settings™	Tire Pressure Monitor

* if phone is paired

Lower Displays

Odometer, Outside Temperature	Trip A, Outside Temperature

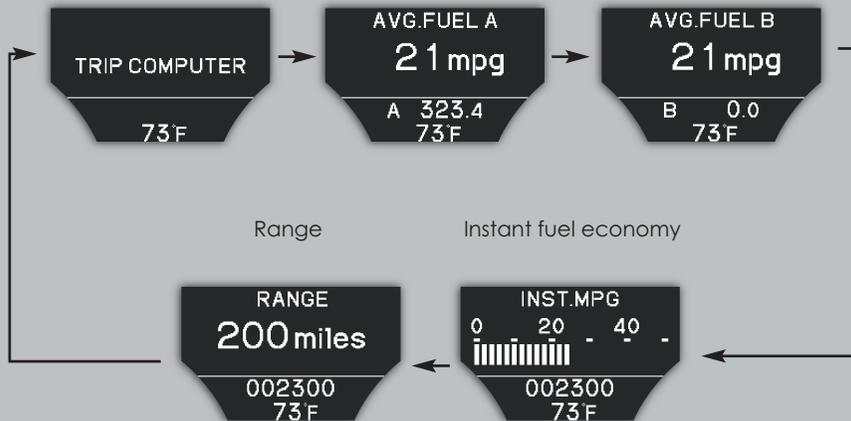| Oil Life, Outside Temperature	Trip B, Outside Temperature

Trip Computer

While on the Trip Computer display, **press** the SEL/RESET button to access trip information. **Press** either Info (▲/▼) button to toggle through the various screens, or the SEL/RESET button for sub-displays.

SEL/RESET
button

SEL
RESET

INFO
button

Trip computer	Average fuel economy A*	Average fuel economy B*

TRIP COMPUTER
73°F

AVG.FUEL A
21 mpg
A   323.4
73°F

AVG.FUEL B
21 mpg
B   0.0
73°F

Range	Instant fuel economy

RANGE
200 miles
002300
73°F

INST.MPG
0   20   40
002300
73°F

sub-displays available

Tire Pressure Monitoring System

Alerts you when one or more of your tires has significantly low pressure. **Toggle** to the tire pressure monitor display to view pressure readings on the MID.

◆ **How it Works**

If the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on along with a "CHECK TIRE PRESSURE" message on the MID showing which tire(s) have low pressure.

CHECK
TIRE
PRESSURE

◆ **What to Do**

Inflate the tire(s) to the recommended pressures listed on the label on the driver's doorjamb.